 


The following catalog  
has gaps in its page  
numbers, or doesn't  
have any numbers.  
We have chosen to  
leave the page  
numbering in the  
order that Acrobat  
assigns it.

**Onan**

# **PARTS CATALOG**

## **MCE Ensign Generating Set**

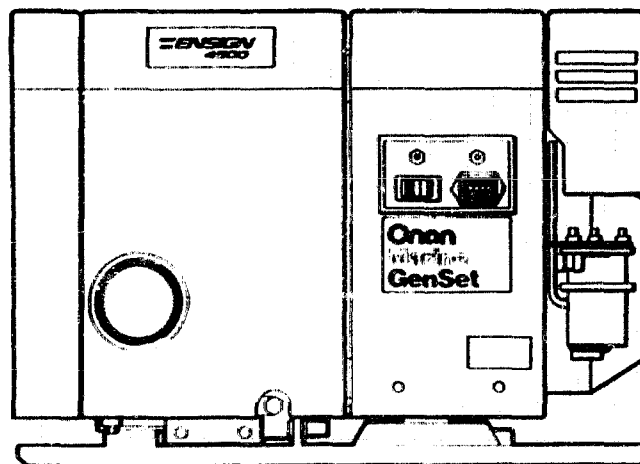

**Marine Electric Generating Set**

927-0225  
4-91 (Spec A)  
Replaces 2-90 (Spec A)  
Printed in U.S.A.

## SAFETY PRECAUTIONS

The following symbols are used in Onan manuals to alert users to the potentially dangerous conditions relating to maintenance of the equipment and replacement of parts. Please read and observe.

### **⚠ DANGER**

*This symbol warns of immediate hazards which will result in severe personal injury or death.*

### **⚠ WARNING**

*This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.*

### **⚠ CAUTION**

*This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.*

## MODEL IDENTIFICATION

To avoid errors or delay in filling your parts order, always give the MODEL, SPEC NO., and SERIAL NO. from the Onan nameplate.

For handy reference, insert your nameplate information in the spaces below:

MODEL AND SPEC NO. \_\_\_\_\_

SERIAL NO. \_\_\_\_\_

## PRODUCT SAFETY PRECAUTIONS

### **⚠ WARNING**

Contact with USED ENGINE OILS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking or changing engine oils take all necessary precautions not to ingest, breathe the fumes or contact the used oil.

### **⚠ WARNING**

Contact with ASBESTOS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When handling engine gaskets take all necessary precautions not to ingest, breathe or contact the dust from the gaskets! Use adequate ventilation and wear protective gloves, masks and clothing!

### **⚠ WARNING**

Contact with BENZINE and LEAD, found in gasoline, fuel additives and solvents has been identified by a United States federal agency and some USA agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking, draining or adding gasoline and fuel additives, or using solvents take all necessary precautions not to ingest, breathe the fumes, or contact the liquids. Use adequate ventilation and wear protective gloves, masks and clothing!

## Introduction

This catalog applies to the standard Marine Generator Sets as listed in the Generator Set Data Table. Parts are arranged in groups of related items and each illustrated part is identified by a reference number corresponding to the same reference number in the parts list. Unless otherwise mentioned in the description, parts are interchangeable between models. Parts illustrations are typical. Using the model and specification number from your generator set nameplate, select parts that apply to your set. Right and Left sides are determined by Facing the engine (front) of the set.

### Generator Set Data Table

MODEL AND SPECIFICATION	ELECTRICAL DATA						KEEL COOLING
	WATTS	VOLTS	HERTZ	WIRE	PHASE	FUEL	
4.5MCE-A/1A	4500	120	60	2	1	Gasoline	
4.5MCE-B/1A	4500	120/240	60	3	1	Gasoline	
4.5MCE-A/35887A	4500	120	60	2	1	Gasoline	X
4.5MCE-B/35887A	4500	120/240	60	3	1	Gasoline	X
5.0MCE-M/1A	5000	220	50	2	1	Gasoline	
5.0MCE-M/35887A	5000	220	50	2	1	Gasoline	X
6.5MCE-A/1A	6500	120	60	2	1	Gasoline	
6.5MCE-B/1A	6500	120/240	60	3	1	Gasoline	
6.5MCE-A/35887A	6500	120	60	2	1	Gasoline	X
6.5MCE-B/35887A	6500	120/240	60	3	1	Gasoline	X

\* - The diagonal line (/) in the model and specification number separates generator set characteristics from the specification number and letters. The specification number denotes customer requested options or deviations from a standard (1A, 1B, etc.) model. The specification letter advances (A, to B, to C, etc.) with major manufacturing changes.

#### NOTE:

Components Sold As An Assembly Will Be Assembled At The Factory.

 
# Index

- Adapter, Carburetor (Mach) 23
- Adapter, Filter - Oil 14
- Adapter, Generator (Mach) 37
- Adapter, Pipe 41
- Arm and Shaft - Governor 11
- Arrestor, Spark 23
- Arrestor, Tube - Breather 23
- Ball, Bearing 6,11
- Base, Oil 13
- Bearing, Needle - Upper and Lower 11
- Bearing, Rod - Connecting 8
- Bearing, Sleeve - Camshaft 5
- Belt, Pulley 31
- Block, Brush - Generator 43
- Block, Cylinder 5
- Block with Terminal 43
- Bolt, Place 5
- Box, Control 39,41
- Bracket, Pump - Water 31
- Bracket, Charger - Battery 19
- Bracket, Coil - Ignition 17
- Bracket, Control - 39,41
- Bracket, Diaphragm 23
- Bracket, Exchanger - Heat 29
- Bracket, Frame - Housing 49
- Bracket, Front - Housing 49
- Bracket, Governor 27
- Bracket, Inlet - Water 29
- Bracket, Isolation (DC) 43
- Bracket, Lift 5
- Bracket, Pump - Fuel 43
- Bracket, Side Panel 51
- Breaker and Terminal 41
- Breaker, Circuit 37,39
- Bridge, Rectifier 39
- Bushing 41,43
- Cable, Bond 37
- Camshaft 6
- Cap, Fill - Oil 13
- Cap, Radiator 27
- Carburetor 23
- Charger, Battery 19
- Clamp, Hose 5,13,23,27,29,31,35
- Clamp, Stator 43
- Clip, Cable 11
- Clip, "U" 23
- Clip, Retaining 23
- Cock, Drain 35
- Coil, Battery - Ignition 17
- Components, Carburetor 24
- Components, Pump - Water 32
- Components, Starter 15
- Condenser 17
- Control (AC) 39
- Control (DC) 41
- Control, Ignition 11
- Cover, Brush - Block 43
- Cover, Control (AC) & (DC) 51
- Cover, Hole - Fuel Pump 20
- Cover, Housing - Choke 23
- Cover, Return - Fuel 23
- Cover, Siphon 51
- Cover, Valve 5
- Crankshaft 8
- Cup, Governor 6
- Cup, Intake - Oil Pump 13
- Decal, Panel - Basic, Deluxe & Meter 44,45,46
- Diaphragm 23
- Diode and Lead 45
- Drain, Filter - Oil 14
- Edging 41
- Elbow, Drain 35
- Elbow, Flare - Inverted 20
- Elbow, Hose 13,27,29,35
- Elbow, Hose - 90° 5,31
- Elbow, Male - Inverted 41
- Elbow, Street - 90° Pipe 20
- Element, Thermostat 23
- Exchanger, Heat 29
- Filter, Oil 14
- Fitting 27
- Filter, Fuel 23
- Fitting, Elbow - Inverted Male 23
- Flywheel (Mach) 7
- Fuse, 10 Amp 41
- Gauge, Pressure - Oil 46
- Gauge, Temperature - Coolant 46
- Gasket, Adapter 23
- Gasket, Adapter - Oil Filter 14
- Gasket, Arrestor - Flame 23
- Gasket, Base - Oil 13
- Gasket, Carburetor 23
- Gasket, Cover - Valve 5
- Gasket, Exhaust 27
- Gasket, Gearcase 11
- Gasket, Guide - Intake Valve 5
- Gasket, Head 5
- Gasket, Housing - Thermostat 5
- Gasket, Manifold - Intake 23
- Gasket, Plate - Bearing 5
- Gasket, Resonator 23
- Gear, Camshaft 6
- Gear, Crankshaft 7
- Gearcase 11
- Generator 37
- Governor 6,11
- Grommet 43,49
- Guide, Valve - Intake and Exhaust 5
- Harness, Block - Brush 43
- Harness, Control (DC) 41
- Harness, Wiring - Remote Control Panel 44,45,46
- Head, Cylinder 5
- Holder, Fuse 41
- Hose 31
- Hose, Coolant 5,13,29,35
- Hose, Rubber - Preformed 5
- Hose, Vacuum 23
- Housing, Choke 23
- Housing, Connector 46
- Housing, Engine (Left Hand) 51
- Housing, Engine (Right Hand) 51
- Housing, Engine (Top) 51
- Housing, Frame Assembly 49
- Housing, Guard - Belt 51
- Housing, Machine - Stator 43
- Housing, Gen Set 50
- Housing, Thermostat 5
- Hub, Governor 6

## Index

- Index, Numerical 53,54,55,56
- Indicator, Level - Oil 13
- Insulator, Module - Ignition 11
- Insulator, Fuel Pump 37
- Insulator, Vibration 9
- Joint, Ball 11
- Keel, Cooling 34
- Key, Flywheel 7
- Key, Woodruff 6,7
- Kit, Accessory 51
- Kit, Bearing - Crankshaft 5
- Kit, Cup - Governor 6
- Kit, Gasket - Engine 5,52
- Kit, Gasket - Oil Pump 13,52
- Kit, Panel - Basic Remote Control 44
- Kit, Panel - Deluxe Remote Control 45
- Kit, Panel - Meter Remote Control 46
- Kit, Ring Set 8
- Labels, Miscellaneous Variety 51,52
- Label, Negative - Battery 37,52
- Label, Neutral 39,52
- Label, Warning - Shipping, Danger, No Stop, and Certification 51,52
- Lead, Start Solenoid 43
- Lead, Starter 43
- Lead, Tension - High 17
- Line, Fuel 43
- Line, Return - Fuel 23
- Link, Spring - Governor 11
- Linkage, Choke 23
- Lock, Stem - Valve 5
- Manifold, Exhaust (Mach) 27
- Manifold, Intake (Mach) 23
- Meter, Totalizing - Time 41,45,46
- Meter, Condition - Battery 45
- Meter, Voltage 46
- Neck, Filler 27
- Pan, Drip 9
- Panel, Remote 46
- Panel, Control - Basic 44
- Panel, Control - Deluxe 45
- PCB, Monitor - Engine 41
- Pencil, Zinc 29
- Pin, Contact 46
- Pin, Dowel 5
- Pin, Drive - Headed 5
- Pin, Governor 6
- Pin, Roll - Yoke Stop 11
- Piston and Pin 8
- Plate, Bearing - Rear 5
- Plate, Breaker - Circuit 39
- Plate, Resonator 23
- Plug, Expansion 5
- Plug, Pipe - Hex Head 5,41
- Plug, Spark 17
- Plug, Welsh 27
- Plunger, Valve - Bypass 13
- Pulley 31
- Pump, Fuel 43
- Pump, Coolant 13
- Pump, Fuel 20,43
- Pump, Oil 13
- Pump, Water 31
- Rectifier, Silicon 43
- Regulator 43
- Relay, Solenoid - Start 18,43
- Resonator 51
- Ring, Retaining 6,7,8,23,32
- Ring, O 13,32
- Rod, Connecting 8
- Rod, Control - Governor 11
- Rotocap, Spring - Exhaust Valve 5
- Rotor 37
- Rotor, Ignition 17
- Seal, Oil 5
- Seal, Oil - Crankshaft 11
- Seal, Oil - Governor Shaft 11
- Seal, Tube - Oil Fill 13
- Sealant, Thread 52
- Seat, Valve - Intake and Exhaust 5
- Sender, Pressure - Oil 46
- Sender, Temperature - Water 46
- Shaft with Lever 23
- Shim, Bearing - Thrust 5
- Silkscreen 41,51,52
- Spacer, Threaded 23
- Spring, Needle - Idle 11
- Spring, Retaining - Governor 11
- Spring, Valve 5
- Spring, Valve - Bypass 13
- Standoff, Insulator 39
- Starter 15,36
- Stator 43
- Stud 23
- Stud, Adjusting - Governor 11
- Switch, Exhaust Temperature - Hi 27
- Switch, Pressure - Low Oil 13,41
- Switch, Rocker 41,44,45,46
- Tap, Terminal 43
- Tappet, Valve 5
- Tee, Low Oil Pressure Switch 41
- Tee, Pipe - Special 41
- Thermostat, Bypass 5
- Tie, Cable 41
- Transformer, Regulator 39
- Tube, Breather 5,23
- Tube, Coolant 29,35
- Tube, Exchange - Heat 29
- Tube, Fill - Oil 13
- Tube, Housing - Choke 23
- Tube, Oil 5
- Valve, Bleeder 29
- Valve, Drain 13
- Valve, Exhaust and Intake 5
- Varnish, Insulating 52
- Yoke, Governor 11

# Cylinder Block

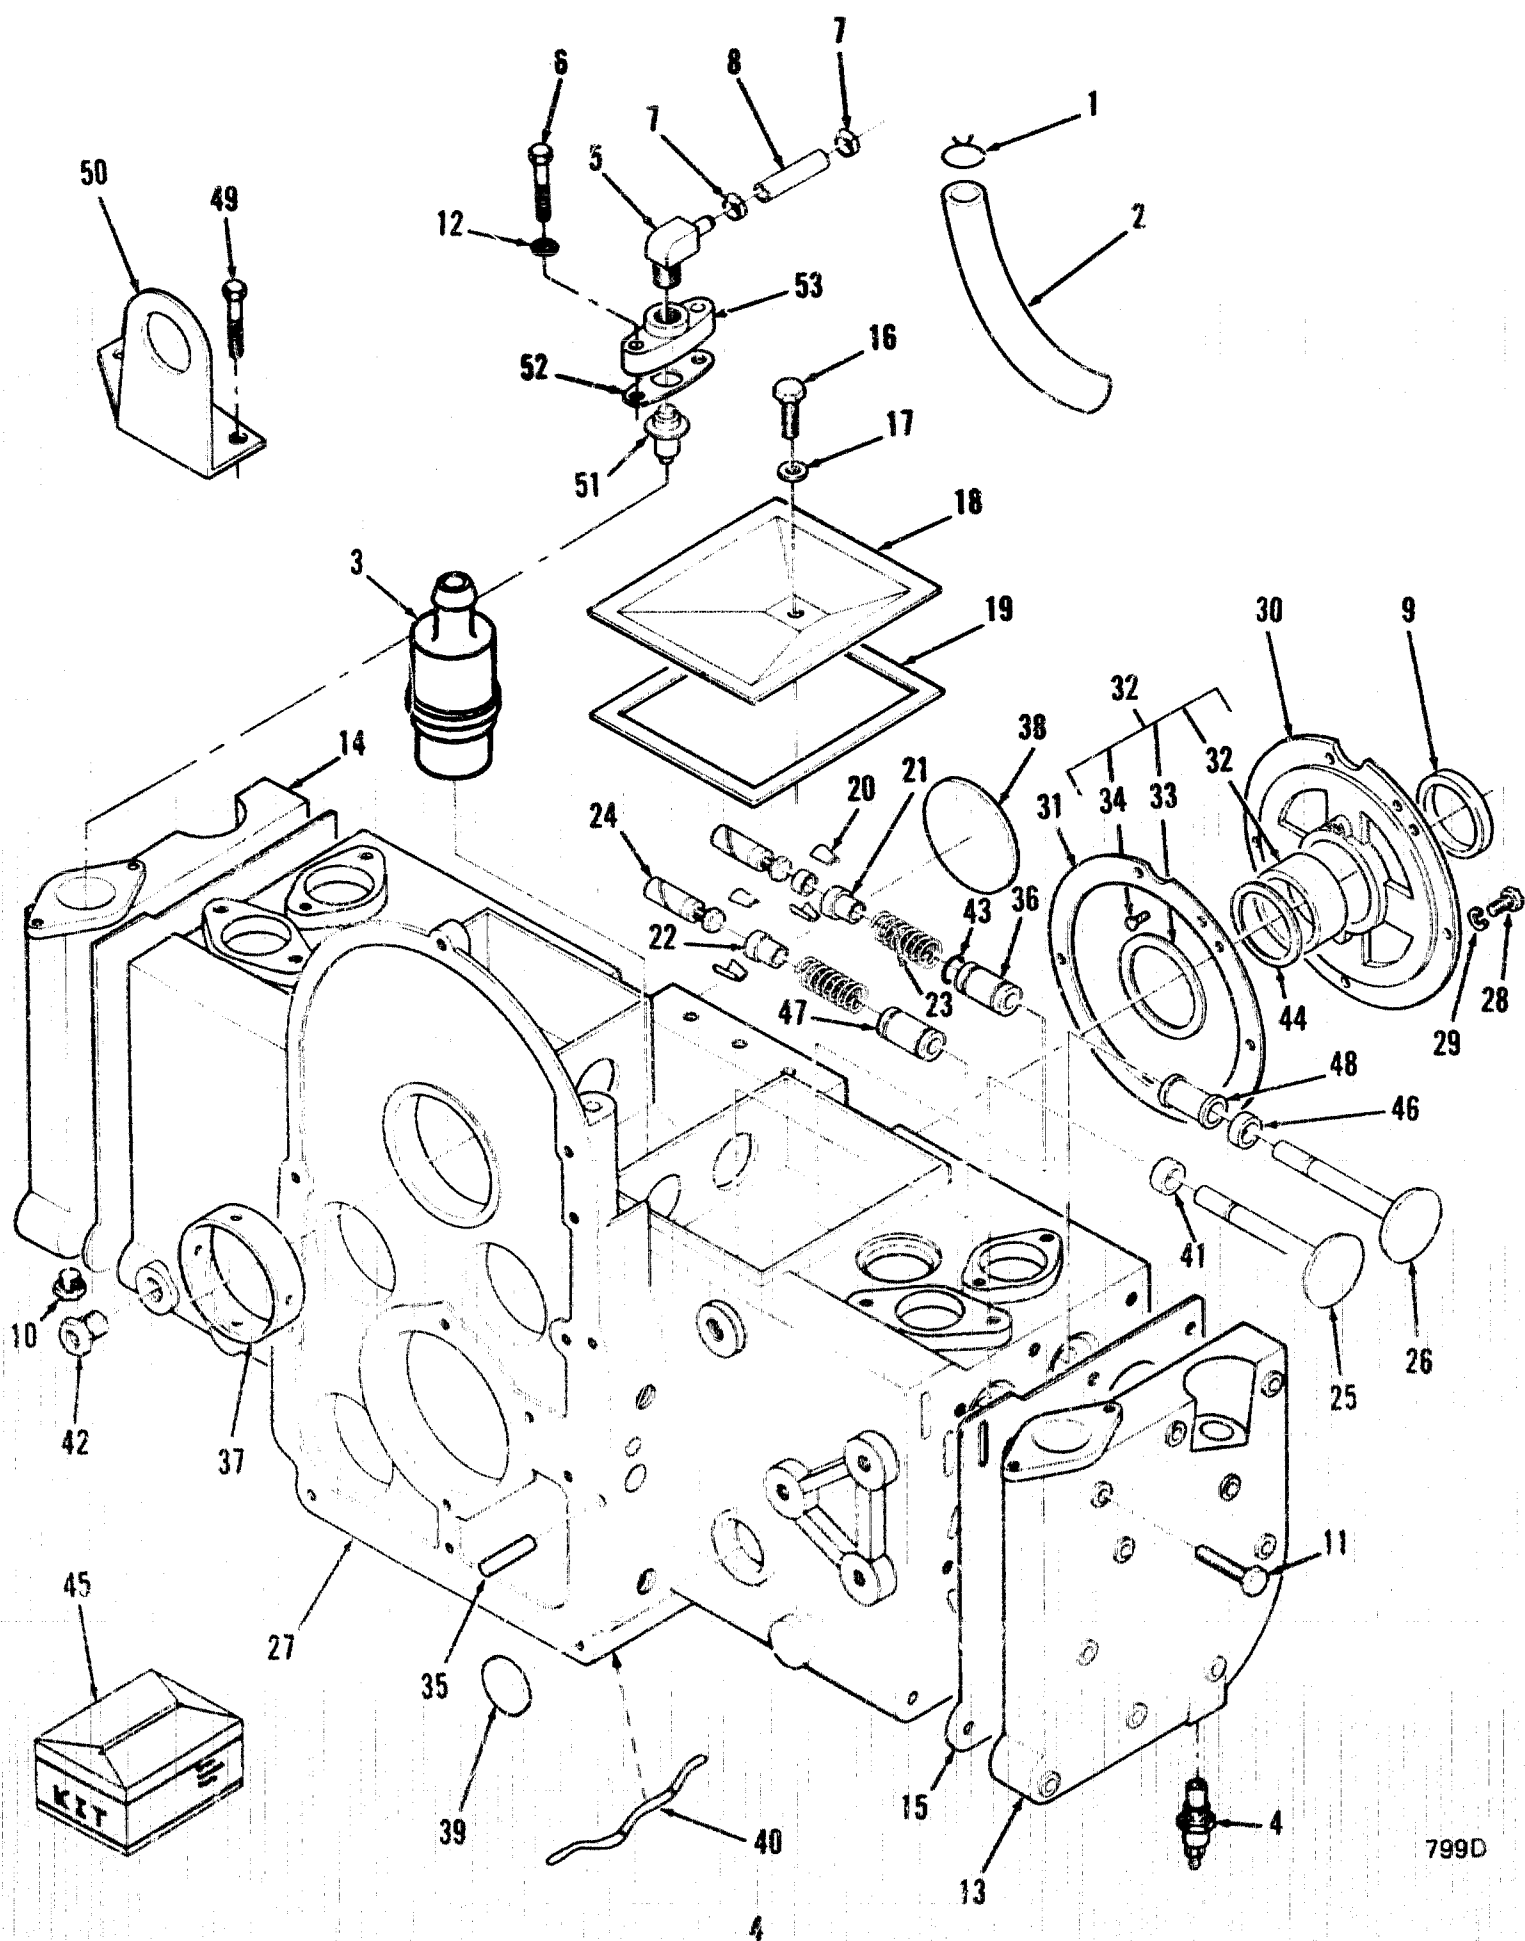


# Cylinder Block

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-0170	2	Clamp, Hose	31	101-0115	1	*Gasket, Plate - Bearing
2	503-0761	1	Hose, Rubber - Preformed	32			Bearing Kit, Crankshaft
3	123-1784	1	Tube, Breather				(Includes Thrust Washer)
4	309-0601	1	Thermostat, Open at 202°F.		101-0450	2	* Standard
5	502-0942	1	Elbow, Hose - 90° (5/8)		101-0450-02	2	.002" Undersize
6	800-0007	4	Screw, Cap - Hex Head (1/4-20 x 1")		101-0450-10	2	.010" Undersize
7	503-0977	2	Clamp, Hose		101-0450-20	2	.020" Undersize
8	503-1690-02	1	Hose, Coolant		101-0450-30	2	.030" Undersize
9	509-0041	1	Seal, Oil (In Gasket Kit 168-0149)	33	104-0575	2	*Washer, Thrust
10	502-0153	1	Plug, Pipe - Hex Head (Brass)	34	516-0072	2	*Pin, Drive - Headed (.190" Dia. x 11/32")
11	800-0509	18	Screw, Cap - Hex Head (Special)	35	516-0141	2	*Pin, Dowel (5/16" Dia. x 7/8")
12	850-0040	4	Washer, Lock (1/4")	36	110-1827	4	*Guide, Valve - Intake
13	110-3621	1	Head, Cylinder - Right Side	37	101-0367	2	**Bearing, Sleeve - Camshaft
14	110-3622	1	Head, Cylinder - Left Side	38	517-0048	1	*Plug, Expansion (1-5/8" Dia.)
15	110-3611	2	Gasket, Head	39	517-0011	8	*Plug, Expansion (1-1/4" Dia.)
16	800-0012	2	Screw, Cap - Hex Head (1/4-20 x 2-1/4")	40	120-0386	1	*Tube, Oil
17	526-0063	4	Washer, Flat - Copper (1/4)	41			Seat, Valve - Exhaust
18	110-0666	2	Cover, Valve		110-0872	2	* Standard
19	110-3606	2	Gasket, Cover - Valve		110-0872-02	2	.002" Oversize
20	110-0639	8	Lock, Stem - Valve		110-0872-05	2	.005" Oversize
21	110-0893	2	Washer, Retainer - Intake Valve Spring		110-0872-10	2	.010" Oversize
22	110-0904	2	Rotocap, Spring - Exhaust Valve		110-0872-25	2	.025" Oversize
23	110-0539	4	Spring, Valve	42	502-0028	1	Plug, Pipe - Hex Head (1/8)
24			Tappet, Valve	43	110-3136	2	*Gasket, Guide - Intake Valve
	115-0006	4	Standard	44	104-0776	1	Shim, Bearing - Thrust
	115-0006-02	4	.002" Oversize	45	168-0195	1	Kit, Gasket - Engine
	115-0006-05	4	.005" Oversize	46			Seat, Valve - Intake
25	110-0880	2	Valve, Exhaust (Chrome Cobalt Alloy)		110-1000	2	* Standard
26	110-1037	2	Valve, Intake (Steel)		110-1000-02	2	.002" Oversize
27	110-3627	1	Block, Cylinder (Includes Parts Marked *)		110-1000-05	2	.005" Oversize
28	800-0512	5	*Screw, Cap - Hex Head (Special)		110-1000-10	2	.010" Oversize
29	850-0045	5	*Washer, Lock - Spring (5/16")		110-1000-25	2	.025" Oversize
30	101-0390	1	*Plate, Bearing - Rear (Less Bearing)	47	110-0902	2	Guide, Valve - Exhaust
				48	110-3604	2	Seal, Oil - Valve Stem - Intake
				49	800-0028	2	Screw, Cap - Hex Head (5/16-18 x 1")
				50	403-2918	1	Bracket, Lift
				51			Thermostat, Bypass
					309-0130	2	Keel Cooled (140°)
					309-0289	2	Heat Exchanger Units (180°)
				52	309-0186	2	Gasket, Housing - Thermostat
				53	309-0185	2	Housing, Thermostat

\* - Parts Included in 110-3627 Cylinder Block  
 \*\* - Units with Hi-Lift Cam, Use 101-0405 Bearing(1)


 
# Governor and Camshaft

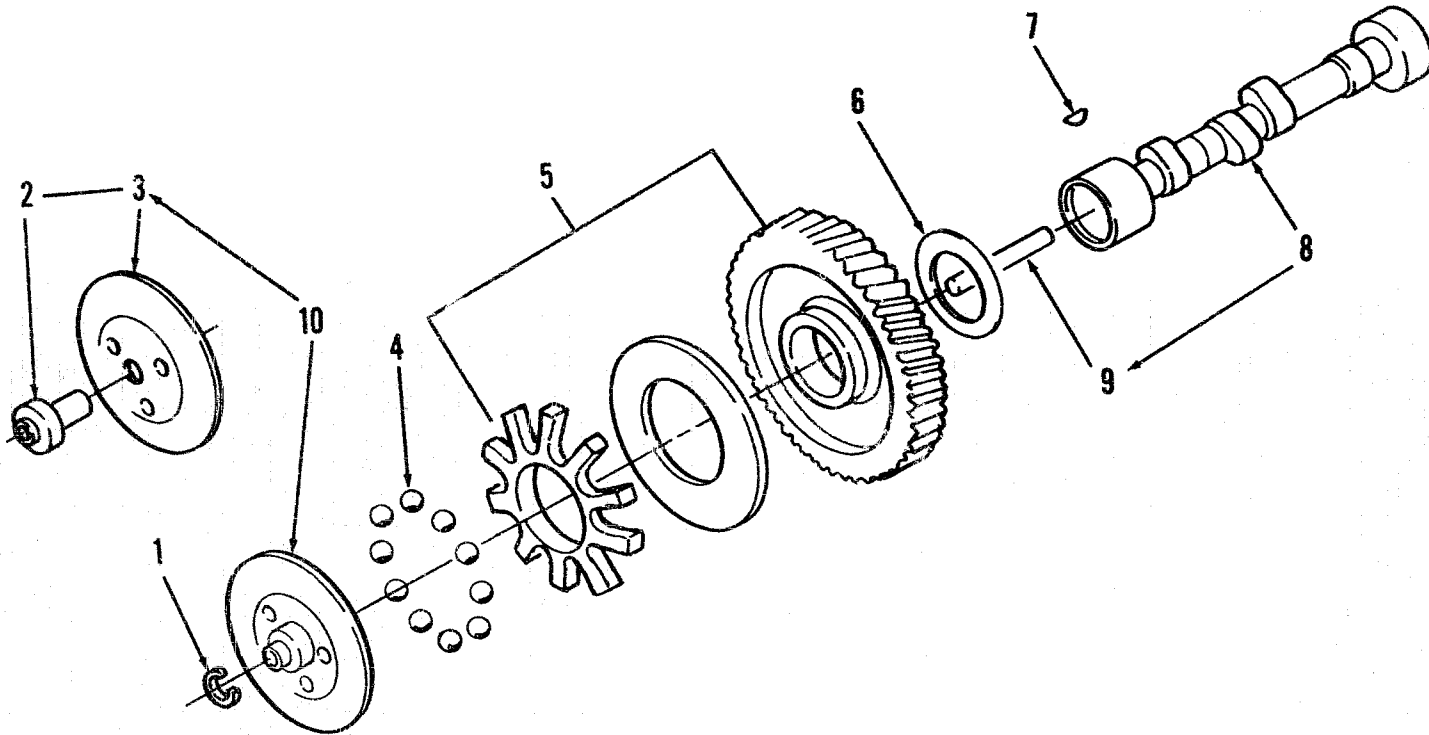


787A

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	150-0078	1	Ring, Retainer - Governor Pin
2	150-1519	1	*Hub, Governor
3	150-1520	1	*Cup, Governor
4	510-0015	10	Bearing, Ball
5	105-0332	1	Gear, Camshaft (Includes Spacer and Plate)
6	105-0541	1	Washer, Thrust

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
7	515-0001	1	Key, Woodruff (1/2" Dia. x 1/8" Thk)
8	105-0140	1	Camshaft (Includes Center Pin)
9	150-0075	1	Pin, Governor
10	150-1695	1	Kit, Cup - Governor (Includes Parts Marked *)

\* - Parts Included in 150-1695 Governor Cup Kit


# Crankshaft and Flywheel

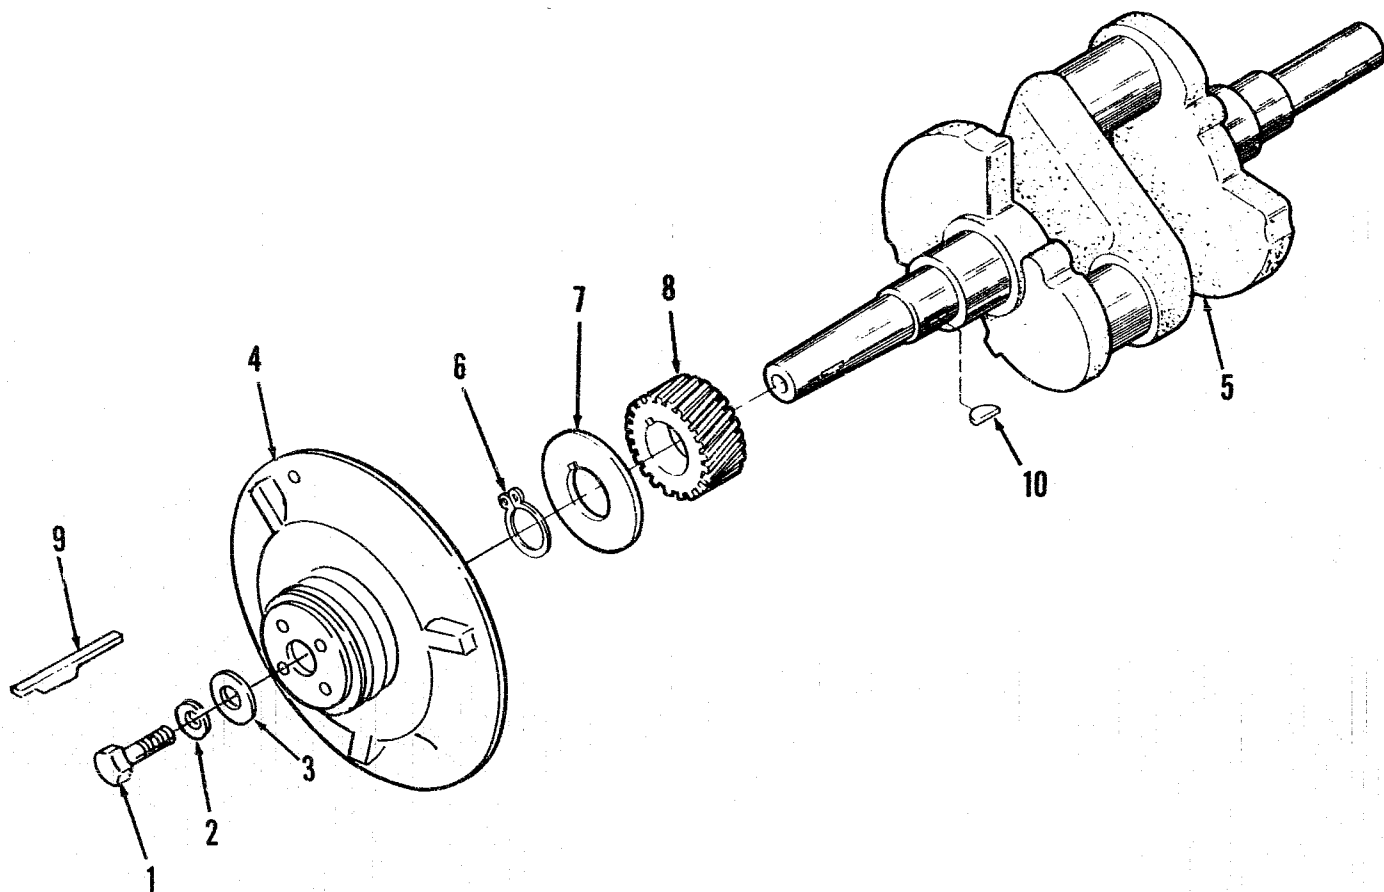 

785A

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	104-0170	1	Screw, Cap - Hex Head (Special)	6	518-0014	1	Ring, Retaining
2	850-0055	1	Washer, Lock - Spring (7/16")	7	104-0043	1	Washer, Retaining - Gear
3	526-0017	1	Washer, Flat (7/16)	8	104-0032	1	Gear, Crankshaft
4	104-1729	1	Flywheel (Mach)	9	515-0284	1	Key, Flywheel
5	104-1728	1	Crankshaft	10	515-0001	1	Key, Woodruff (1/2" Dia. x 1/8" Thk)


# Connecting Rod and Piston

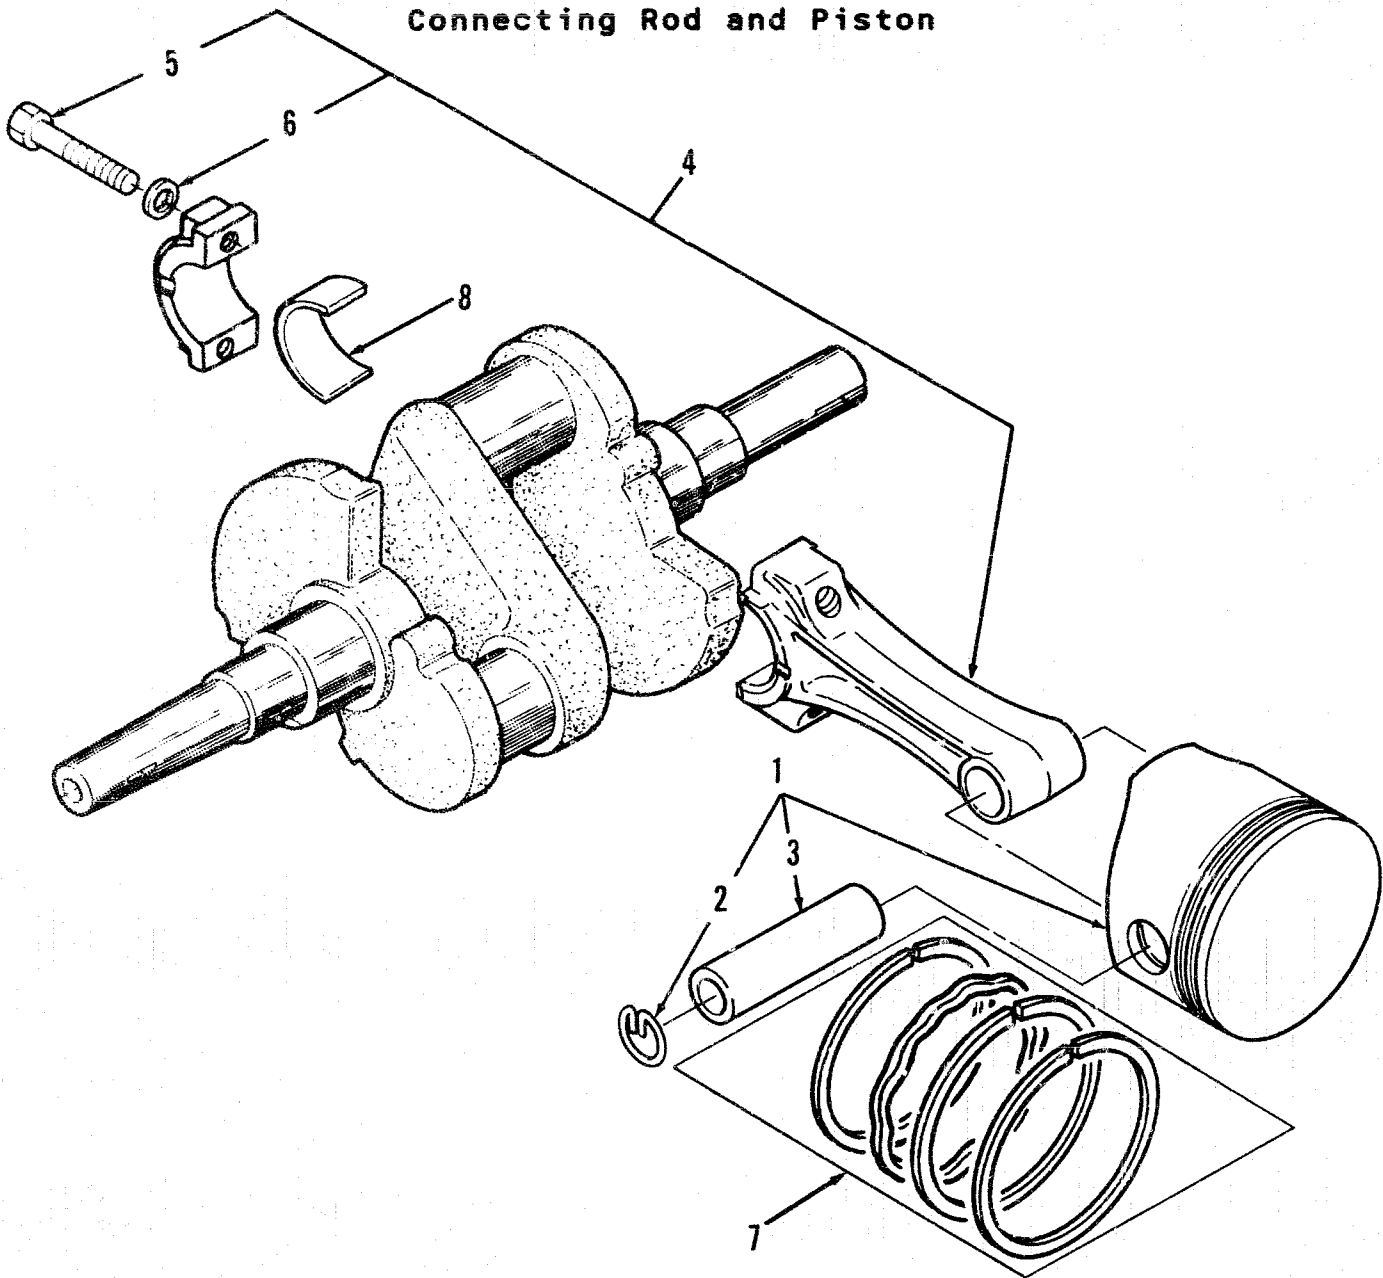 

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Piston and Pin (Includes Retaining Rings and Wrist Pins)	6	114-0059	4	Washer, Lock - Connecting Rod
	112-0179	2	Standard	7			Kit, Ring Set - Piston
	112-0179-05	2	.005" Oversize		113-0238	2	Standard
	112-0179-10	2	.010" Oversize		113-0238-05	2	.005" Oversize
	112-0179-20	2	.020" Oversize		113-0238-10	2	.010" Oversize
	112-0179-30	2	.030" Oversize		113-0238-20	2	.020" Oversize
	112-0179-40	2	.040" Oversize		113-0238-30	2	.030" Oversize
2	112-0003	4	Ring, Retaining		113-0238-40	2	.040" Oversize
3	112-0069	2	Pin, Wrist - Piston	8			Bearing, Connecting Rod
4	114-0203	2	* Rod, Connecting (Includes Screw and Lock)		114-0188	4	Standard
5	805-0010	4	Bolt, Place (5/16-24 x 1-1/4")		114-0188-02	4	.002" Undersize
					114-0188-10	4	.010" Undersize
					114-0188-20	4	.020" Undersize
					114-0188-30	4	.030" Undersize

\* Note: Can Use Economy Connecting Rod P/N 114-0098 Without Bearing P/N 114-0188.


# Drip Pan

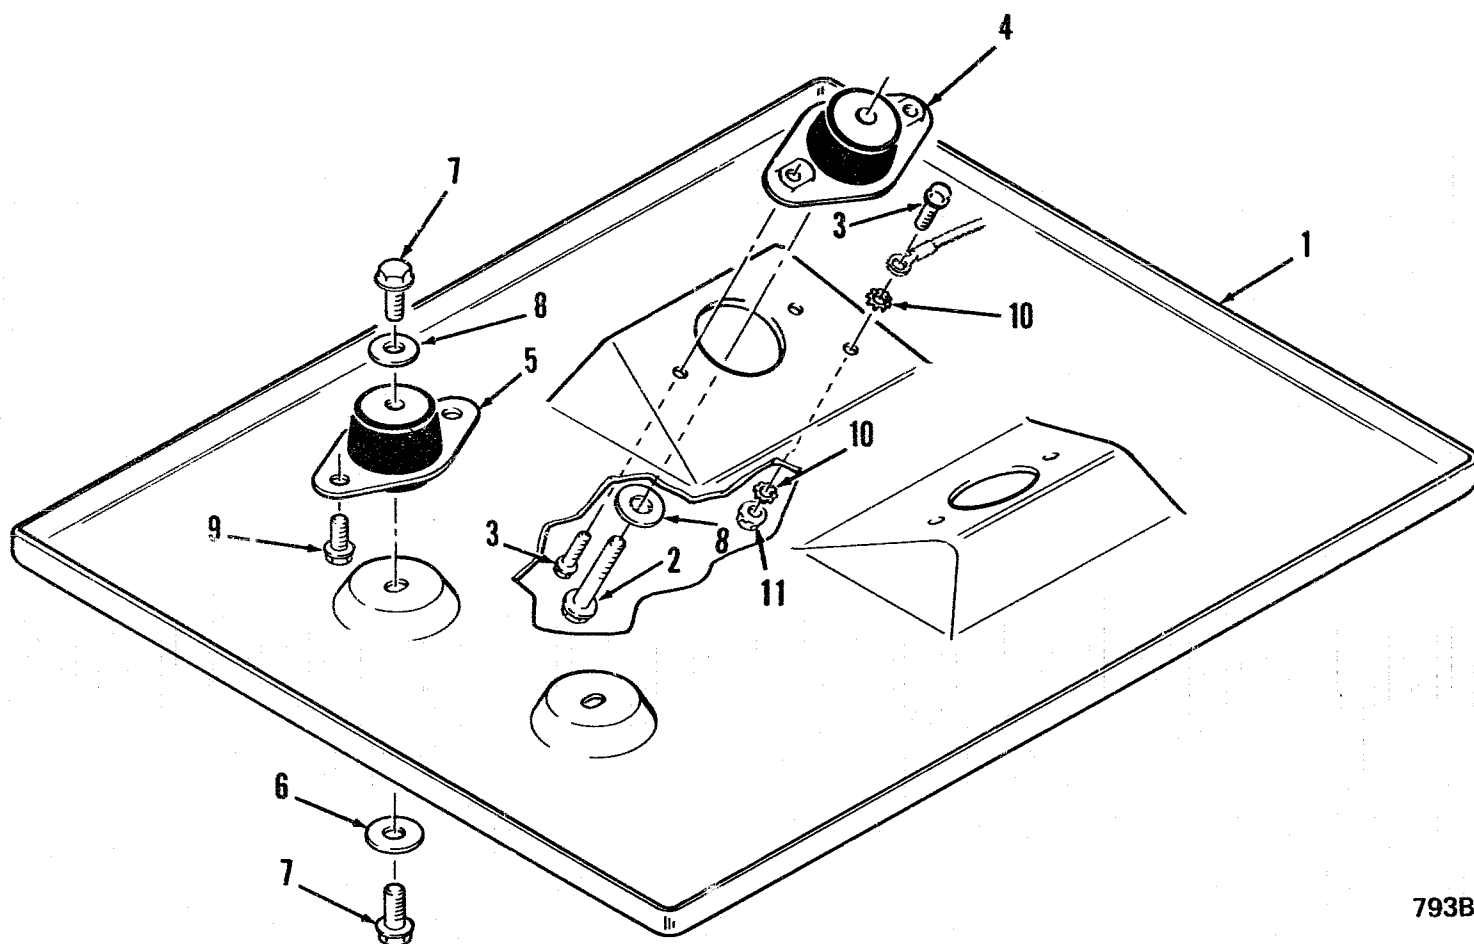 

793B

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	403-2890	1	Pan, Drip	8	526-0324	4	Washer, Flat (5/16")
2	815-0598	2	Screw, Hex Head - Thread Forming (3/8-16 x 2-3/8")	9	815-0508	4	Screw, Hex Head - Thread Forming (5/16-18 x 3/4")
3	821-0018	6	Screw, Self-Locking - Hex Washer Head (1/4-20 x 1/2")	10	856-0006	4	Washer, Lock - External, Internal Tooth (1/4")
4	402-0550	2	Isolator, Vibration - Engine	11	870-0212	1	Nut, Hex - Flange Locking (1/4-20)
5	402-0549	2	Isolator, Vibration - Generator				
6	526-0240	2	Washer, Flat (3/8")				
7	821-0031	4	Screw, Self-Locking - Hex Washer Head (3/8-16 x 3/4")				

# Gearcase

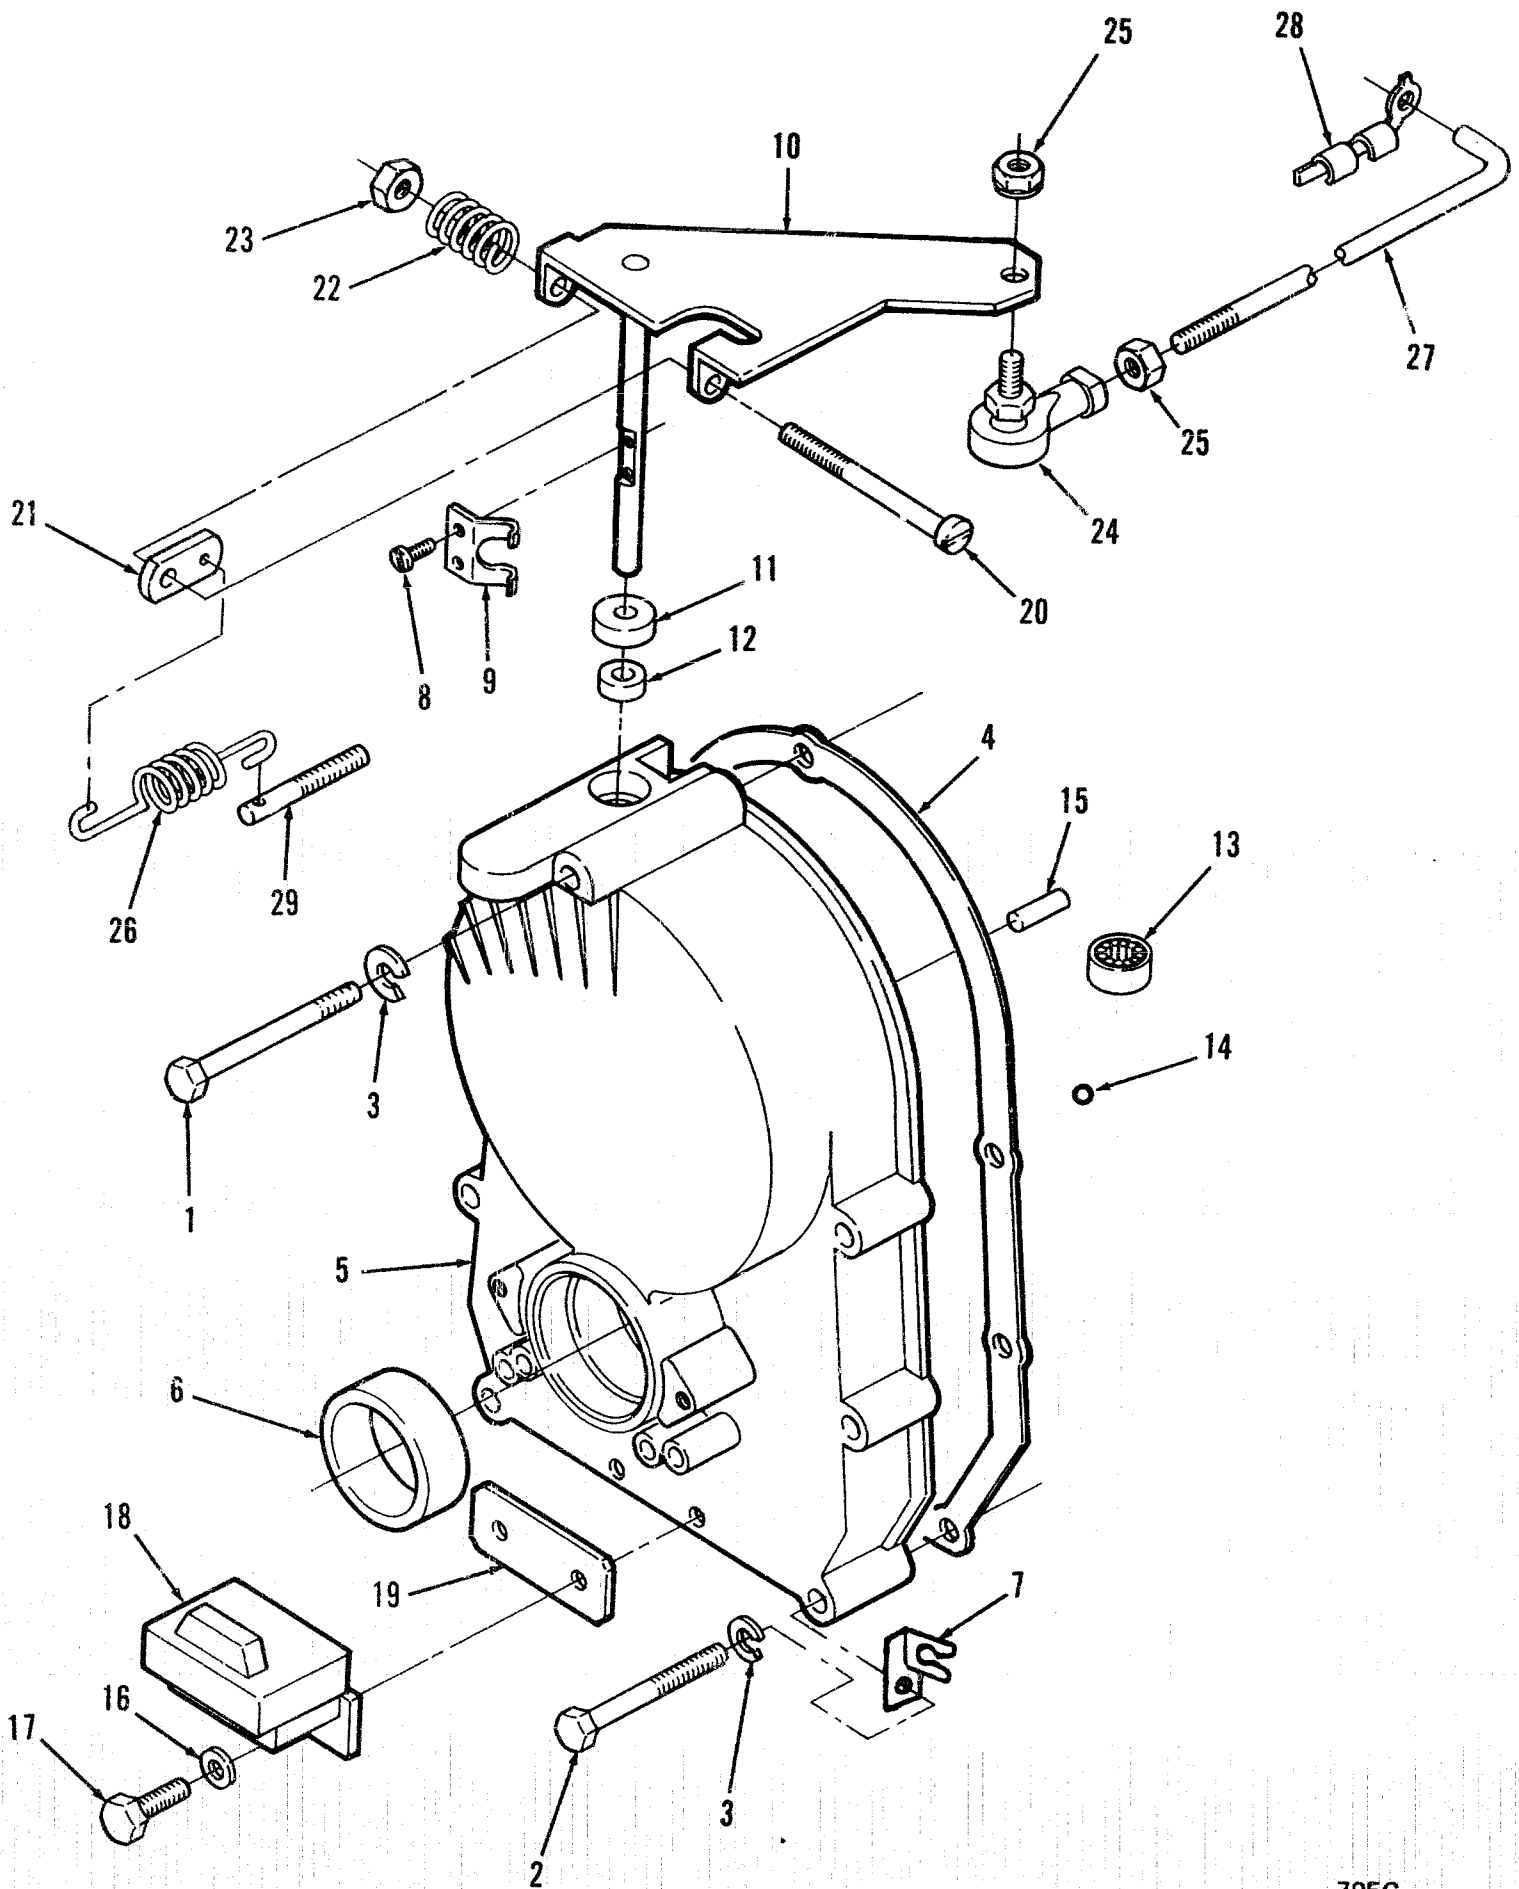 

795C

# Gearcase

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	800-0034	1	Screw, Cap - Hex Head (5/16-18 x 2-1/4")	16	854-0010	2	Washer, Lock - IT
2	114-0022	4	Screw, Cap - Hex Head (5/16-18 x 1-3/4")	17	815-0340	2	Screw, Form - Thread (HWH) (8-32 x
3	850-0045	5	Washer, Lock - Spring (5/16")	18	166-0785-01	1	Control, Ignition
4	103-0810	1	Gasket, Gearcase	19	166-0786	1	Insulator, Module - Ignitor
5	103-0772	1	Gearcase (Includes Parts Marked *)	20	820-1077	1	Screw, Machine - Pan head (10-32 x 2-1/2 LG)
6	509-0040	1	*Seal, Oil - Crankshaft	21	150-1998	1	Link, Spring - Governor
7	167-0188	1	Clip, Cable	22	141-0710	1	Spring, Needle - Idle
8	815-0046	2	Screw, Machine - Pan Head, Cross-Recessed (#8-32 x 3/8")	23	870-0328	1	Nut, Hex - Self-Locking (10-32)
9	150-1187	1	*Yoke, Governor	24			Joint, Ball
10	150-2324	1	*Arm and Shaft, Governor (Includes Clip)		150-0939	1	1-7/64" Long
11	509-0008	1	*Seal, Oil - Governor Shaft		150-1358	1	1-7/32" Long
12	510-0013	1	*Bearing, Needle - Upper	25	870-0131	2	Nut, w/ET - Hex Head
13	510-0013	1	*Bearing, Needle - Lower	26	150-2500	1	Spring, Retaining - Governor
14	510-0014	1	*Ball, Bearing	27	150-2475	1	Rod, Control - Governor
15	516-0130	1	*Pin, Roll - Yoke Stop	28	518-0006	1	Clip
				29	150-2325	1	Stud, Adjusting - Governor

\* - Parts Included in 103-0772 Gearcase.

## Oil System



 
## Oil System

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	123-1858	1	Indicator and Cap (Includes Parts Marked *)	14	526-0066	1	Washer, Flat - Cooper (3/8")
1	123-1647	1	*Cap, Fill - Oil	15	120-0140	1	Spring, Valve - Bypass
2	509-0142	1	*O Ring (1" ID x 1-1/4" OD x 1/8")	16	120-0398	1	Plunger, Valve - Bypass
3	815-0333	1	*Screw, Machine - Round Head Thread Cutting (#10-32 x 1/2")	17	120-0413	1	Cup, Intake - Oil Pump
4	123-1857	1	*Indicator, Level - Oil	18	309-0113	1	Switch, Low Oil - Pressure - 2 Terminal, Close at 9 PSI
5	123-1856	1	Tube, Fill - Oil	19	102-0455	4	Screw, Cap - Hex Head (Special)
6	509-0269	1	Seal, Tube - Oil Fill	20	850-0050	4	Washer, Lock - Spring (3/8")
7	102-1374	1	Base, Oil	21	504-0092	1	Valve, Drain
8	102-1369	1	Gasket, Base - Oil	22	132-0326	1	Pump, Coolant
9	800-0007	2	Screw, Cap - Hex Head (1/4-20 x 1")	23	503-1687-02	1	Elbow, Hose
10	850-0040	2	Washer, Lock - Spring (1/4")	24	503-1686	1	Hose, Coolant
11	120-0491	1	Pump, Oil	25	503-0977	4	Clamp, Hose
12	120-0161	1	Kit, Gasket - Pump, Oil	26	526-0018	2	Washer, Flat (1/4")
13	801-0048	1	Screw, Cap - Hex Head (3/8-24 x 3/4")	27	802-0032	2	Screw, Cap - Socket Head (1/4-20 x 1/2")

\* - Parts Included in 123-1853 Indicator and Cap.




# Oil Filter Adapter and Drain

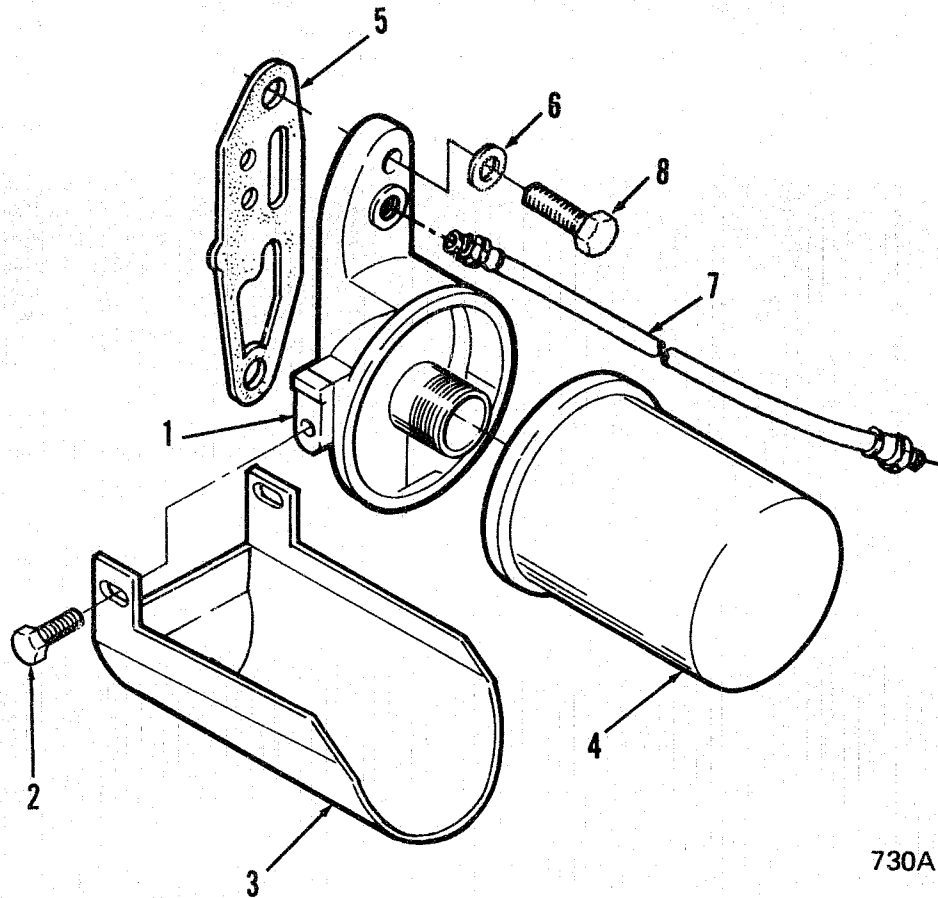

730A

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	122-0320	1	Adapter, Filter - Oil	4	122-0323	1	Filter, Oil
2	815-0194	2	Screw, Hex Head - Thread Cutting with External Tooth (#10-32 x 3/8")	5	122-0774	1	Gasket, Adapter - Oil Filter
3	122-0360-53	1	Drain, Filter - Oil Painted	6	526-0065	2	Washer, Flat - Copper (5/16")
				7	501-0005	1	Line, Flex - Oil
				8	800-0028	2	Screw, Cap - Hex Head (5/16-18 x 1")


# Starter Components

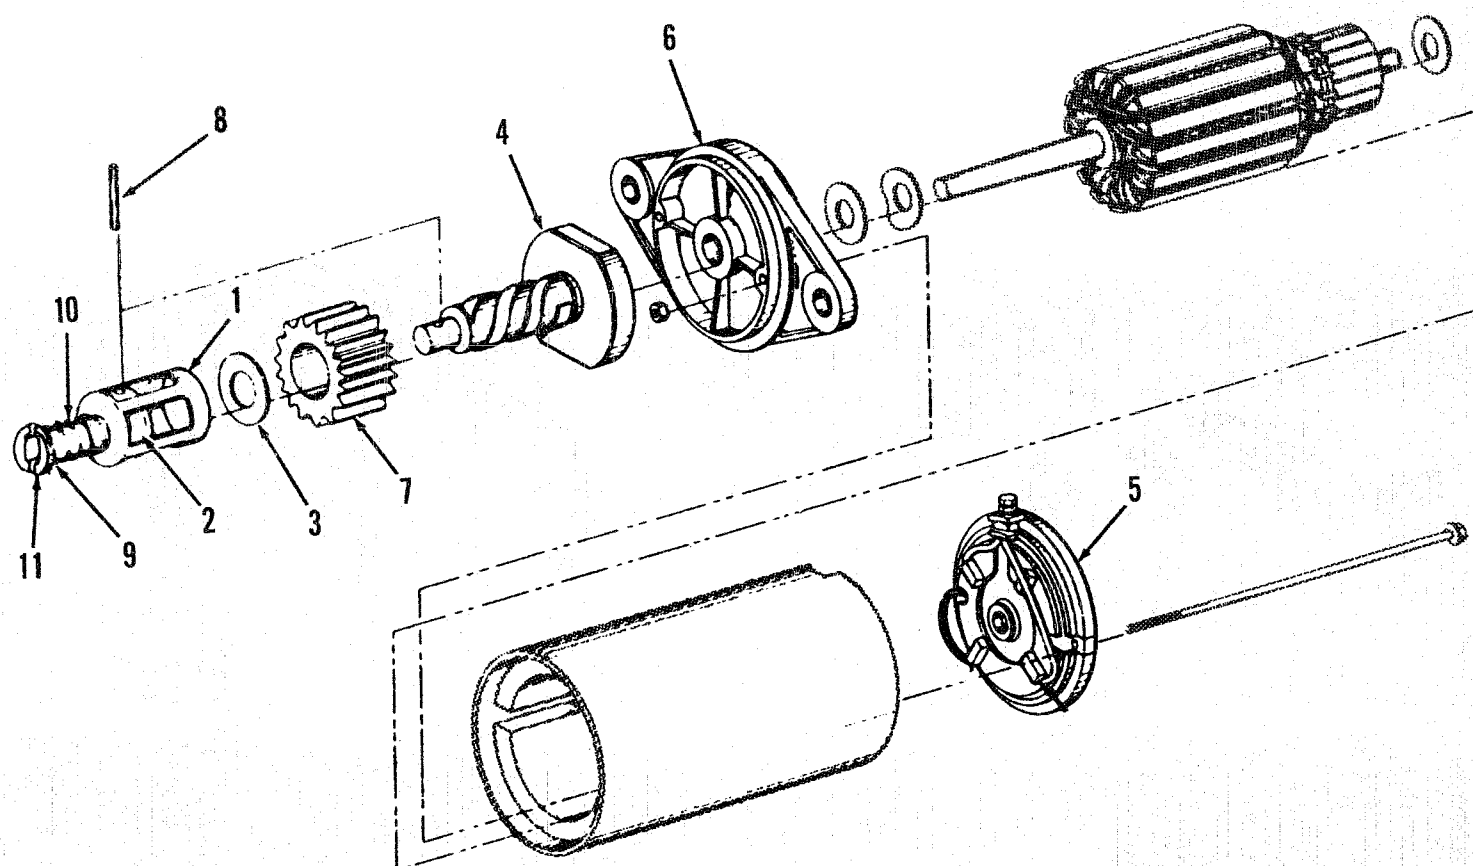 

309

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	191-1630	1	Motor, Starter (Complete)	6	191-1776	1	Cap, Drive End
1	191-1817	1	Cover, Spring	7	191-1819	1	Gear, Starter
2	191-1818	1	Retainer, Clutch	8	191-1786	1	Pin, Roll
3	191-1785	1	Washer, Drive	9	191-1822	1	Washer, Pinion
4	191-1784	1	Clutch and Spline	10	191-1820	1	Spring, Pinion
5	191-1781	1	Cap, End	11	191-1821	1	Retainer, Spring

# Ignition Coil

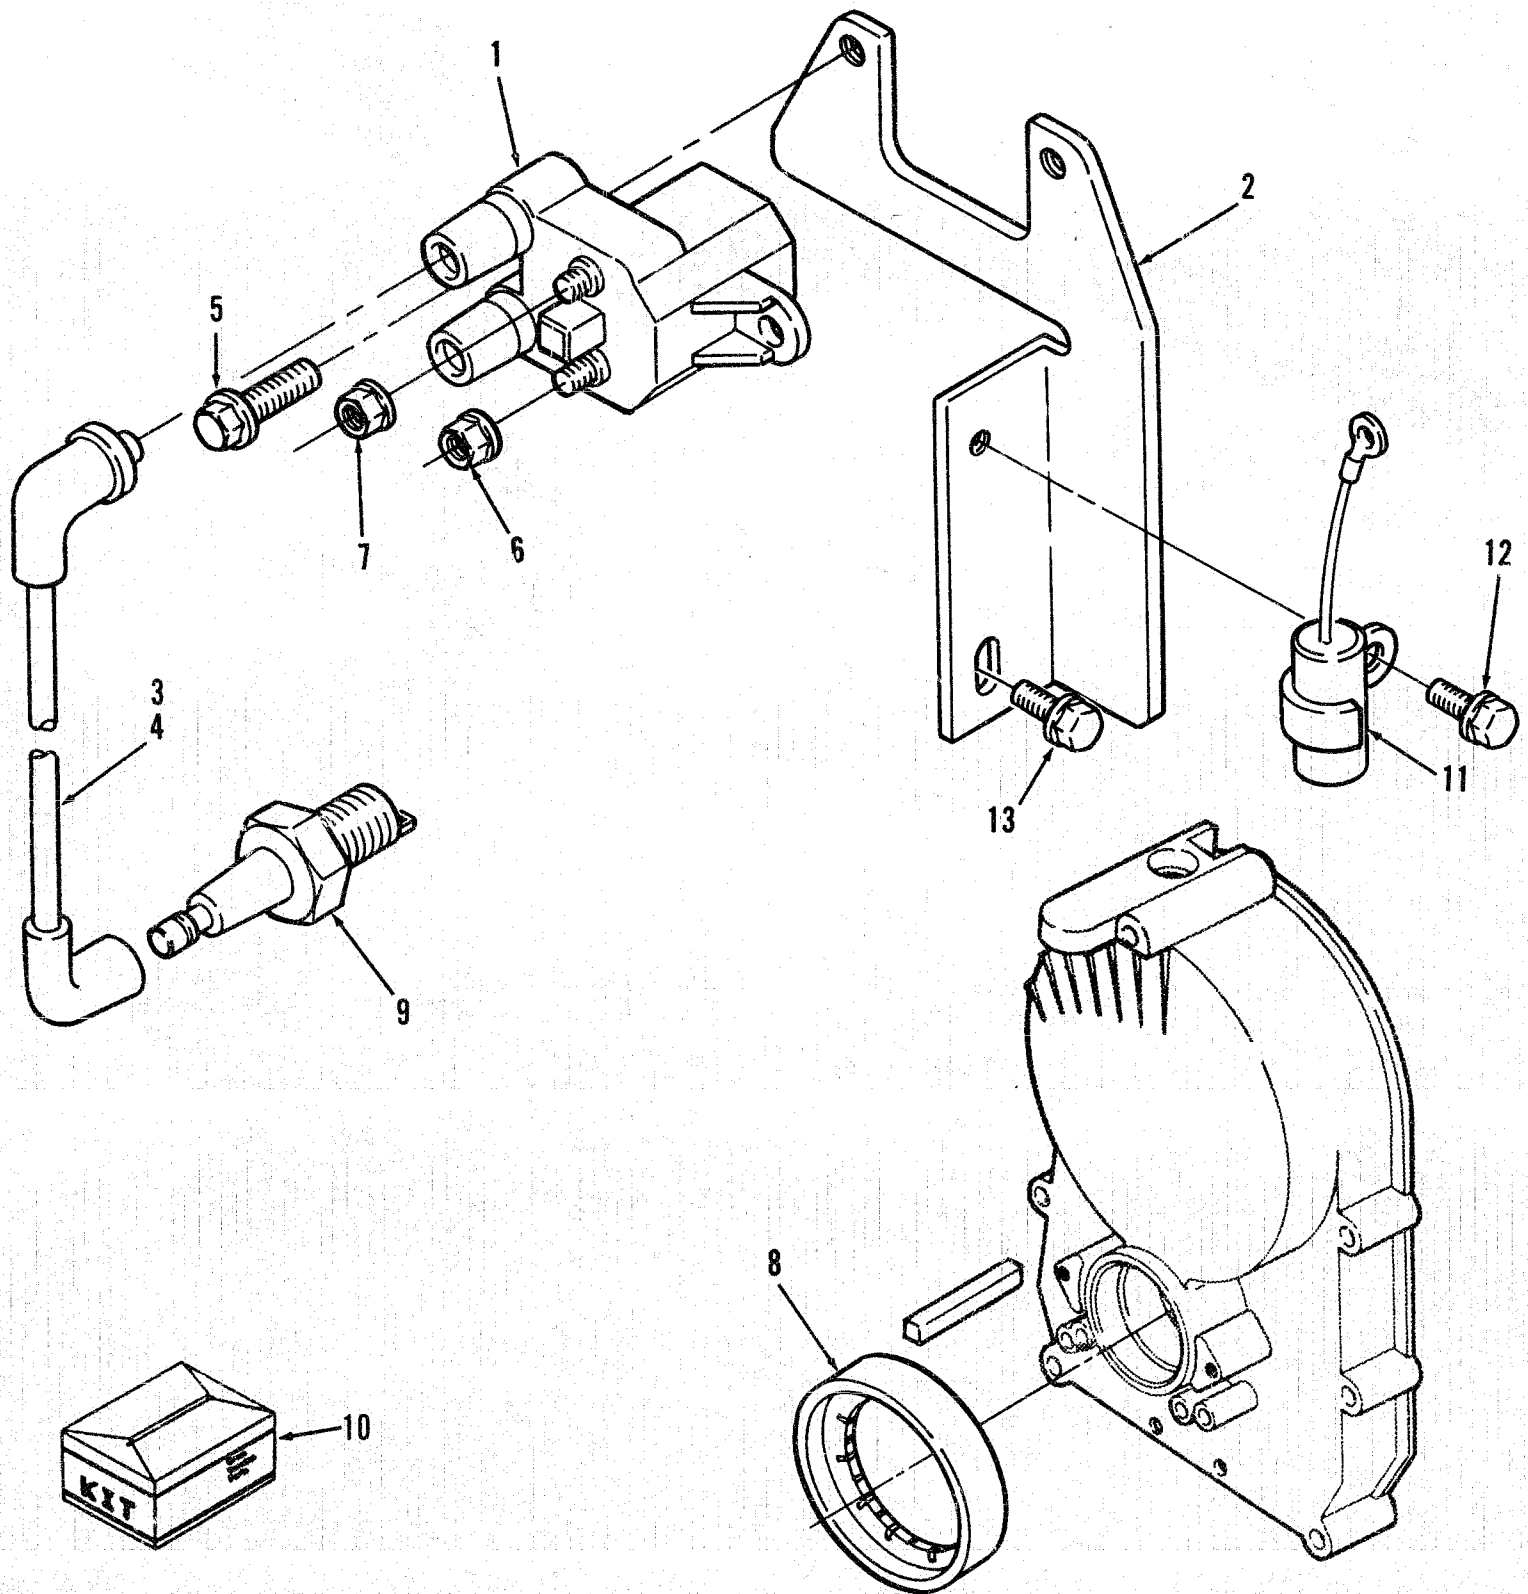 


784A

## Ignition Coil

 REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	166-0761	1	Coil, Battery - Ignition	8	166-0767-01	1	Rotor, Ignition
2	166-0801	1	Bracket, Coil - Ignition	9	167-0263-01	2	Plug, Spark
3	167-1615-01	1	Lead, Tension - High	10	155-2556	1	Kit, Electronic Ignition Filter
4	167-1602	1	Lead, Tension - High	11	312-0051	1	Condenser
5	821-0015	2	Screw, Self Lock - Hex Washer Head (1/4-20 x 3/4")	12	821-0005	1	Screw, Locking - Hex Washer Head (#10-32 x 1/2")
6	166-0770	1	Nut, Flange - Hex (M4)	13	815-0261	1	Screw, Thread Forming - Hex Washer Head (1/4-20 x 1/2")
7	166-0771	1	Nut, Flange - Hex (M5)				

# Start Solenoid Relay

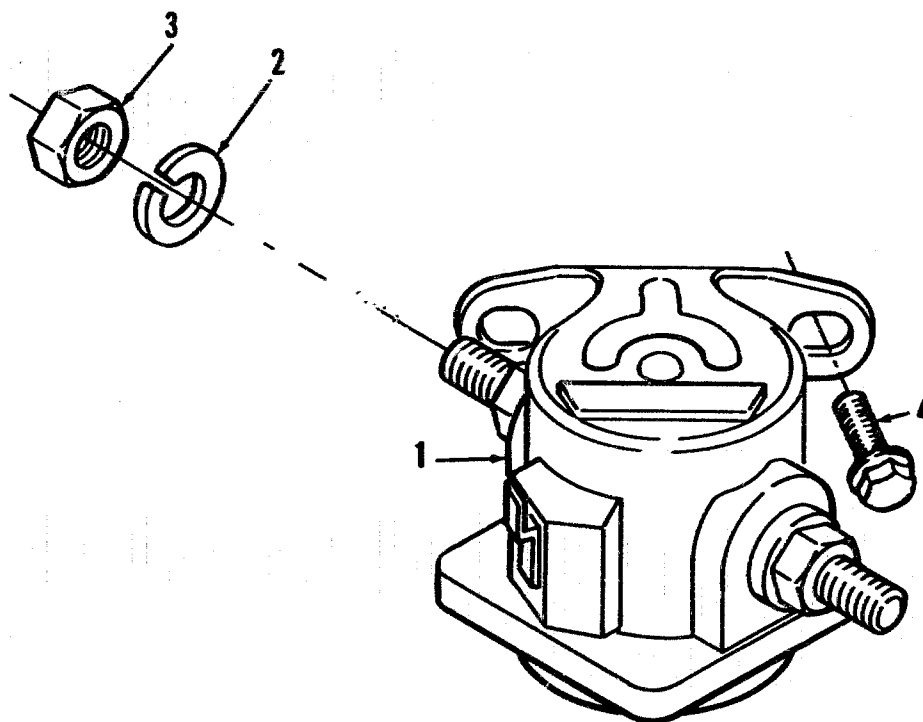


783A

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	307-2344	1	Relay, Solenoid - Start
2	850-0045	1	Washer, Lock (5/16)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
3	868-0002	1	Nut, Hex (5/16-24)
4	815-0290	2	Screw, HWH (1/4-20 x .62")


# Battery Charger

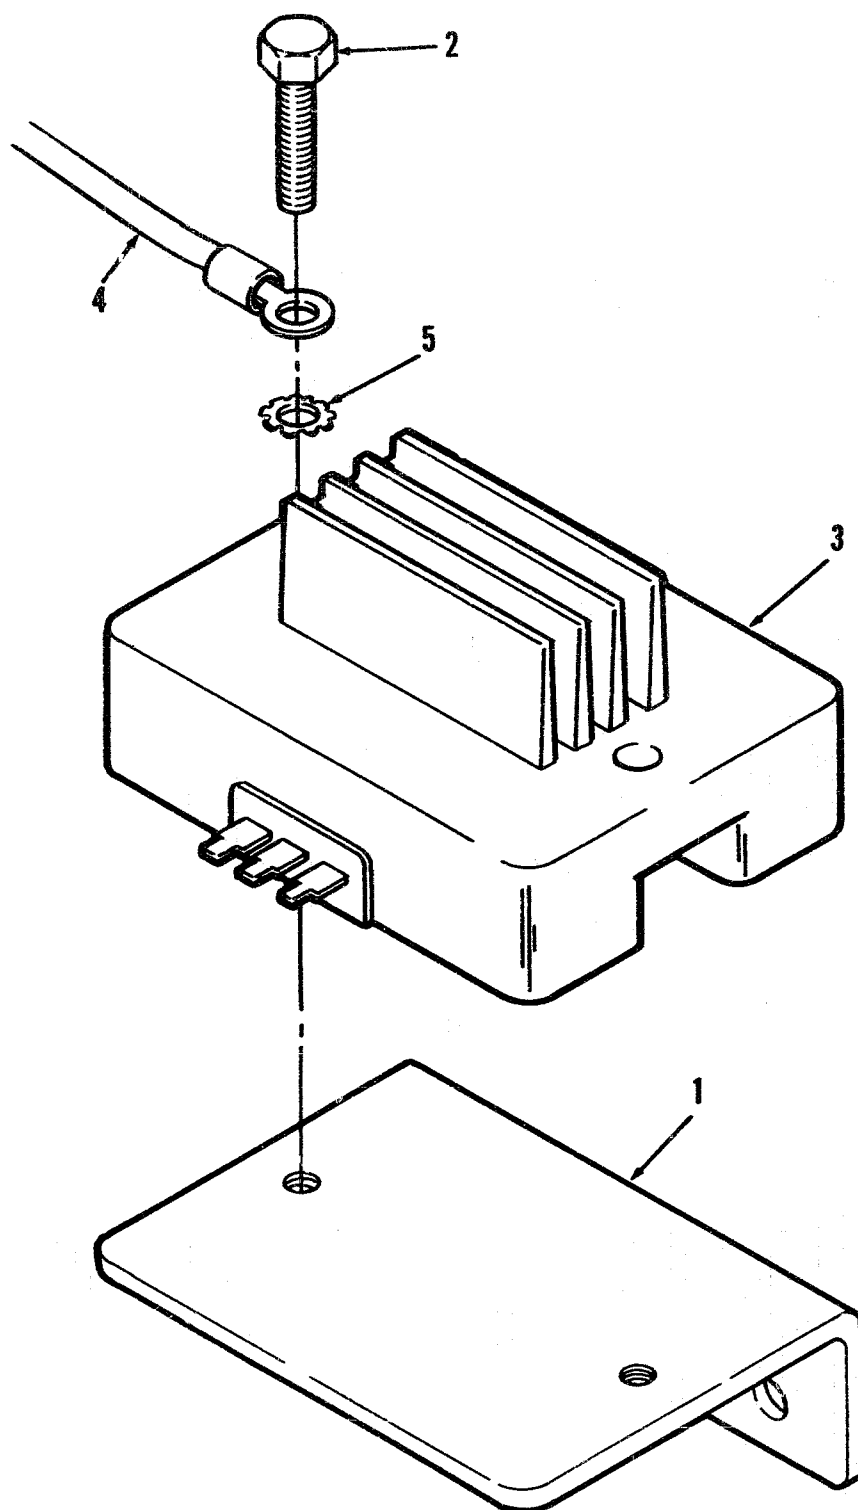 

782A

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	305-0832	1	Regulator, Complete	3	305-0784	1	Charger, Battery
1	319-0705	1	Bracket, Charger - Battery	4	226-4014-02	1	Lead
2	821-0012	2	Screw, Lock - Flange Head (1/4-20 x 1-1/8")	5	856-0006	1	Washer, Tooth - External, Internal

# Fuel Pump

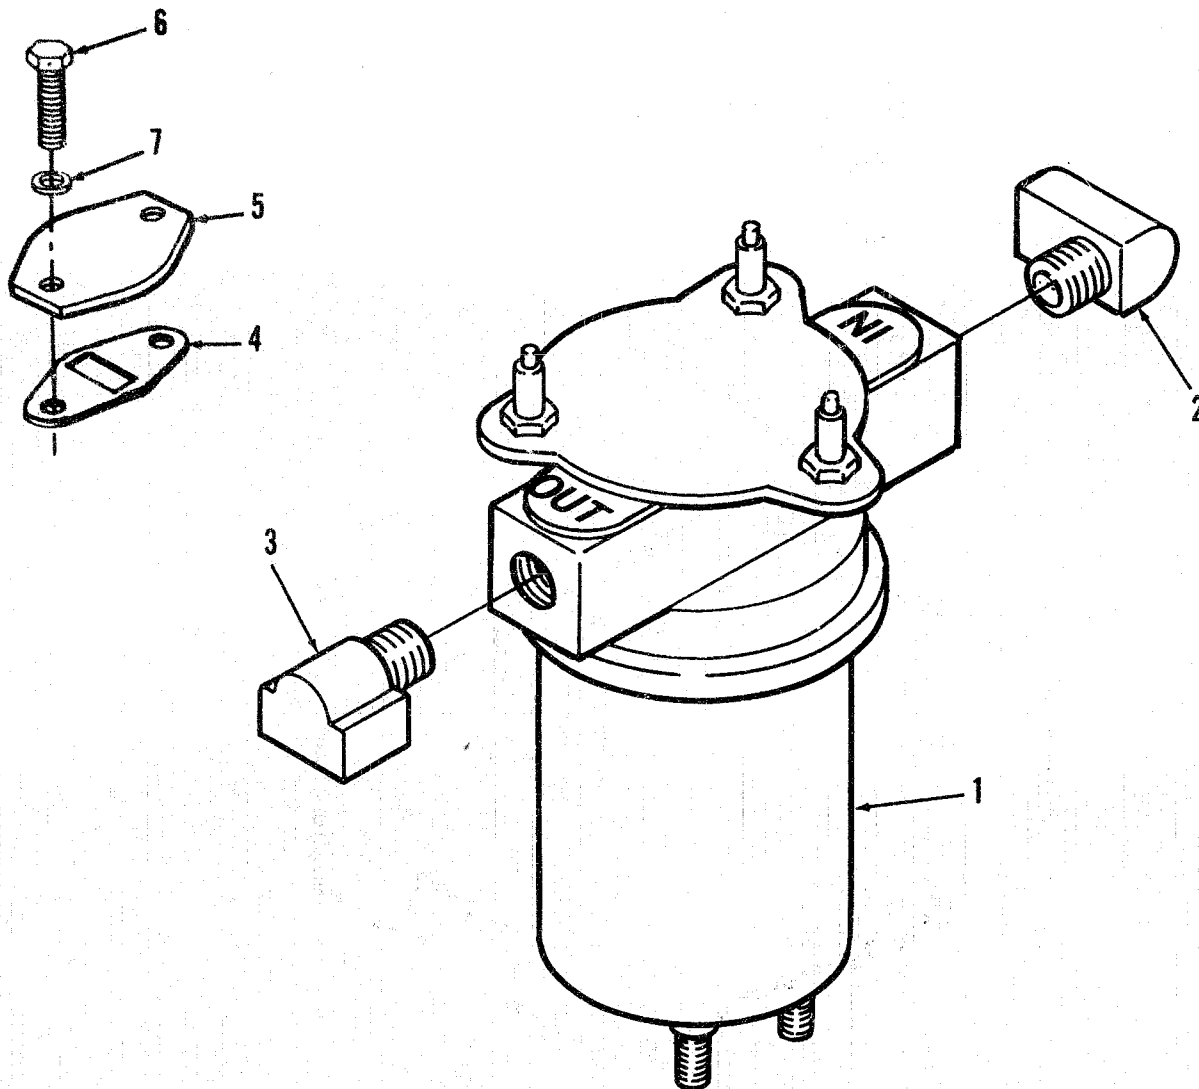 


788A

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	149-2159	1	Pump, Fuel
2	502-0054	1	Elbow, Street - 90° Pipe
3	502-1118	1	Elbow, Flare - Inverted
4	149-0003	1	Gasket, Fuel Pump Hole
5	149-0136	1	Cover, Fuel Pump Hole

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	800-0004	2	Screw, Cap - Hex Head (1/4-20 x 5/8")
7	526-0063	2	Washer, Flat - Copper (1/4")

# Fuel System (Gasoline)

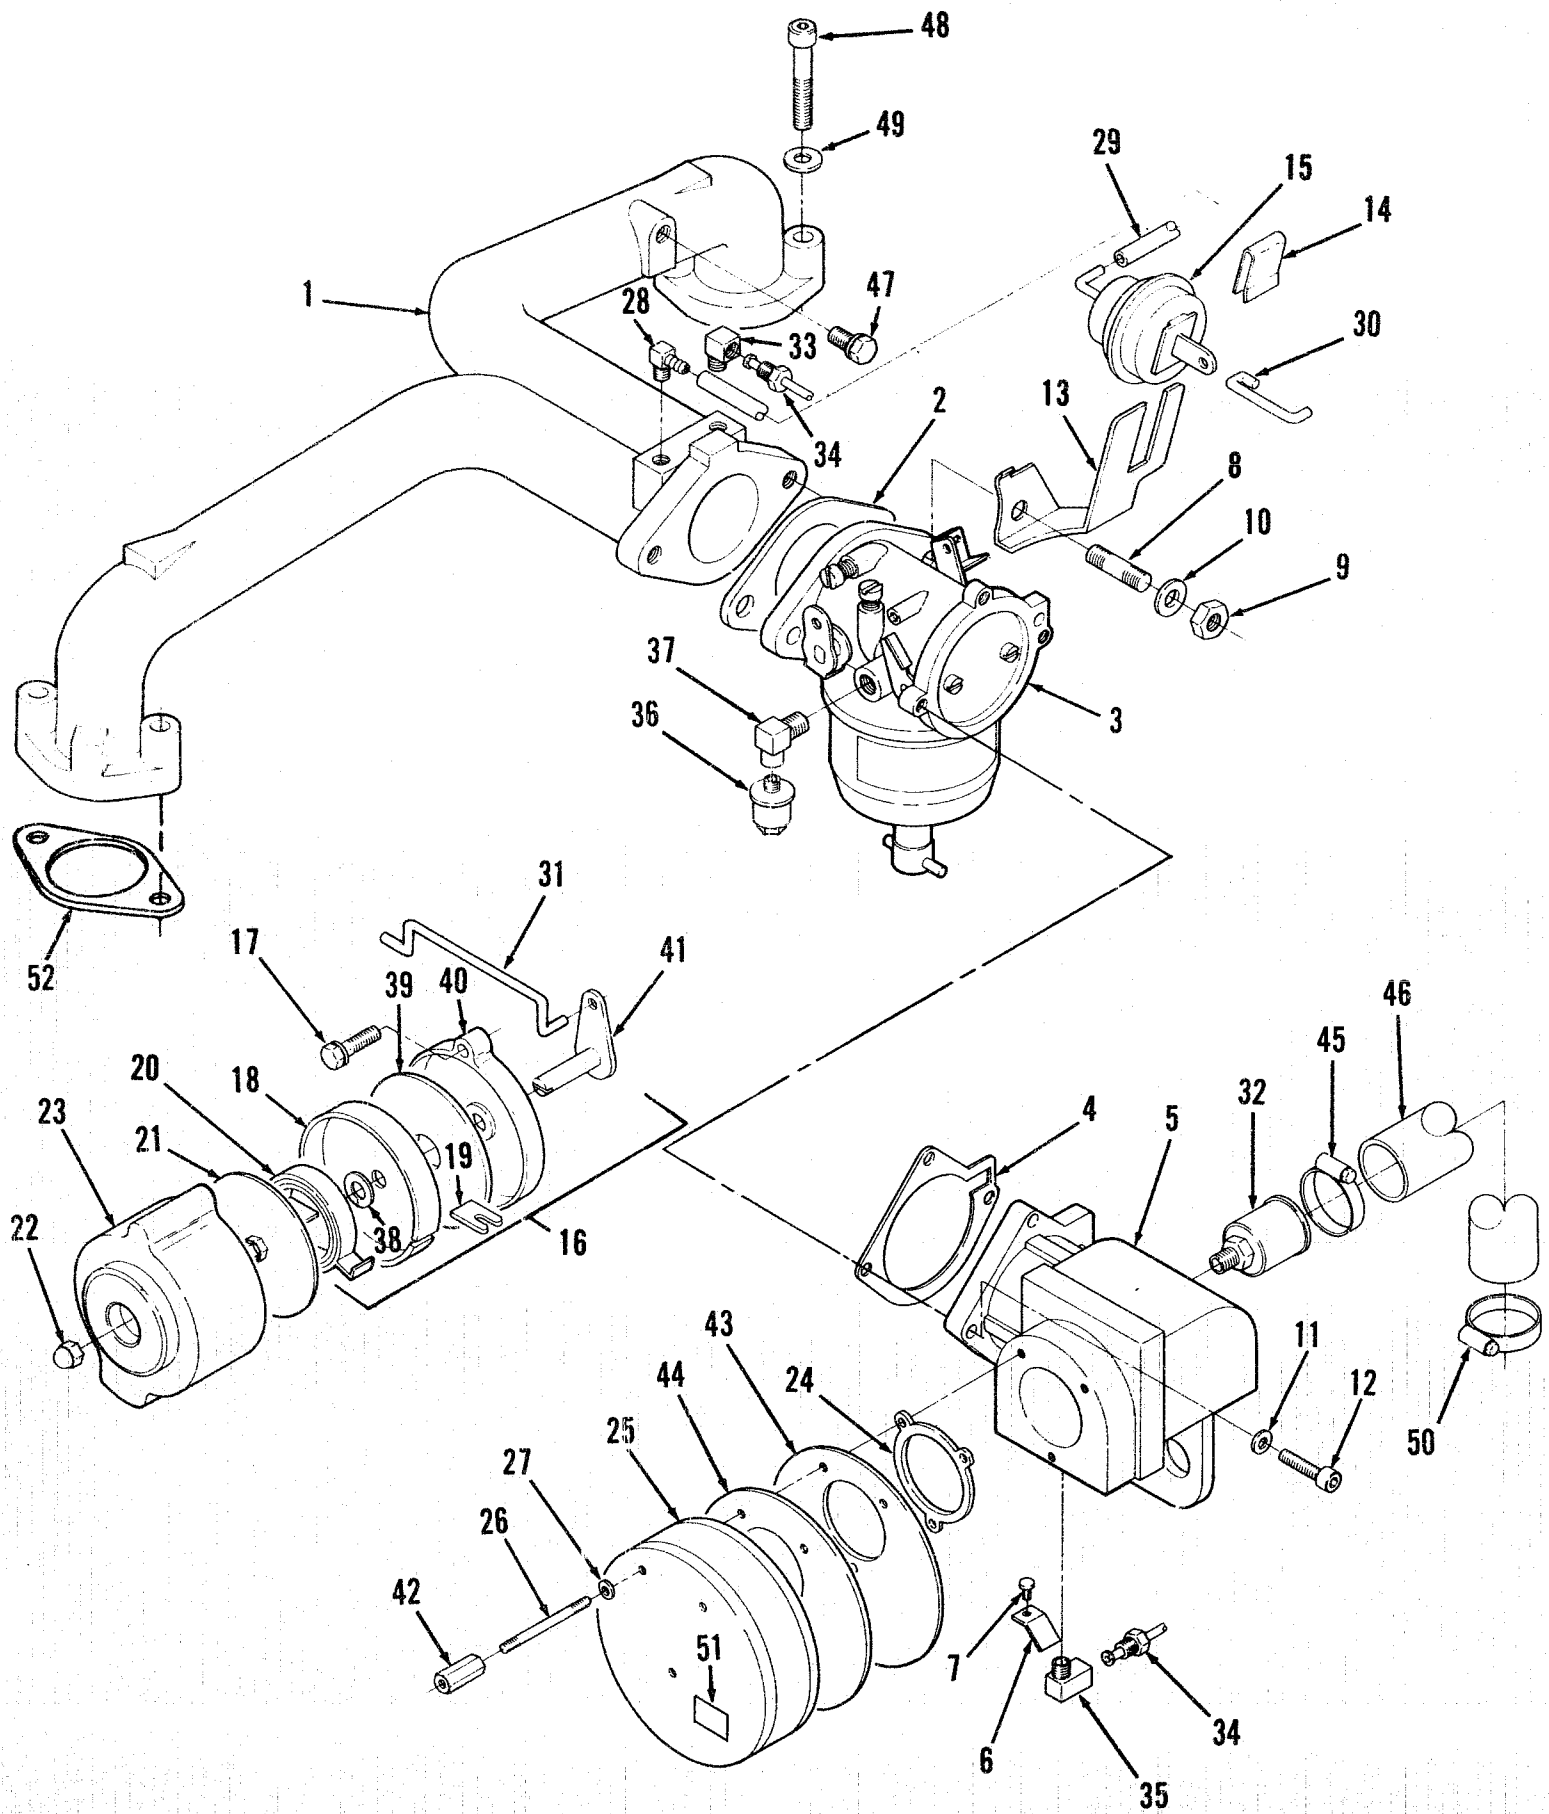 

798D




# Fuel System (Gasoline)

 REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	154-2777	1	Manifold, Intake (Mach)	26	520-0992	3	Stud, Spark Arrestor
2	141-0281	1	Gasket, Carburetor	27	856-0003	3	Washer, Lock - External/ Internal Tooth (#10)
3			Carburetor (See Separate Page For Components)	28	502-0871	1	Fitting, Vacuum
	146-0456	1	60 Hertz Units	29	503-1537-04	1	Hose, Vacuum (5/32 ID x 1/4 OD x 4.7" Long)
	146-0455	1	50 Hertz Units	30	153-0577	1	Linkage, Pulloff
4	140-2485	1	Gasket, Adapter	31	153-0627	1	Linkage, Choke
5	140-2424	1	Adapter, Carburetor (Machine)	32	145-0605	1	Arrestor, Tube - Breather
6	149-2256	1	Cover, Return - Fuel	33	502-0871	1	Fitting, Vacuum
7	815-0021	1	Screw, Drive	34	149-2268	1	Line, Return - Fuel
8	520-0654	2	Stud, Diaphragm Bracket (5/8 NC x 7/16 NF x 15/16" LG)	35	502-0019	1	Fitting, Elbow - Inverted Ma
9	868-0002	2	Nut, Jam (5/16-24 UNF)	36	149-2279	1	Filter, Fuel
10	526-0115	2	Washer, Flat (5/16")	37	502-1108	1	Elbow, Street (90°)
11	526-0071	3	Washer, Flat (#10)	38	518-0387	1	*Ring, Retaining
12	804-0018	3	Screw, Head - Socket (10-32 UNF x 5/8" LG)	39	153-0571	1	*Washer, Insulating
13	153-0629	1	Bracket, Diaphragm	40	153-0563	1	*Housing, Choke
14	518-0450	1	Clip, "U"	41	153-0567	1	*Shaft with Lever
15	153-0614	1	Diaphragm	42	140-2491	3	Spacer, Threaded
16	153-0556	1	Housing, Choke (Includes Parts Marked *)	43	140-2490	1	Plate, Resonator
17	815-0592	2	Screw, Hex Washer Head (8-32 x 1-3/8") (Thread Forming)	44	140-2492	1	Gasket, Resonator
18	153-0578	1	Tube, Housing - Choke	45	503-1137	1	Clamp, Hose
19	518-0466	1	Clip, Retaining	46	123-1868	1	Tube, Breather
20	153-0554	1	Element, Thermostat	47	821-0018	1	Screw, Locking - Hex Washer Head (1/4-20 x 5/8")
21	153-0613	1	Cover, Choke	48	802-0059	4	Screw, Cap - Hex Head (5/16-18 x 2")
22	870-0421	1	Nut, Cap (6-32 UNC)	49	526-0122	4	Washer, Flat (5/16)
23	153-0579	1	Cover, Housing - Choke	50	503-0131	1	Clamp, Hose
24	145-0601	1	Gasket, Arrestor - Flame	51	98-5397	1	Label, Warning
25	145-0602	1	Arrestor, Spark	52	154-2752	2	Gasket, Intake Manifold


\* - Parts Included in 153-0556 Choke Housing.

# **Carburetor Components (Gasoline) Nikki**

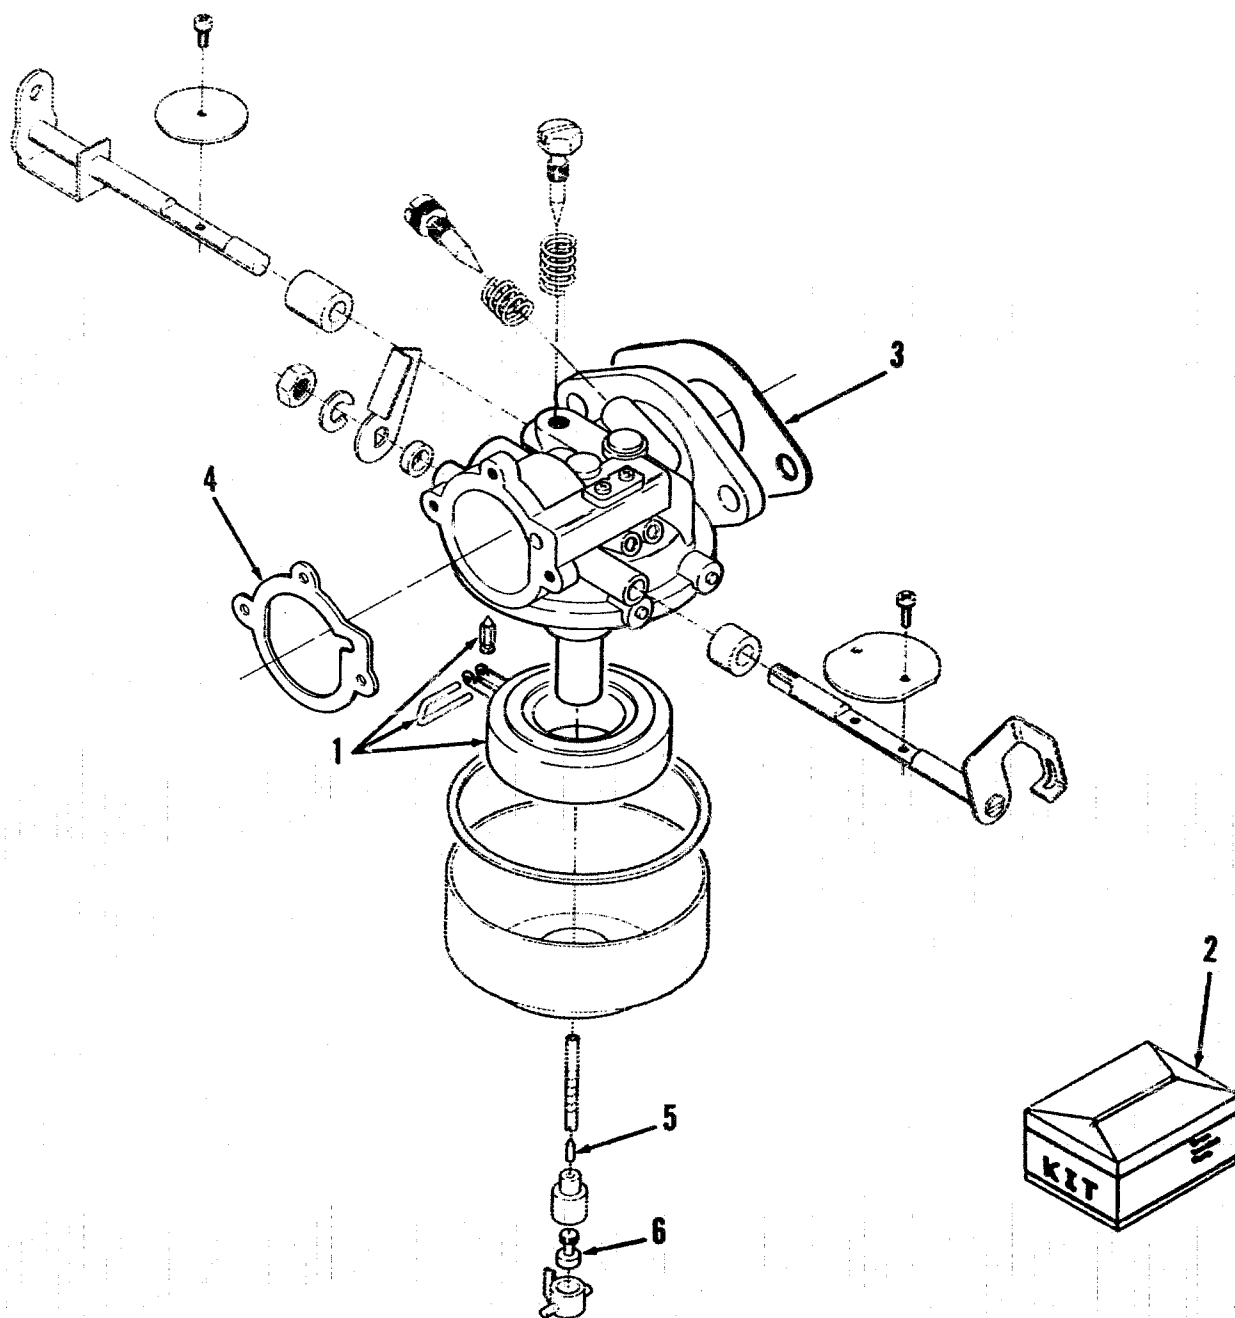

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
			Carburetor, Complete (Includes Mounting Gaskets)	3	141-0281	1	Gasket, Carburetor Mounting
	146-0455	1	50 Hertz Units	4	140-2308	1	Gasket, Air Horn
	146-0456	1	60 Hertz Units	5			Jet, idle
1	146-0453	1	Kit, Float (Includes Float, Pin and Valve)		146-0449	1	50 Hertz Units
					146-0451	1	60 Hertz Units
2	146-0457	1	Kit, Repair (Includes Gasket Package, Float Valve, Idle Adjust Needle and Spring, Mounting Gaskets, Adjust Limit Caps, Throttle Stop Screw and Spring)	6			Jet, Power
					146-0450	1	50 Hertz Units
					146-0452	1	60 Hertz Units

# Exhaust System

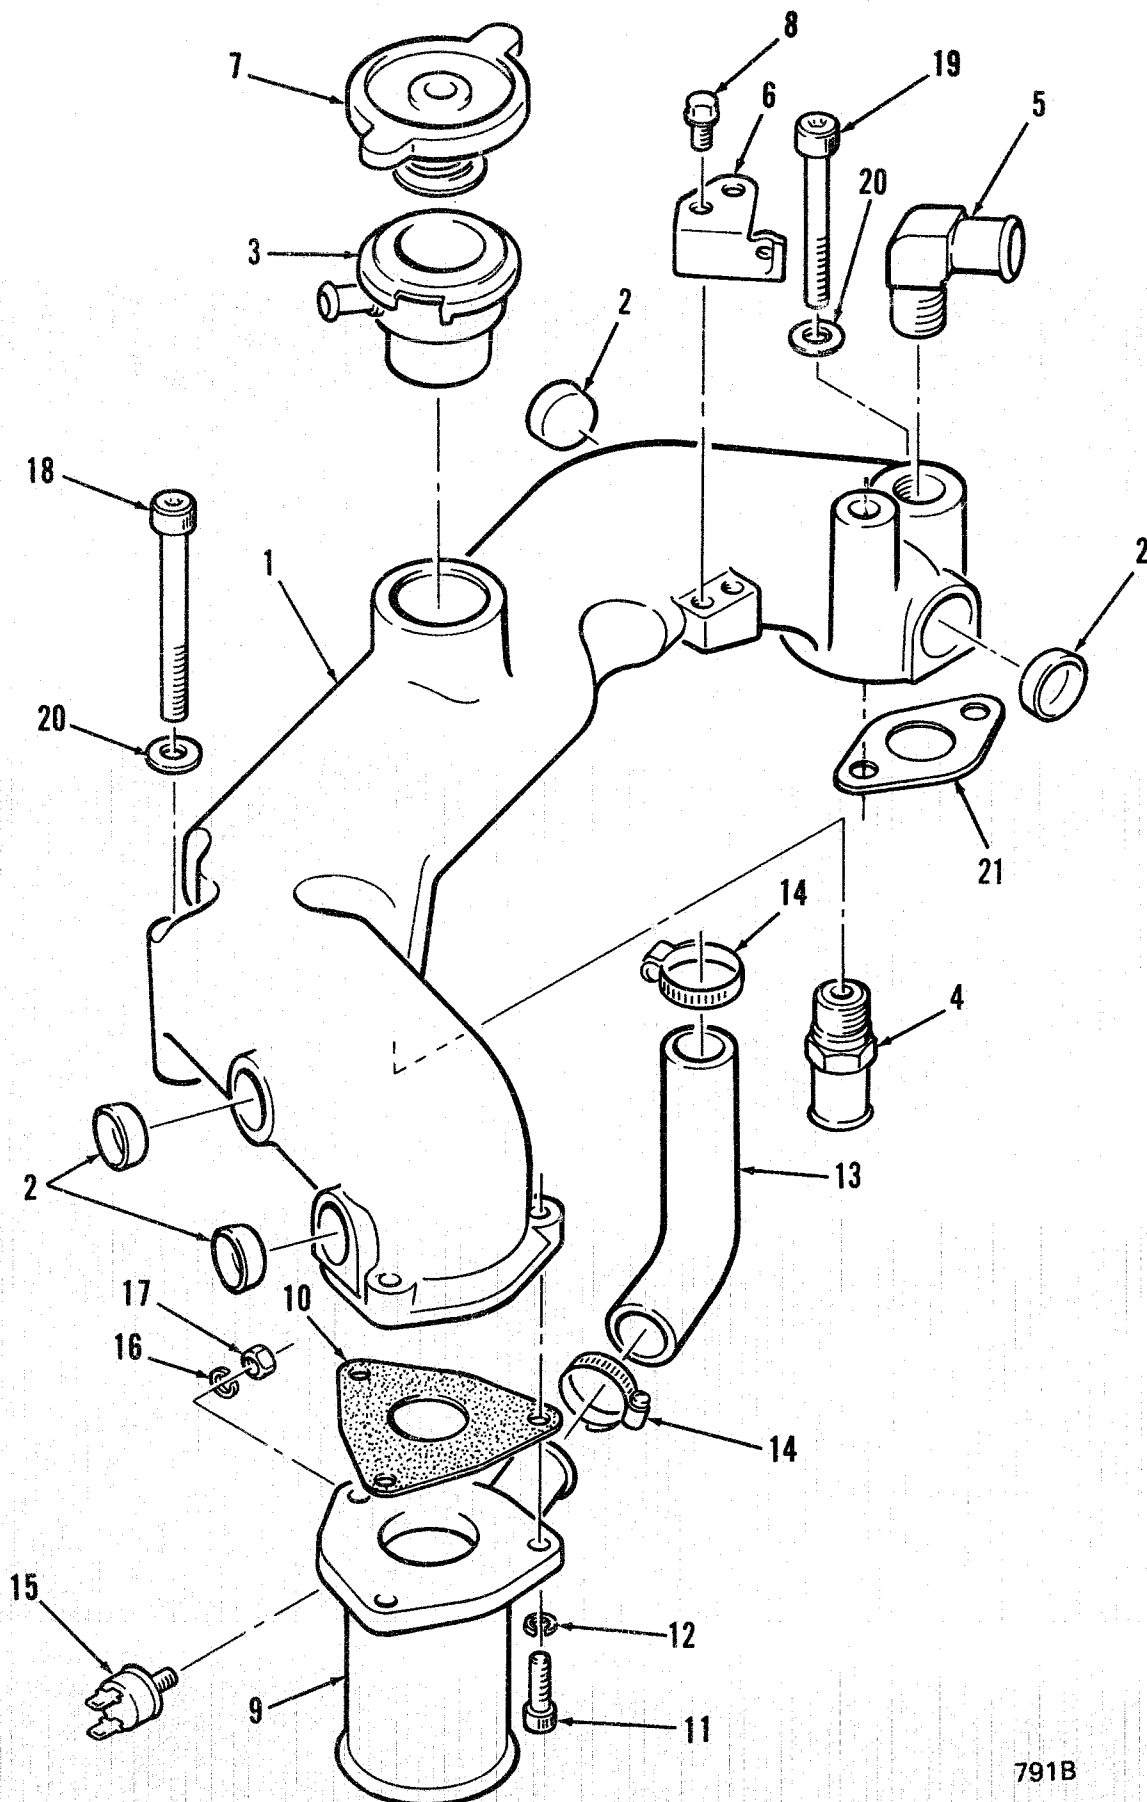 


791B

## Exhaust System

 REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	154-2767	1	Manifold, Exhaust (Machined)	12	850-0040	3	Washer, Lock - Spring (1/4")
2	517-0276	4	Plug, Welsh	13	503-1687-03	1	Elbow, Hose (1/2)
3	130-2333	1	Neck, Filler	14	503-0977	2	Clamp, Hose
4	502-0943	1	Fitting	15	309-0597	1	Switch, Exhaust Temperature - Hi
5	502-0942	1	Elbow, Hose	16	850-0025	1	Washer, Lock - Spring (#8)
6	150-2321	1	Bracket, Governor	17	860-0008	1	Nut, Hex (8-32)
7	130-3721	1	Cap, Radiator - 7 PSI	18	802-0063	3	Screw, Cap - Socket Head (5/16-18 x 3")
8	821-0005	2	Screw, Self-Locking - Hex Washer Head (#10-32 x 1/2")	19	802-0061	1	Screw, Cap - Socket Head (5/16-18 x 2-1/2")
9	154-2768	1	Manifold, Exhaust (Machined)	20	526-0122	4	Washer, Flat (5/16)
10	155-2413	1	Gasket, Exhaust	21	154-2766	1	Gasket, Exhaust Manifold
11	802-0034	3	Screw, Cap - Socket Head (1/4-20 x 3/4")				


# Heat Exchanger

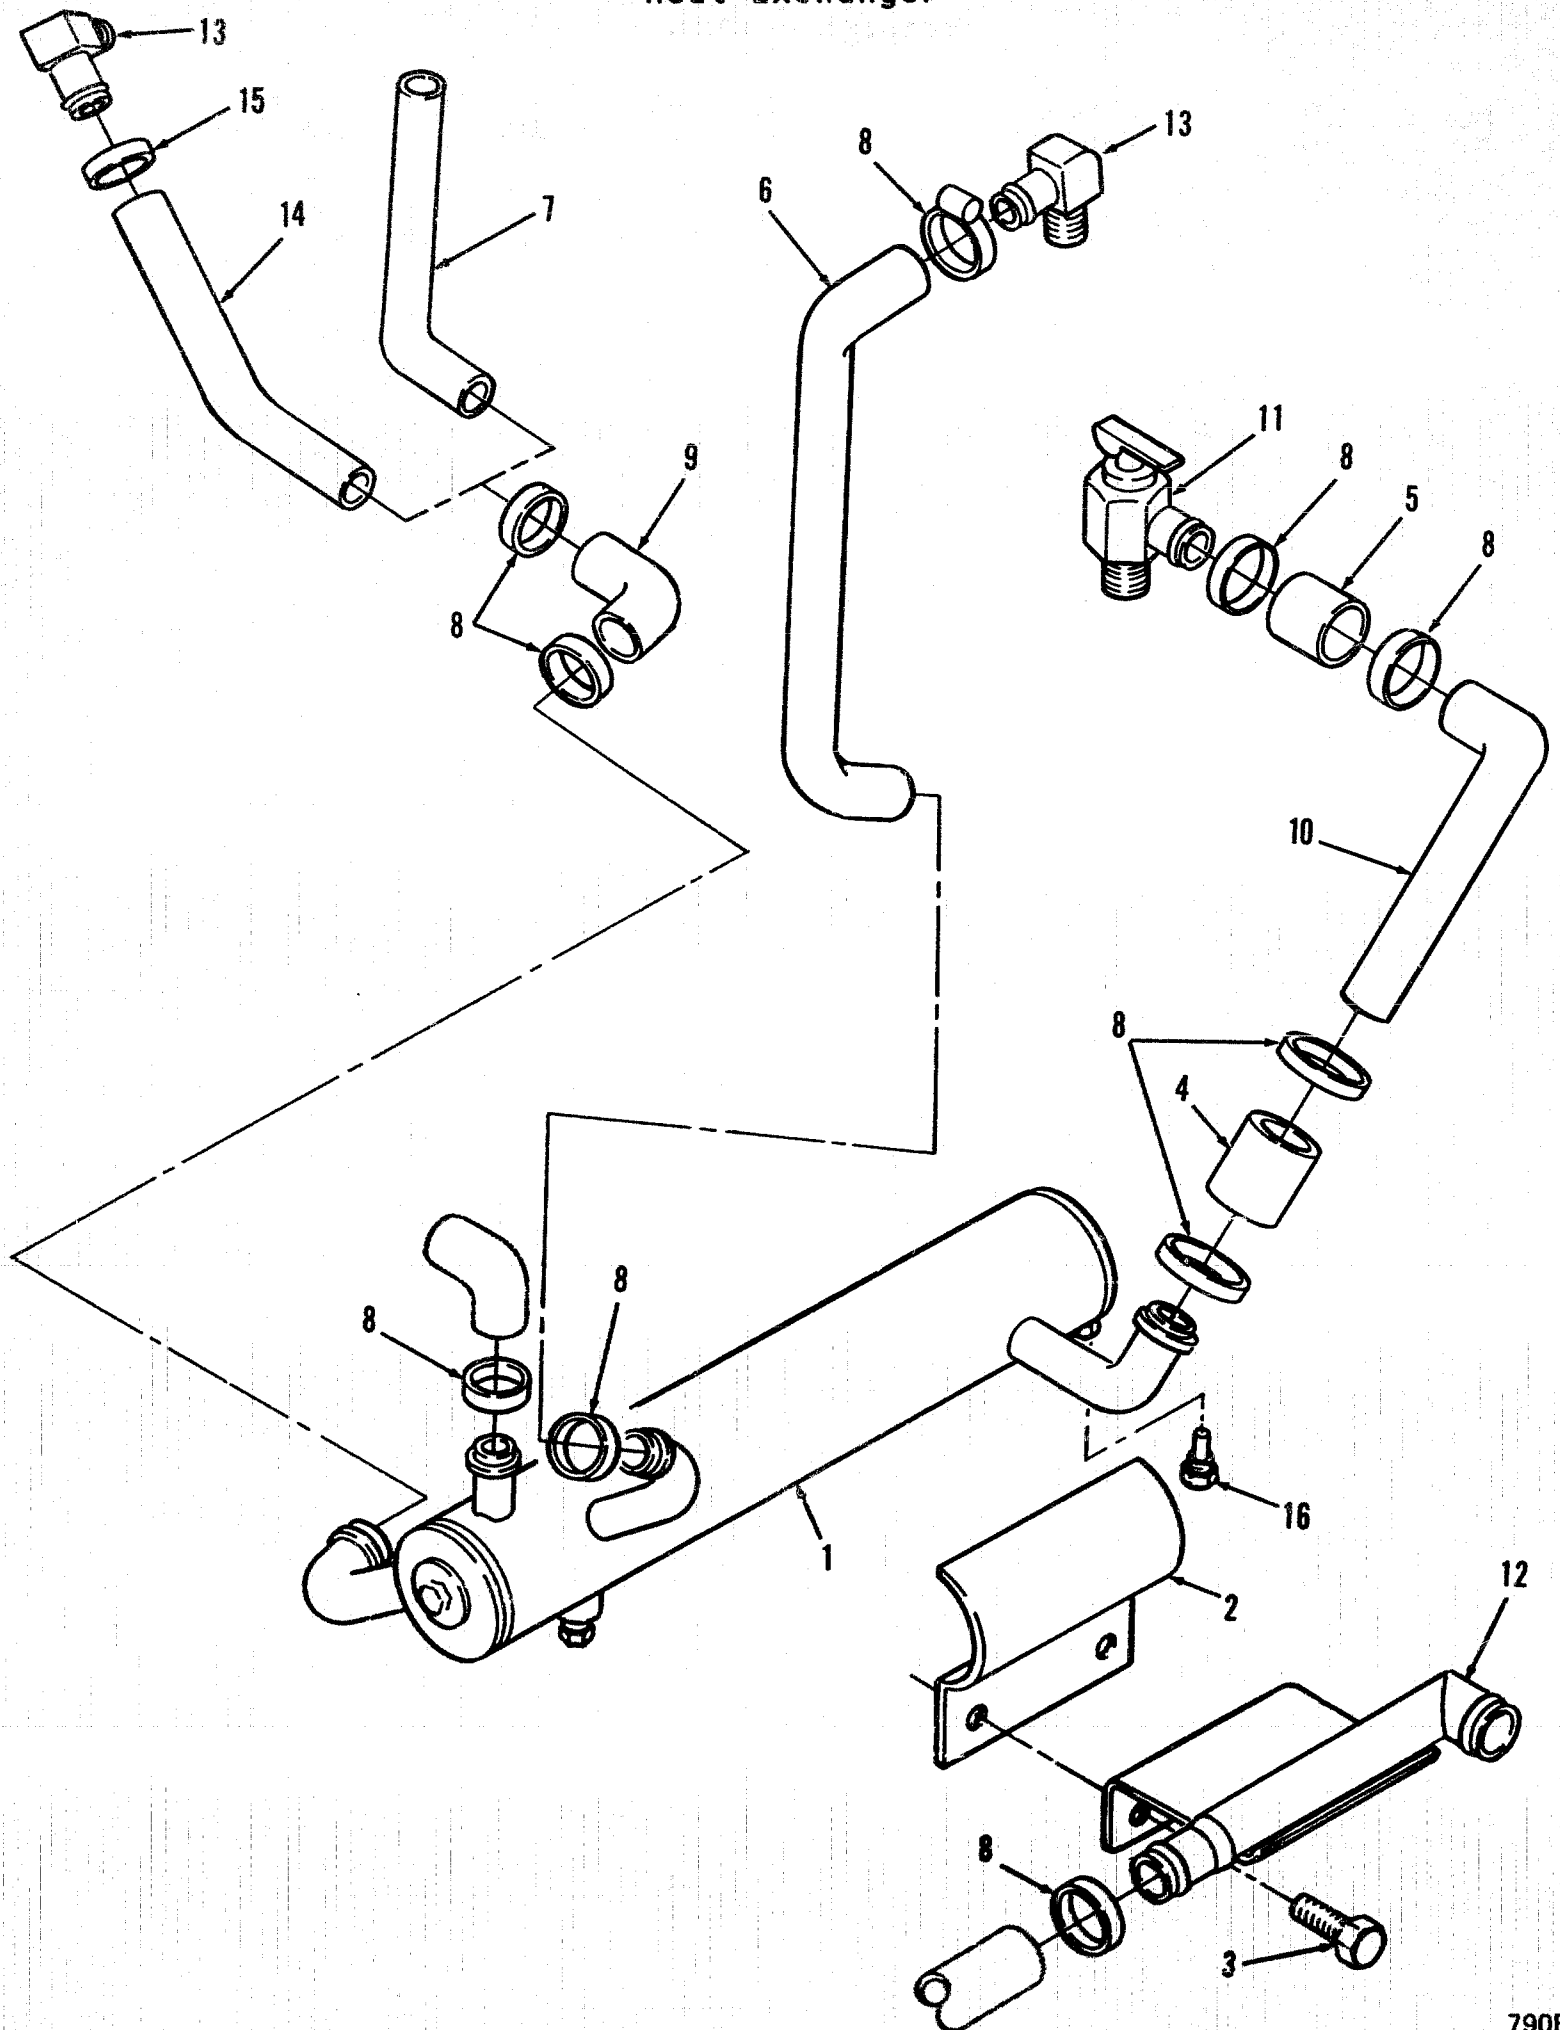

## Heat Exchanger

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130-3506	1	Exchanger, Heat	9			Elbow, Hose
2	130-3507	1	Bracket, Exchanger - Heat		503-1687-02	2	1.78" Long
3	815-0508	2	Screw, Hex Head - Thread Forming (5/16-18 x 3/4")		503-1687-03	1	3.12" Long
4	503-1690-01	1	Hose, Coolant	10	130-3513	1	Tube, Coolant
5	503-1690-02	2	Hose, Coolant	11	504-0170	1	Valve, Bleeder
6	503-1688	1	Hose, Coolant	12	130-3603	1	Bracket, Inlet
7	130-3517	1	Tube, Exchange - Heat	13	502-0425	2	Elbow, Hose (1/2)
8	503-0977	10	Clamp, Hose	14	503-1778	1	Hose, Coolant
				15	503-0976	2	Clamp, Hose
				16	130-1341	1	Pencil, Zinc
 
# Water Pump

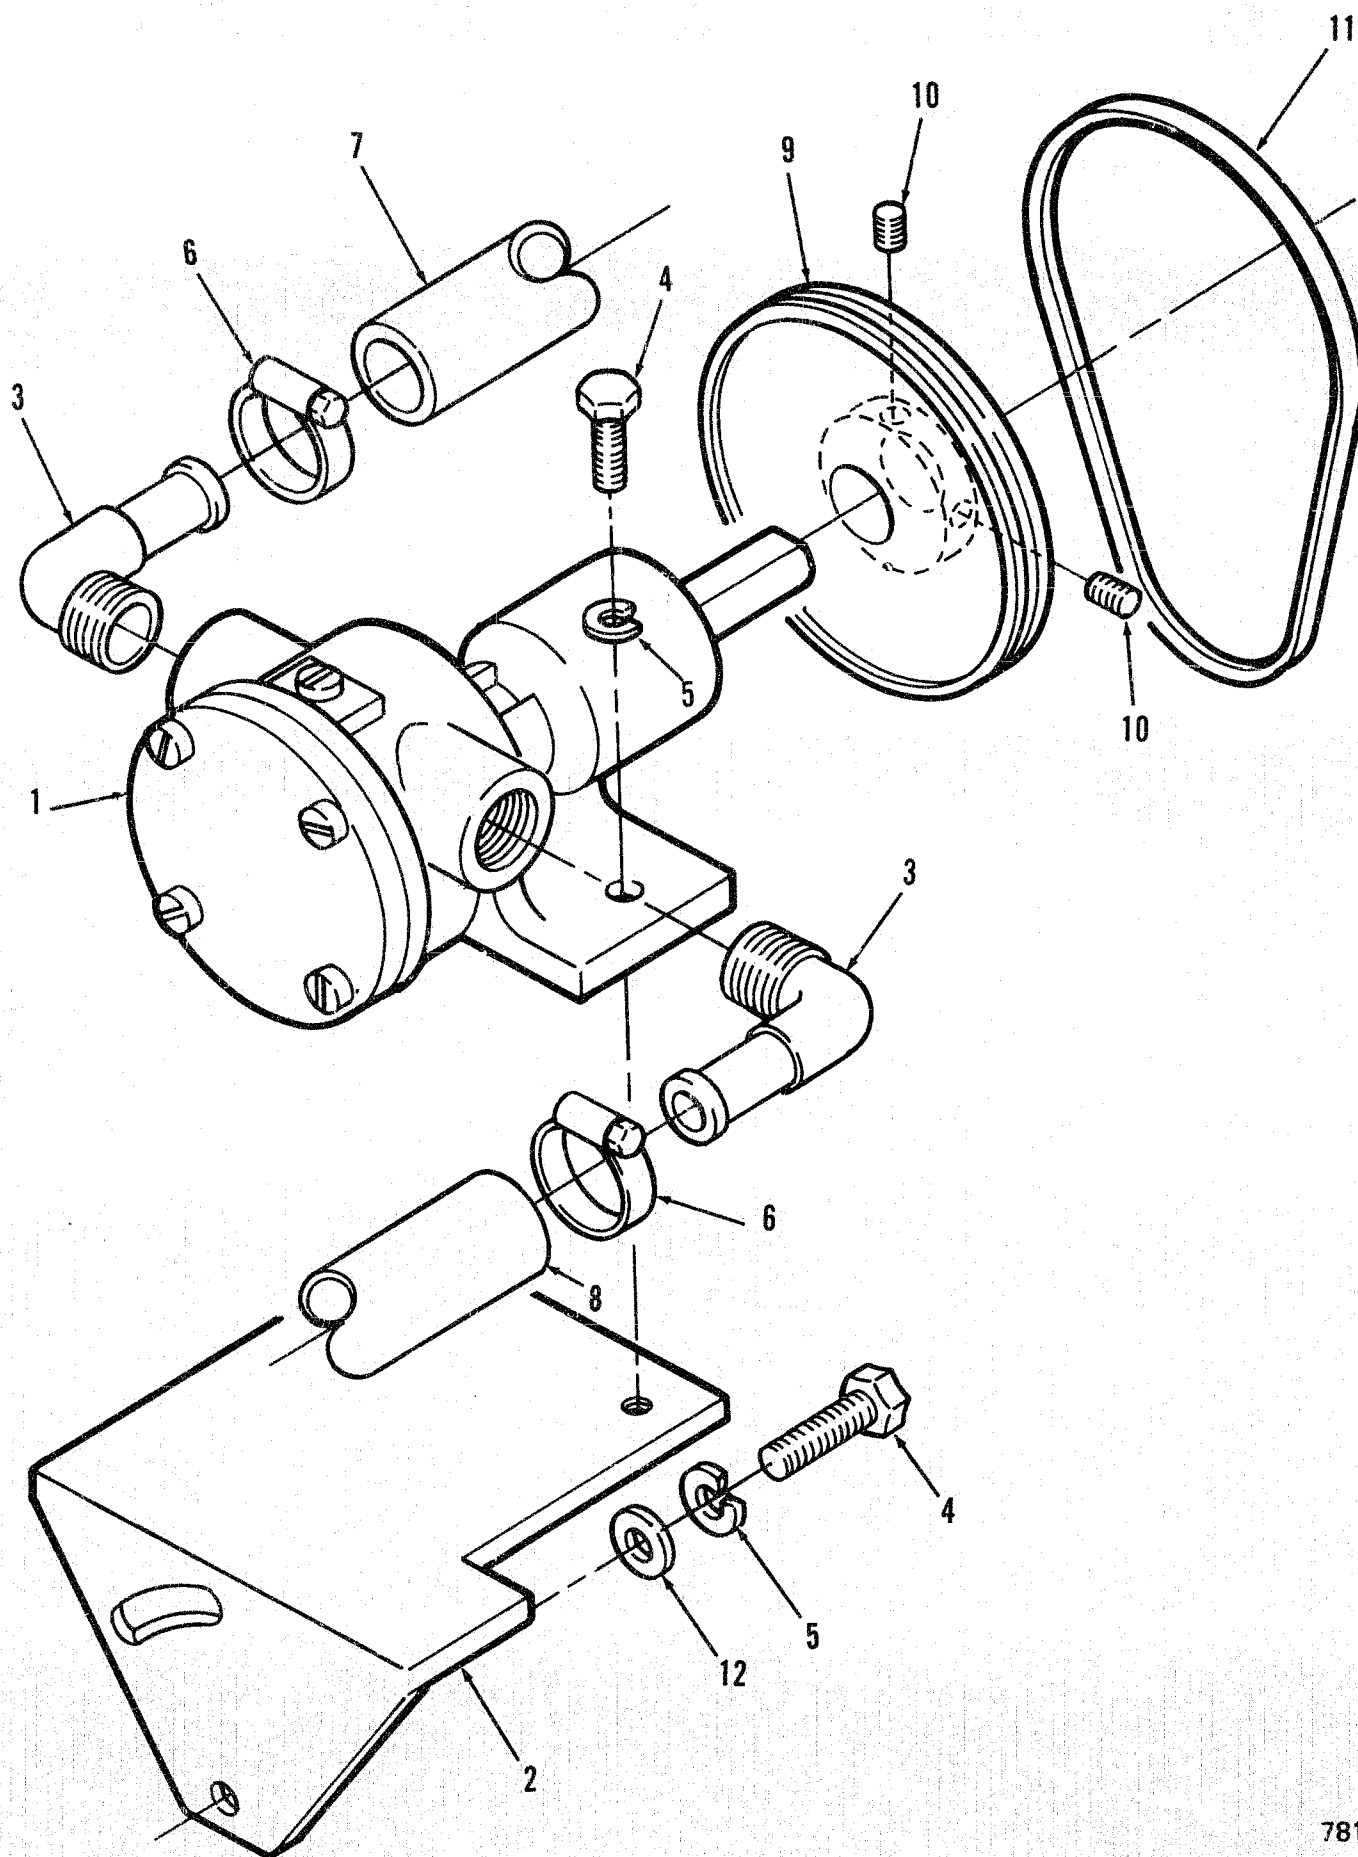


781A

## Water Pump

 REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	132-0284	1	Pump, Water (See Separate Page for Components)	7	503-1690-04	1	Hose - 8.51" Long - Heat Exchanger
2	130-3516	1	Bracket, Pump - Water	8	503-1690-06	1	Hose - 14.51" Long
3	502-0942	2	Elbow, Hose - 90°	9	512-0176	1	Pulley
4	800-0004	2	Screw, Cap - Hex Head (1/4-20 x 5/8")	10	815-0636	2	Screw, Set (#10-32 x 3/8")
5	850-0040	2	Washer, Lock - Spring (1/4")	11	511-0154-03	1	Belt, Pulley
6	503-0977	2	Clamp, Hose	12	526-0018	2	Washer, Flat (1/4")



# Water Pump Components

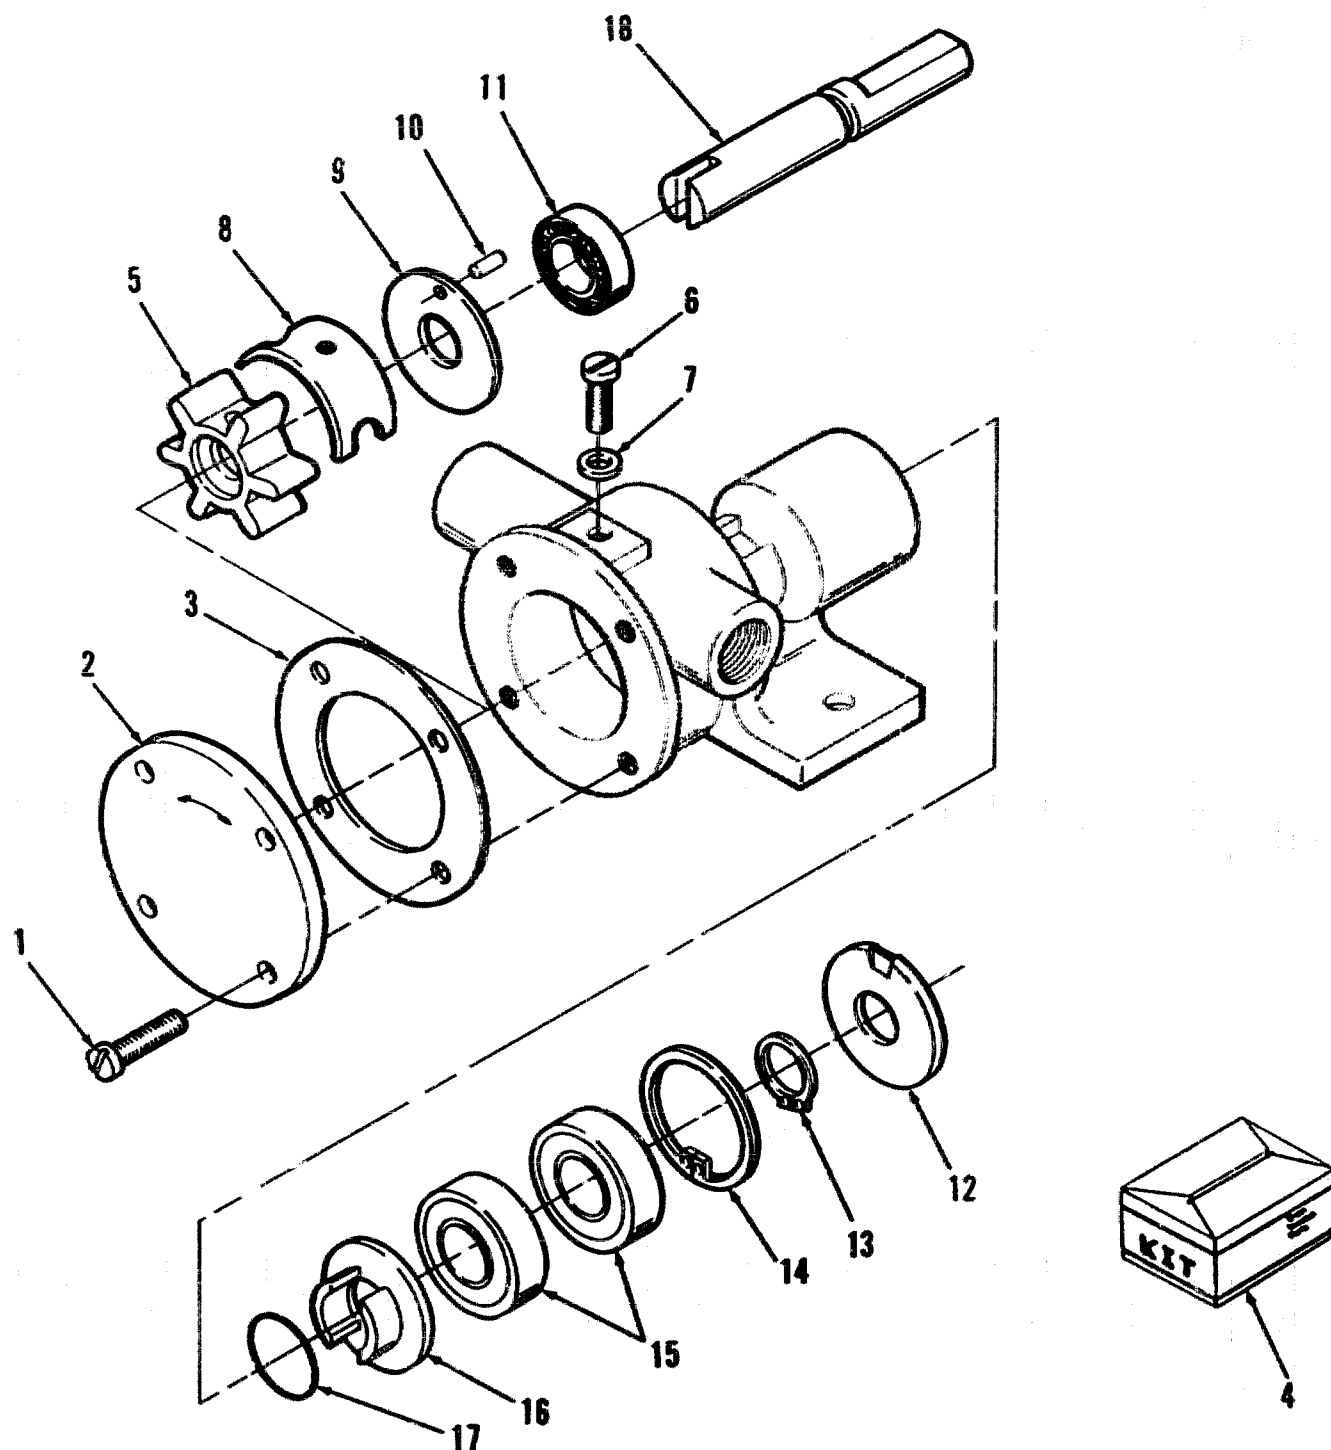


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	132-0284	1	Pump, Water
1	132-0312	4	*Screw, Machine - Bind Hd. Brass
2	132-0306	1	Cover
3	132-0309	1	*Gasket
4	132-0311	1	Kit, Repair (Includes Parts Marked *)
5	132-0310	1	*Impeller
6	132-0302	1	Screw, Machine - Bind Hd. Brass
7	132-0298	1	Washer, Flat - Copper (Special)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
8	132-0305	1	Cam
9	132-0297	1	Plate, Wear
10	132-0295	1	Pin, Straight - Solid
11	132-0308	1	*Seal
12	132-0303	1	Washer, Non-Metallic (Special)
13	132-0296	1	Ring, Retaining
14	132-0299	1	Ring, Retaining
15	132-0300	2	Bearing, Ball
16	132-0304	1	Washer/Spacer - Non-Metallic (Special)
17	132-0301	1	Ring, O
18	132-0307	1	Shaft

\* - Parts Included in 132-0311 Repair Kit.

# Keel Cooling

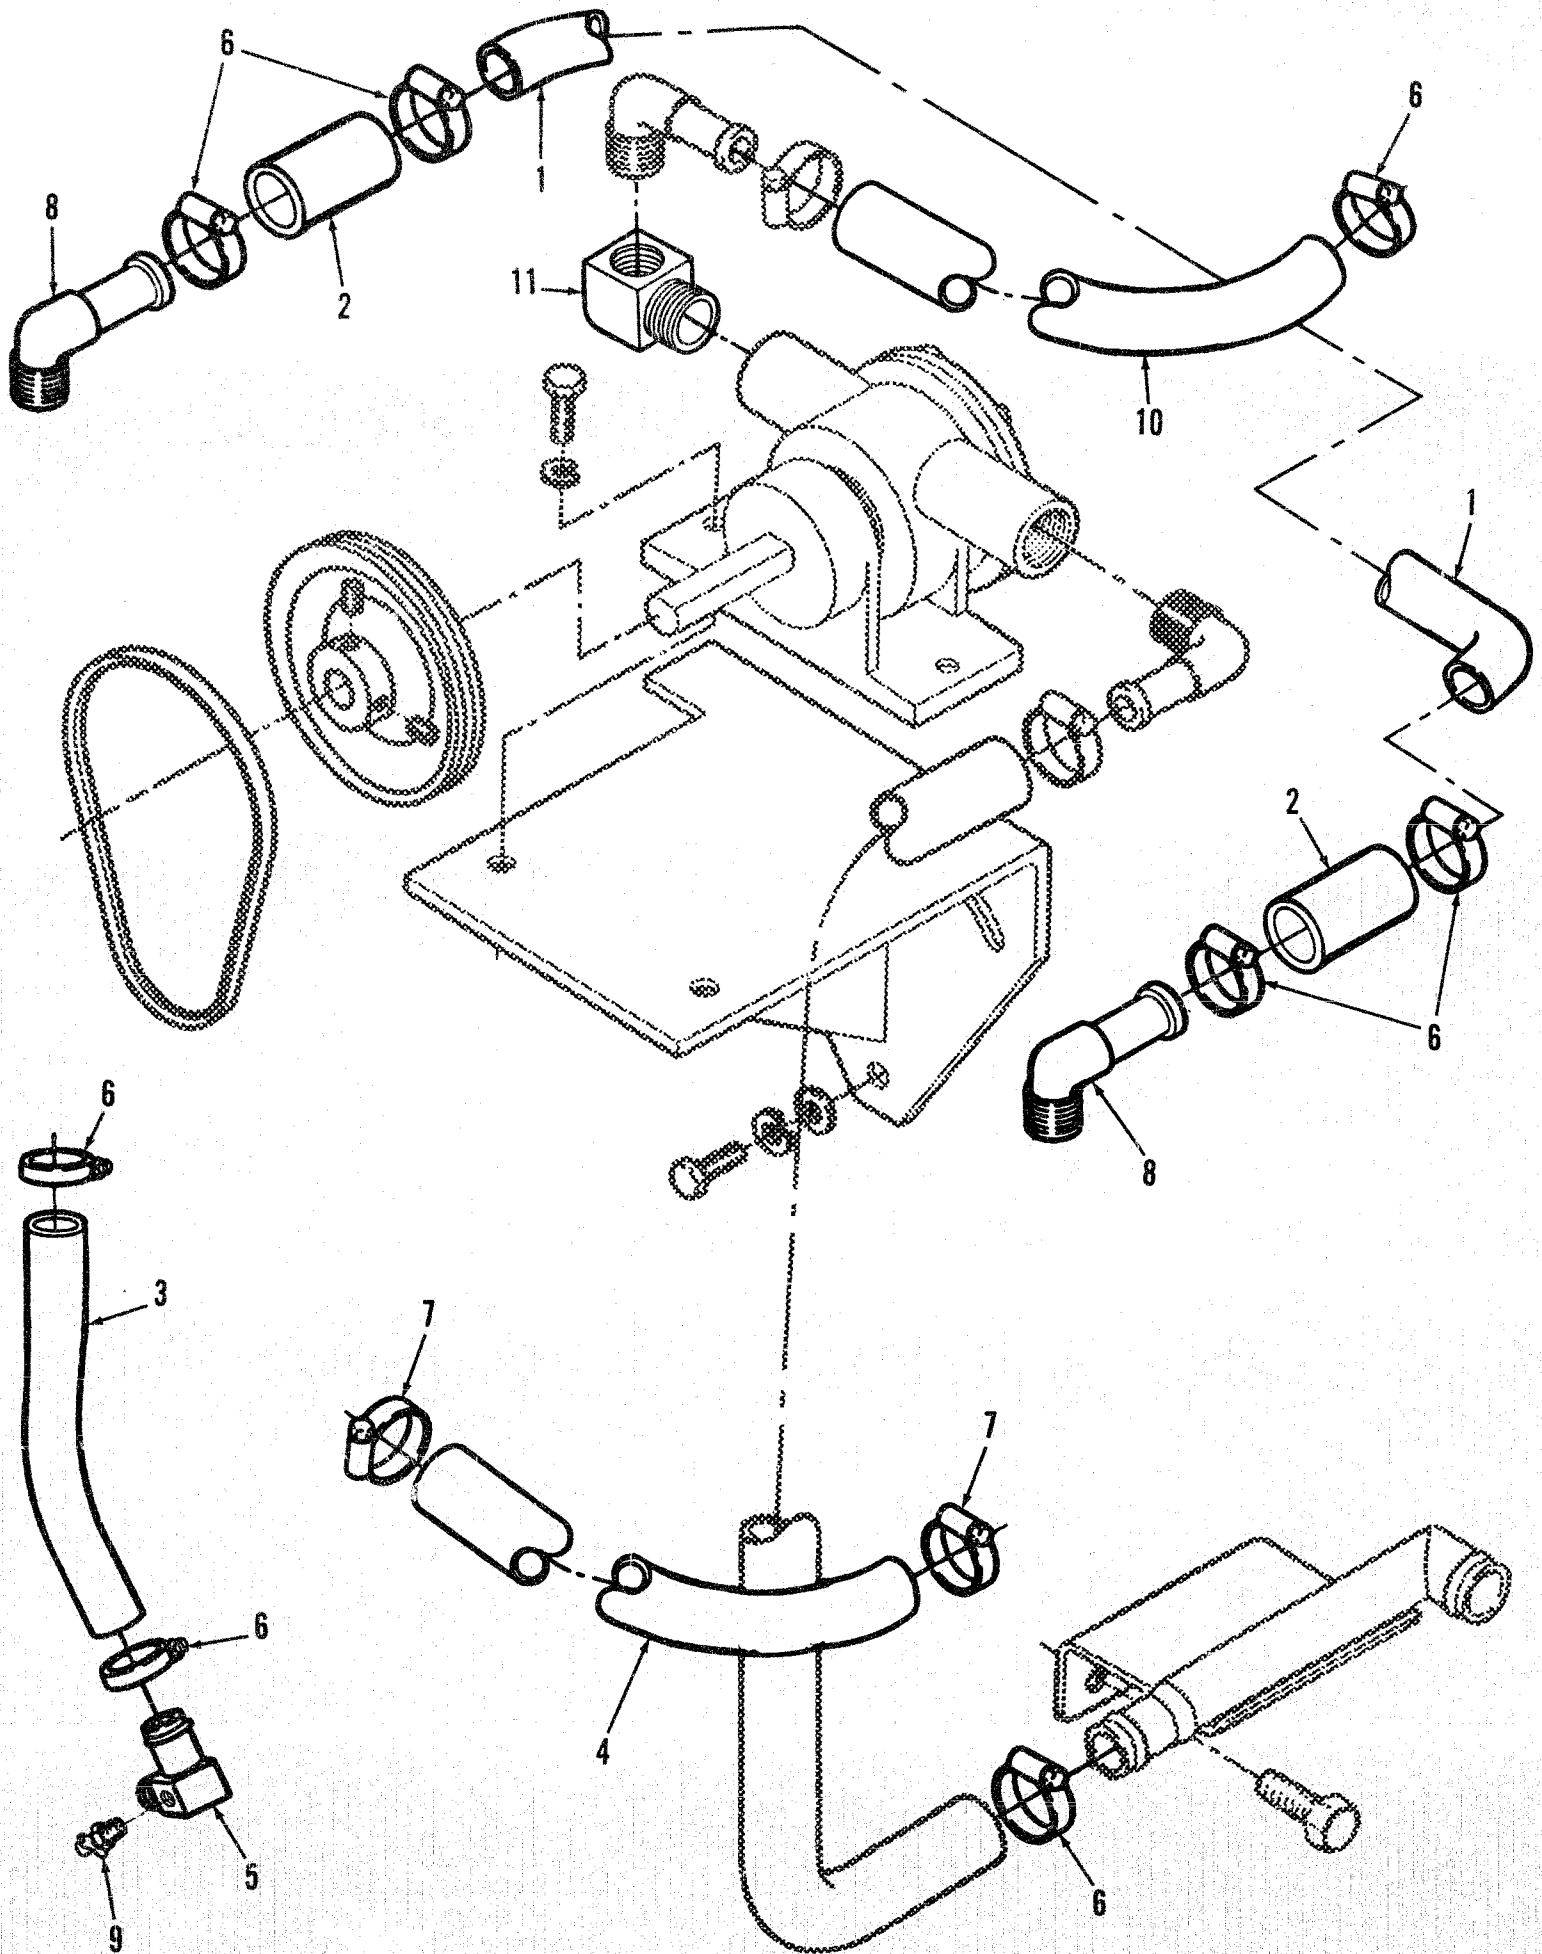 


## Keel Cooling

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130-3512	1	Tube, Coolant
2	503-1690-02	2	Hose, Coolant
3	503-1690-03	1	Hose, Coolant
4	503-1778	1	Hose, Coolant
5	502-1134	1	Elbow, Drain
6	503-0977	8	Clamp, Hose

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
7	503-0976	2	Clamp, Hose
8	502-0942	2	Elbow, Hose (5/8)
9	504-0005	1	Cock, Drain
10	503-1697	1	Hose, Molded
11	502-0075	1	Elbow, Street - 90°
 
# Generator

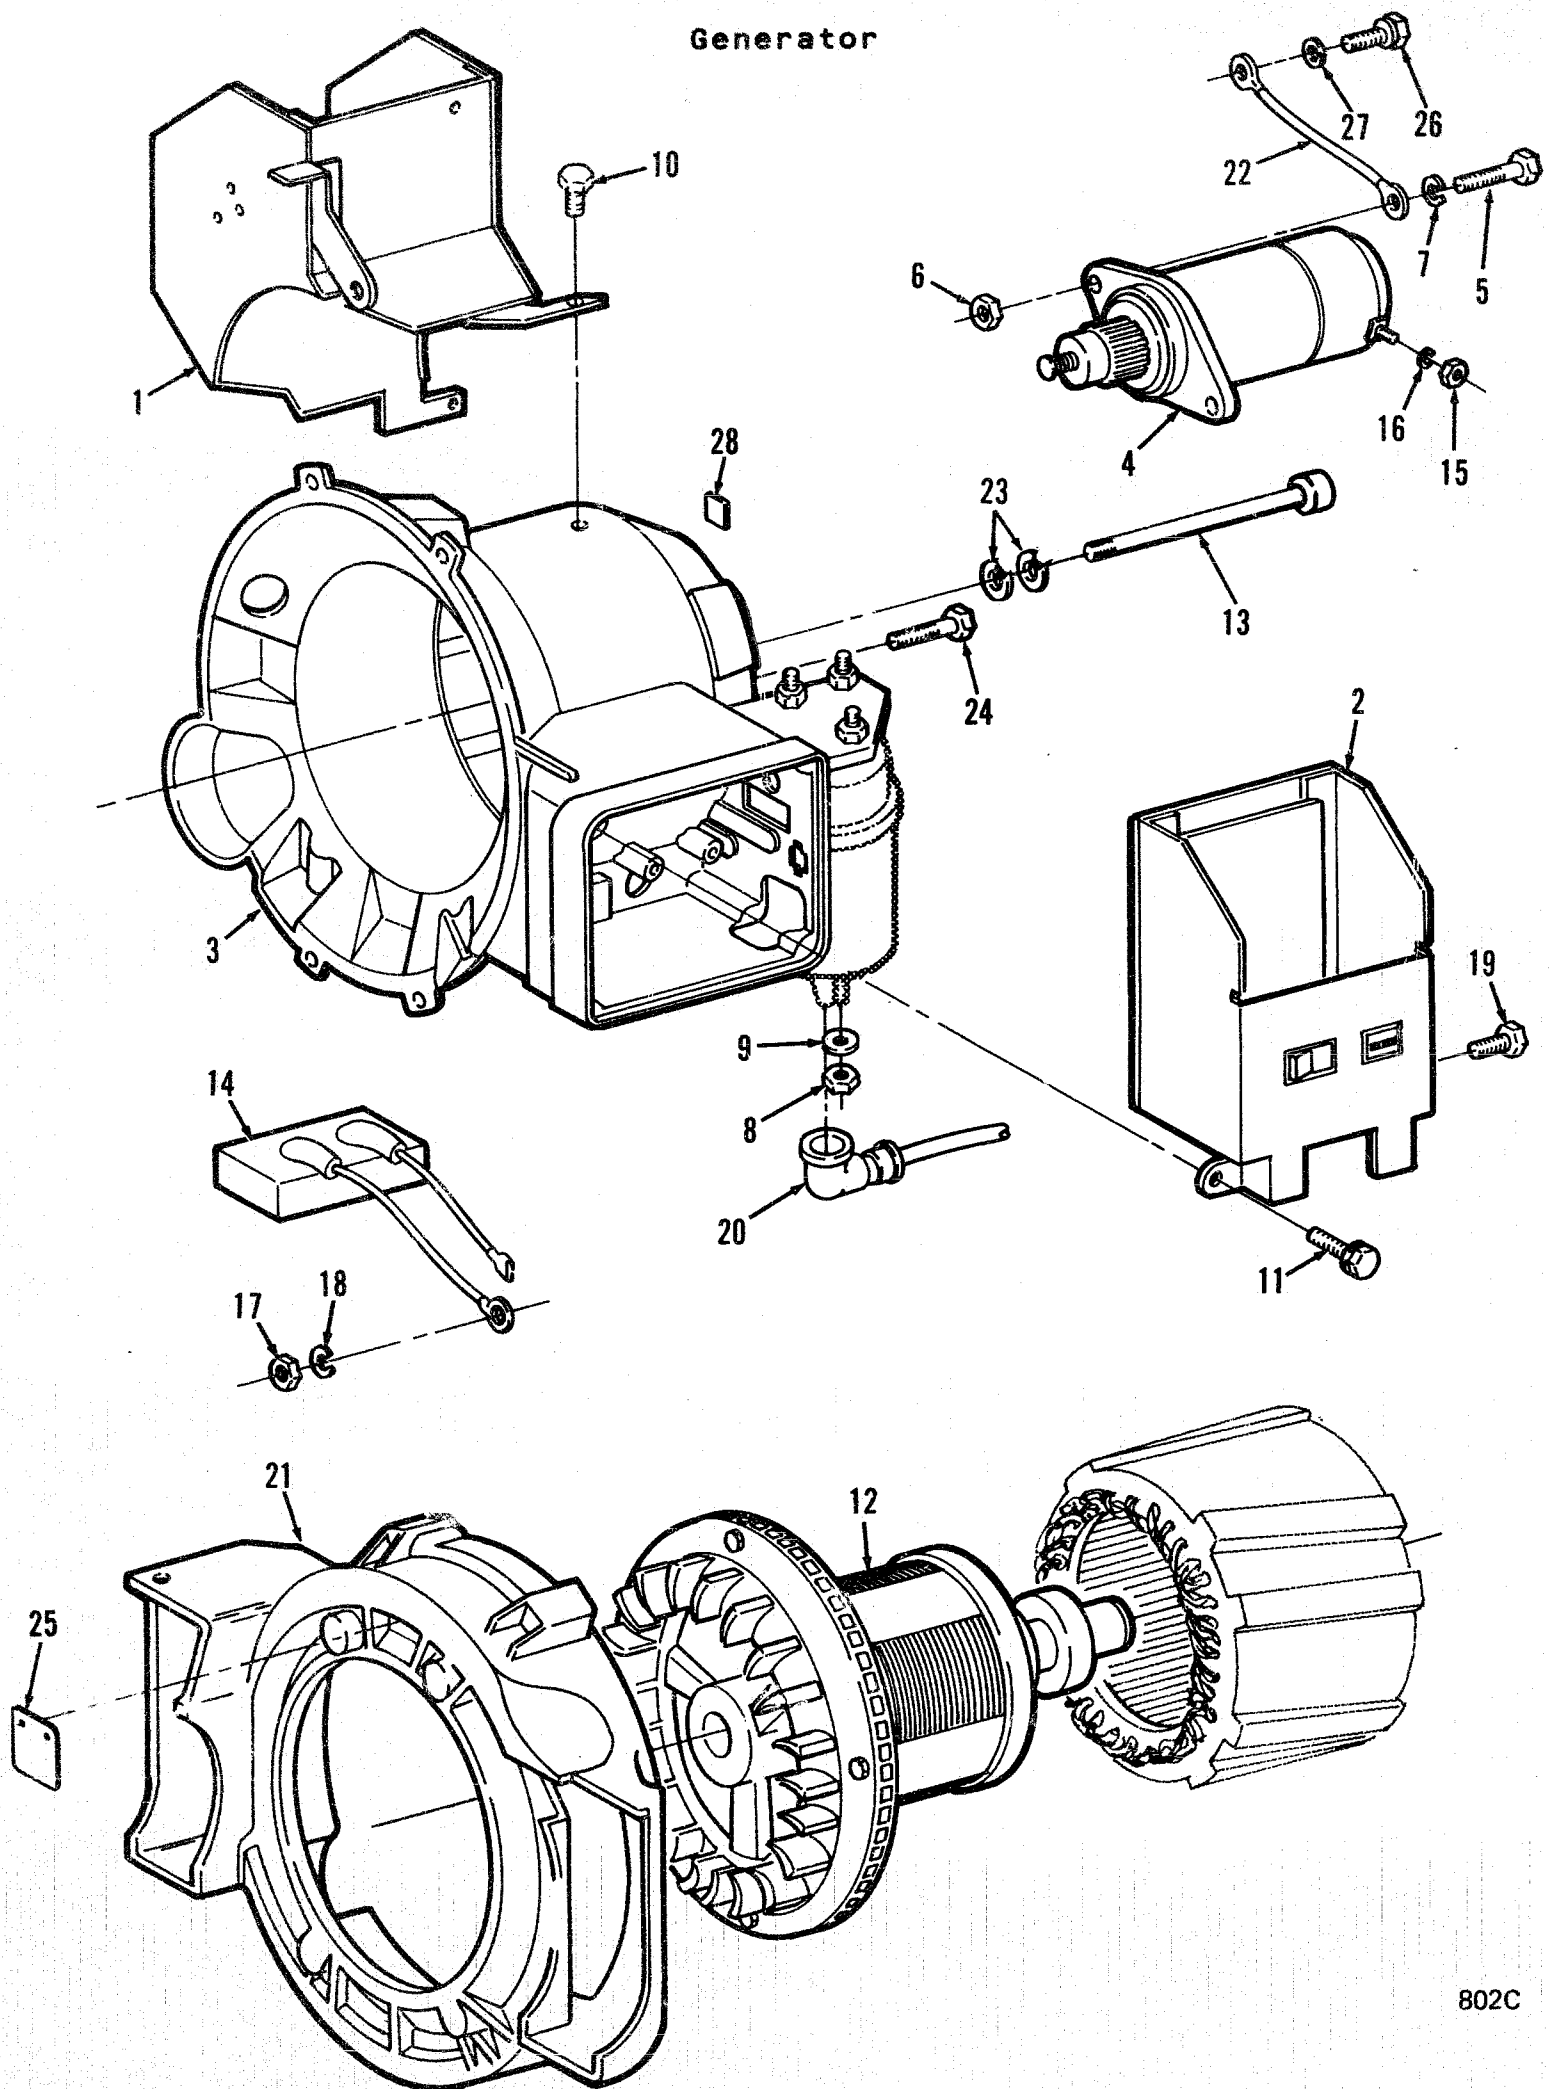


802C

# Generator

 REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	NFS	1	Control, AC (See Separate Page for Components)	16			Washer, Lock - Spring (1/4)
2	NFS	1	Control, DC (See Separate Page for Components)		850-0040	1	All Except 5.0 KW, 1 Pole, 50 Hertz
3	NFS	1	Housing (See Separate Page for Components)		850-0040	2	5.0 KW - 220 Volt, 1 Pole, 50 Hertz
4	191-1630	1	Starter (See Separate Page for Components)	17	868-0002	1	Nut, Hex (5/16-24)
5	800-0052	2	Screw, Cap - Hex Head (3/8-16 x 1-1/2")	18	850-0045	1	Washer, Lock - Spring (5/16)
6	862-0003	2	Nut, Hex (3/8-16)	19	821-0005	3	Screw, Self-Locking - Hex Washer Head
7	850-0050	2	Washer, Lock - Spring (3/8)	20	332-2982	1	Insulator
8	870-0131	2	Nut, Hex - External Tooth (#10-32)	21	231-0320	1	Adapter, Generator (Mach)
9	526-0008	2	Washer, Flat (#10)	22	337-2435	2	Cable, Bond
10	815-0290	4	Screw, Hex Washer Head - Thread Forming (1/4-20 x 5/8")	23	856-0010	2	Washer, Lock - External, Internal Tooth
11	815-0340	2	Screw, Hex Washer Head - Thread Forming (10-32 x 3/8")	24	800-0051	1	Screw, Cap - Hex Head (3/8-16 x 1-1/4")
12	201-3249	1	Rotor	25	166-0822	1	Bracket, Ignition Control
13	802-1039	1	Screw, Socket (7/16-14 x 11.84)	26	815-0610	1	Screw, Thread Forming - Hex Washer Head (1/4-20 x 1")
14	320-1667	1	Breaker, Circuit	27	856-0006	1	Washer, Lock - External, Internal Tooth (1/4")
15			Nut, Hex (1/4-20)	28	98-2575	1	Label, Negative - Battery
	862-0001	1	All Except 5.0 KW, 1 Pole, 50 Hertz				
	862-0001	2	5.0 KW - 220 Volt, 1 Pole, 50 Hertz				


# Control (AC)

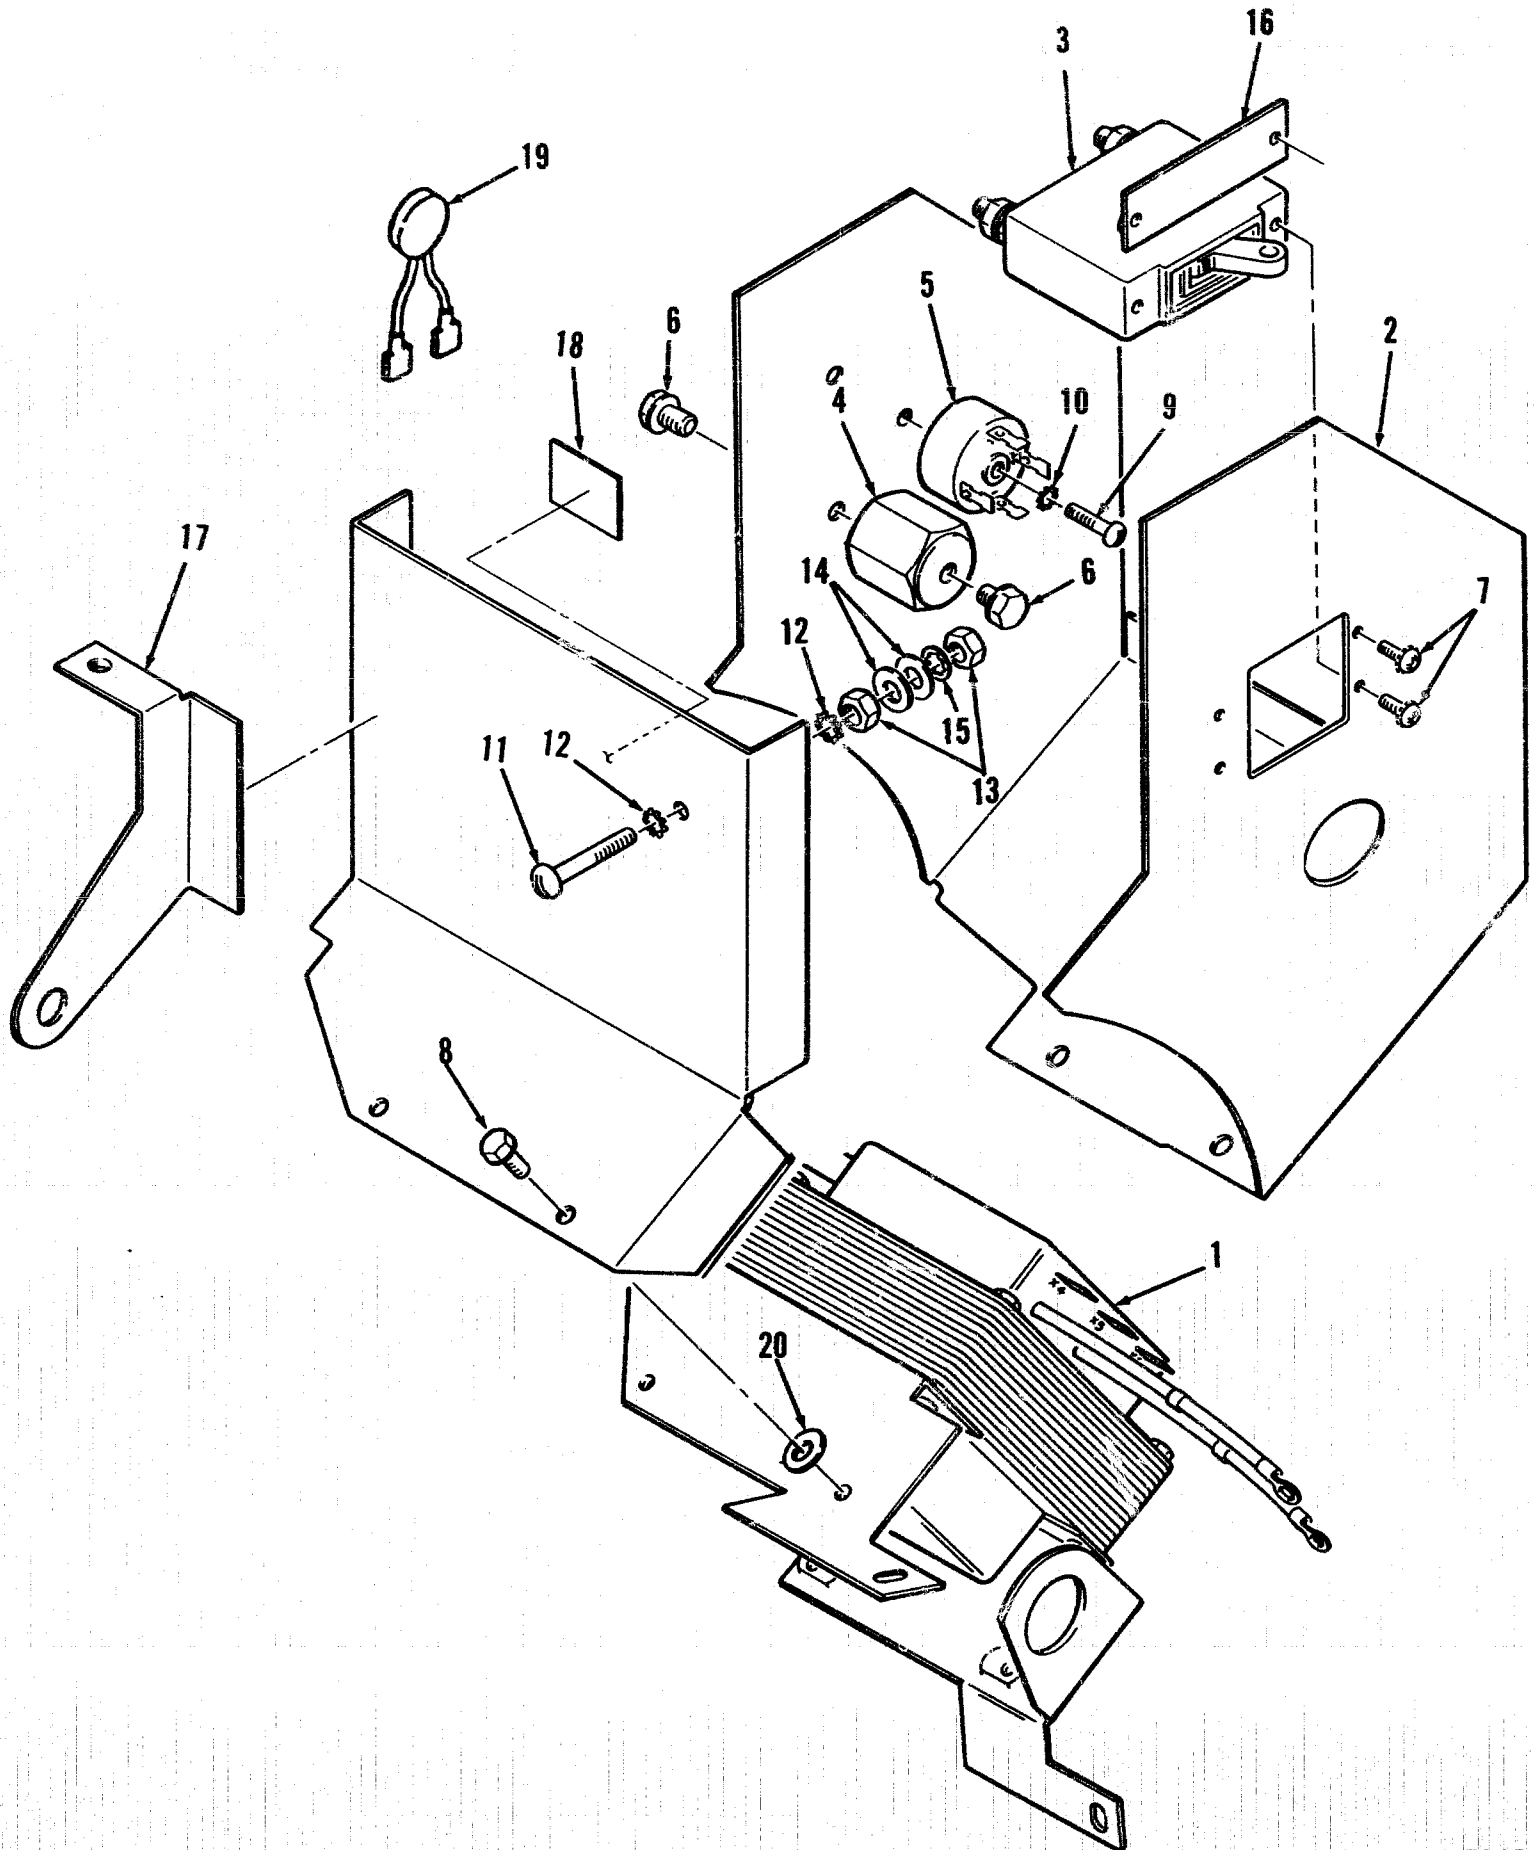

# Control (AC)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	315-0718-01	1	Transformer, Regulator 50 Hertz	8			Screw, Self-Locking - Hex Head (1/4-20 x 1/2")
2	319-0673	1	Box, Control - AC	821-0010	4		All Except 5.0 KW - 1 Pole 220 Volt, 50 Hertz
3			Breaker, Circuit 1 Pole	821-0010	5		5.0 KW, 1 Pole, 220 Volt, 50 Hertz
	320-1672-01	1	Used on 4.5 KW Units 60 Hertz	9	813-0103	1	Screw, Machine - Round Head (#10-32 x 3/4")
	320-1672-02	1	Used on 6.5 KW Units 60 Hertz	10	856-0003	1	Washer, Lock - External Internal Tooth (#10)
	320-1672-03	1	Used on 5.0 KW Units 50 Hertz	11	810-0155	1	Screw, Machine - Round Head (1/4-20 x 1-1/4")
			2 Pole	12	856-0006	2	Washer, Lock - External, Internal Tooth (1/4")
	320-1666-01	1	Used on 4.5 KW Units 60 Hertz	13	871-0015	2	Nut, Hex (1/4-20)
	320-1666-02	1	Used on 6.5 KW Units 60 Hertz	14	526-0052	2	Washer, Flat (1/4")
	320-1666-03	1	Used on 5.0 KW Units 50 Hertz	15	854-0014	1	Washer, Lock - Internal too (1/4")
4	332-2370	2	Standoff, Insulator	16	319-0834	1	Plate, Circuit Breaker (Use on 1-Pole, 4.5 KW, 5.0 KW 6.5 KW Units)
5	305-0696	1	Bridge, Rectifier	17	319-0850	1	Bracket, Control - AC
6	821-0008	4	Screw, Self-Locking - Hex Head (1/4-20 x 5/16")	18	98-6197	1	Label, Neutral
7	815-0549	4	Screw, Pan Head (#6-32 x 1/4")	19	305-0703	1	Suppressor, Voltage
				20	526-0016	1	Washer, Flat (1/4") - 5.0 KW, 1 Pole, 220 Volt, 50 Hertz
 
# Control (DC)

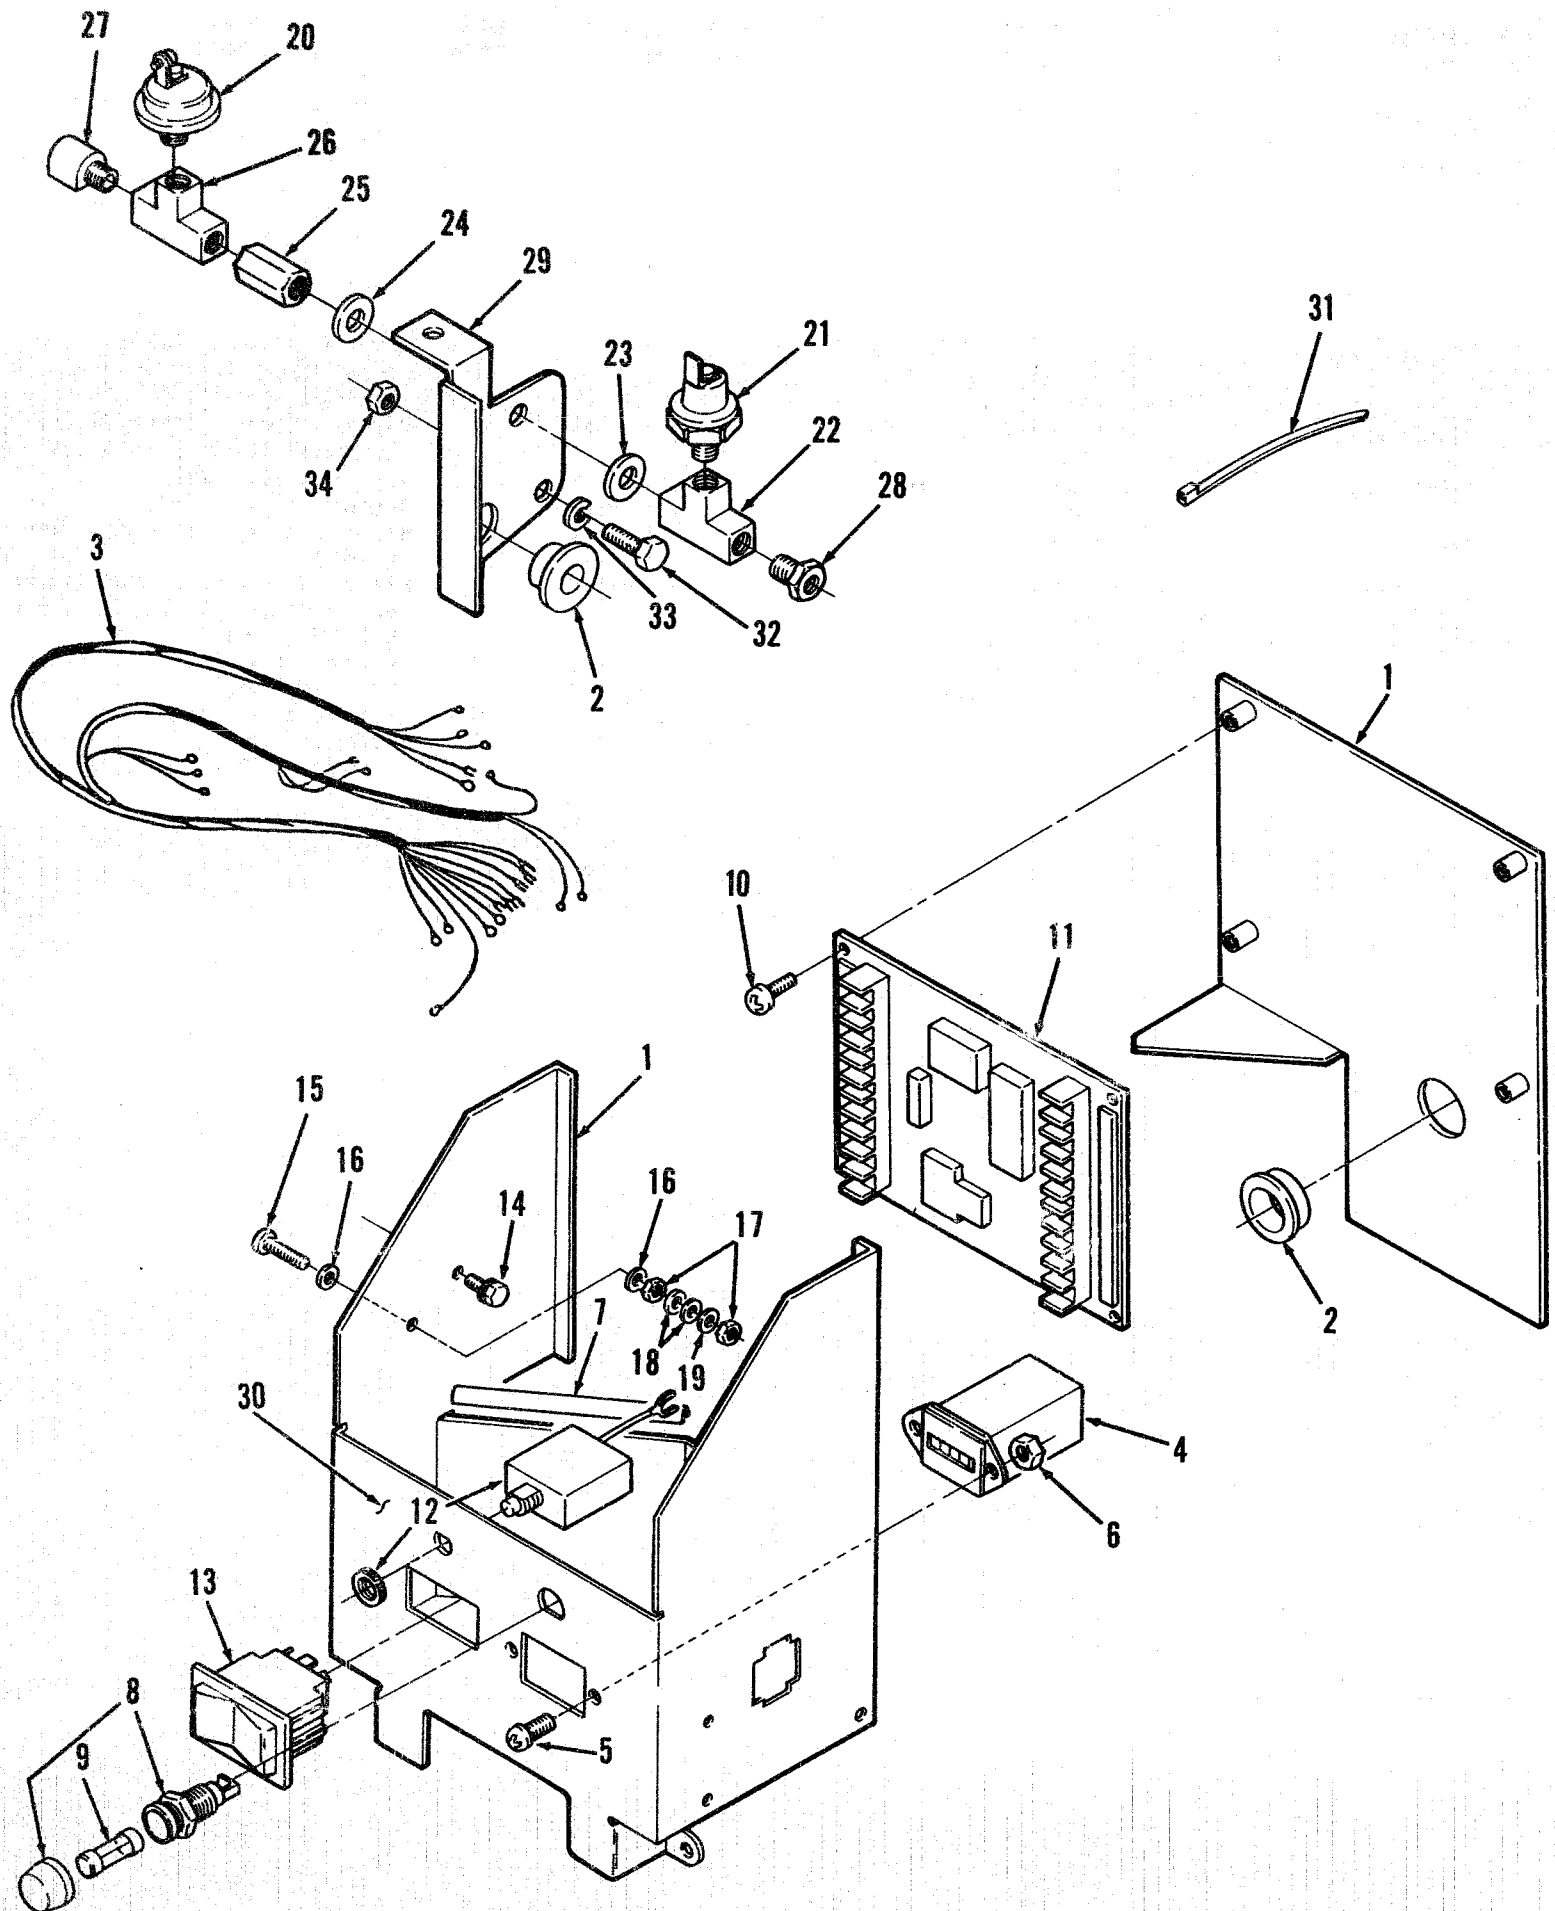




# Control (DC)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319-0727	1	Box, Control (Includes Back)	18	526-0052	2	Washer, Flat (1/4)
2	508-0251	2	Bushing	19	854-0014	1	Washer, Tooth - Internal (1/4)
3	338-2464	1	Harness, Control (DC)	20	309-0104	1	Switch, Low Oil Pressure - 1 Terminal, Close at 5 PSI
4	302-0885	1	Meter, Totalizing - Time	21	309-0594	1	Switch, Low Oil Pressure - 1 Terminal, Open at 6.5 to 9.5 PSI
5	815-0385	2	Screw, Machine - Round Head (#6-32 x 1/2")	22	502-0079	1	Tee, Low Oil Pressure Switch
6	870-1183	2	Nut, Hex - External Tooth (#6-32)	23	854-0023	1	Washer, Lock - Internal Tooth (7/16)
7	508-1052	1	Edging	24	526-0026	1	Washer, Flat (3/8)
8	321-0305	1	Holder, Fuse	25	502-0175	1	Adapter, Pipe (1/8)
9	321-0146	1	Fuse, 10 Amp	26	502-0058	1	Tee, Pipe - Special
10	815-0544	4	Screw, Machine - Round Head (#6-32 x 1/2")	27	502-0002	1	Elbow, Male - Inverted
11	300-2604	1	PCB, Monitor - Engine	28	502-0028	1	Plug, Pipe - Hex Head (1/8)
12	320-1141	1	Breaker and Terminal	29	319-0725	1	Bracket, Control
13	308-0852	1	Switch, Rocker	30	98-6109	1	Silkscreen
14	821-0004	1	Screw, Self-Locking - Hex Washer Head (10-32 x 5/16")	31	332-1445	3	Tie, Cable
15	810-0155	1	Screw, Machine - Round Head (1/4-20 x 1-1/4")	32	800-0052	1	Screw, Cap - Hex Head (3/8-16 x 1-1/2")
16	856-0006	2	Washer, Tooth - External, Internal (1/4)	33	850-0050	1	Washer, Lock (3/8)
17	871-0016	2	Nut, Hex (1/4-20)	34	862-0003	1	Nut, Hex (3/8-16)
 
# Stator Housing

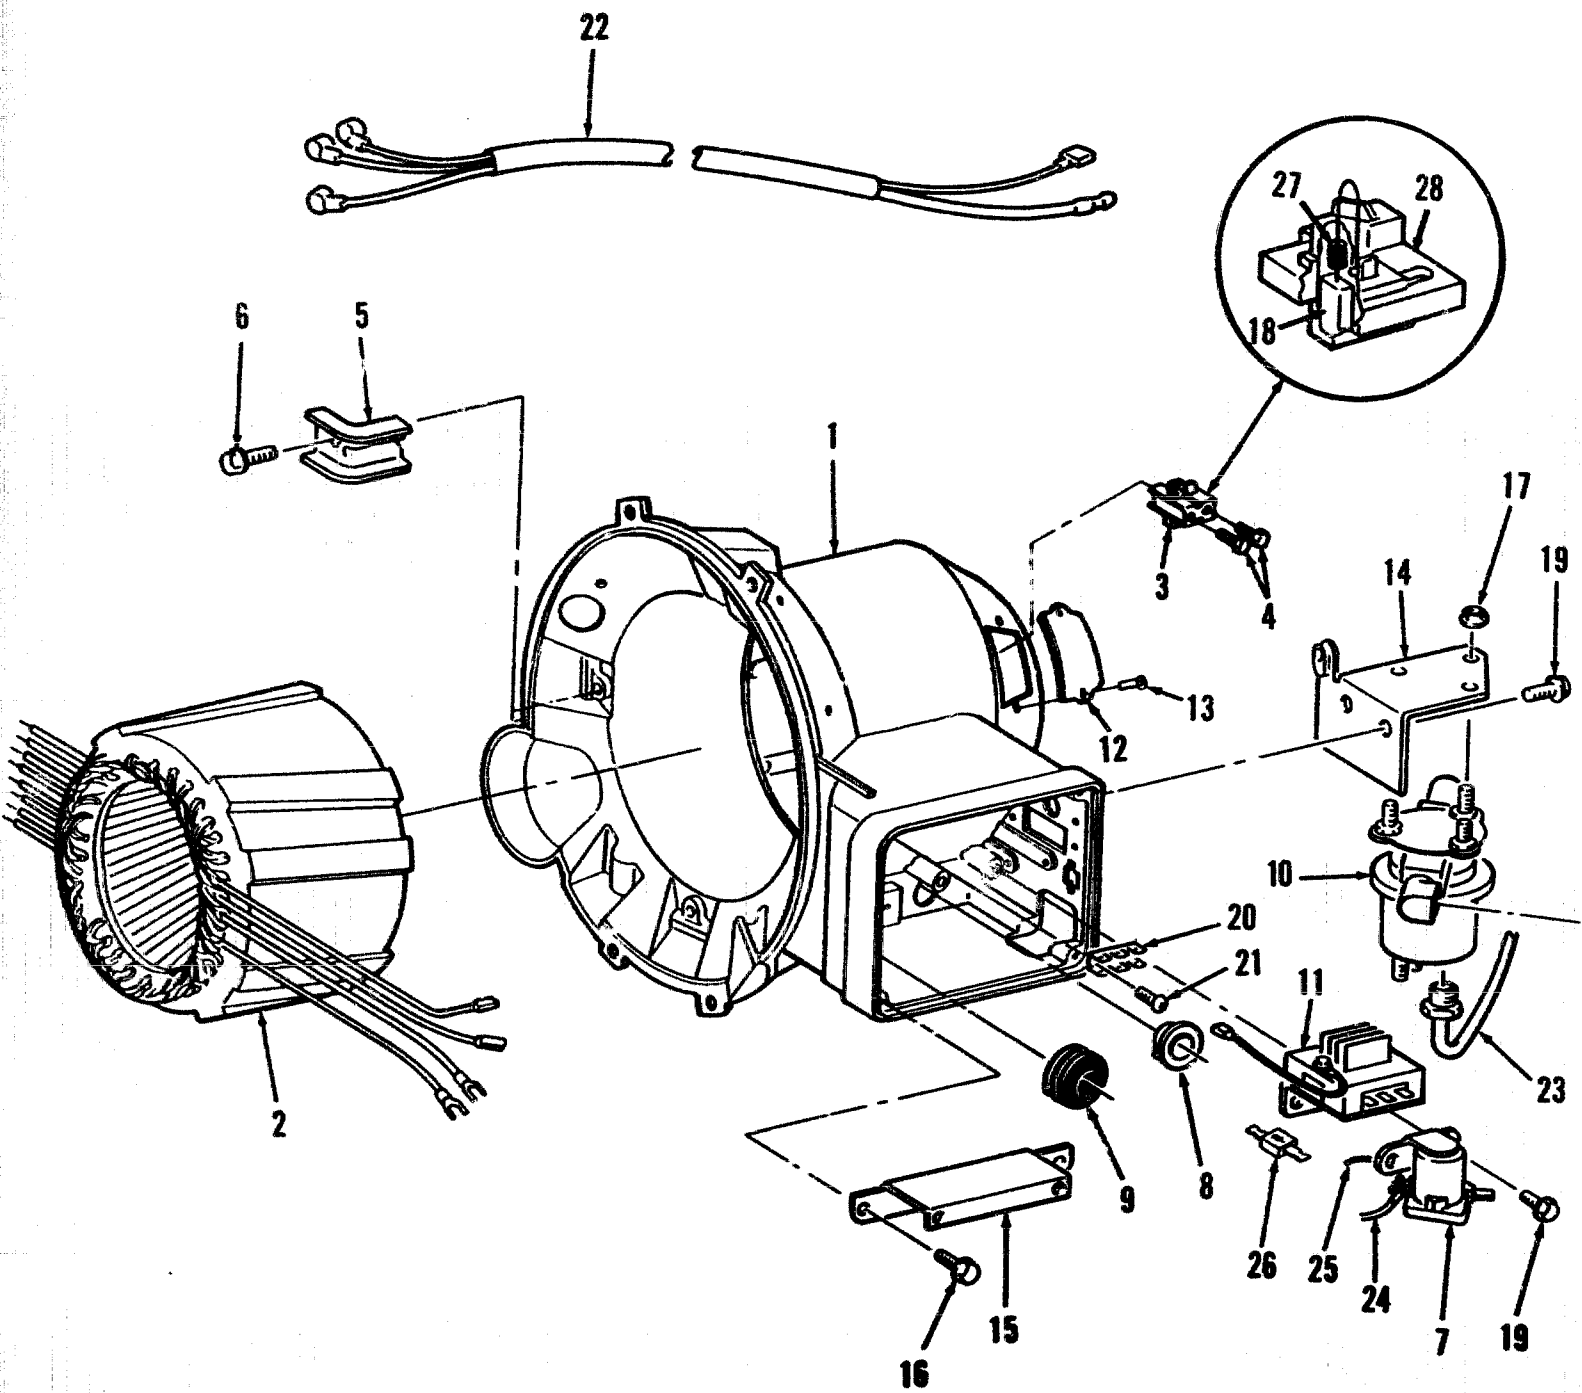


792B

## Stator Housing

 REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	220-3977-01	1	Housing, Machine - Stator	14	149-2257	1	Bracket, Pump - Fuel
2	220-4257-01	1	Stator, Wound	15	319-0666	1	Bracket, Isolation - DC
			4.5 MCE - Voltage Code A, B	16	815-0340	2	Screw, Thread Forming - Hex Washer Head (10-32 x 3/8")
			6.5 MCE - Voltage Code A, B	17	870-0212	3	Nut, Flange - Self-Locking (1/4-20)
	220-4257-02	1	5.0 MCE - Voltage Code M	18	214-0103	2	*Brush, Generator
			50 Hertz	19	815-0290	4	Screw, Thread Forming - Hex Washer Head (1/4-20 x 5/8")
3	212-1285	1	Block, Generator Brush (Includes Parts Marked *)	20	332-1815	1	Tab, Terminal
4	815-0359	2	Screw, Thread Forming - Hex Head (10-32 x 7/8")	21	815-0387	2	Screw, Thread Cutting - Phillip Head (#6-32 x 1/4")
5	232-3156	4	Clamp, Stator	22	338-2507	1	Harness, Block - Brush
6	815-0646	4	Screw, Countersunk - Thd Form (1/4-20 x 3/4")	23	149-2270	1	Line, Fuel
7	307-2344	1	Relay, Solenoid - Start	24	226-2426	1	Lead, Starter
8	508-0251	1	Bushing	25	226-4013	1	Lead, Start Solenoid
9	508-0309	2	Grommet	26	357-0067	1	Rectifier, Silicon
10	149-2159	1	Pump, Fuel	27	212-1276-03	2	*Spring, Generator Brush
11	305-0832	1	Regulator (See Separate Page for Components)	28	212-1286	1	*Block, With Terminal
12	212-1274	1	Cover, Block Brush				
13	815-0181	2	Screw, Hex Head Thread Cutting - External Tooth (10-32 x 1/2")				

\* - Parts Included in 212-1285 Generator Brush Block

## Remote Control Panel (Basic)

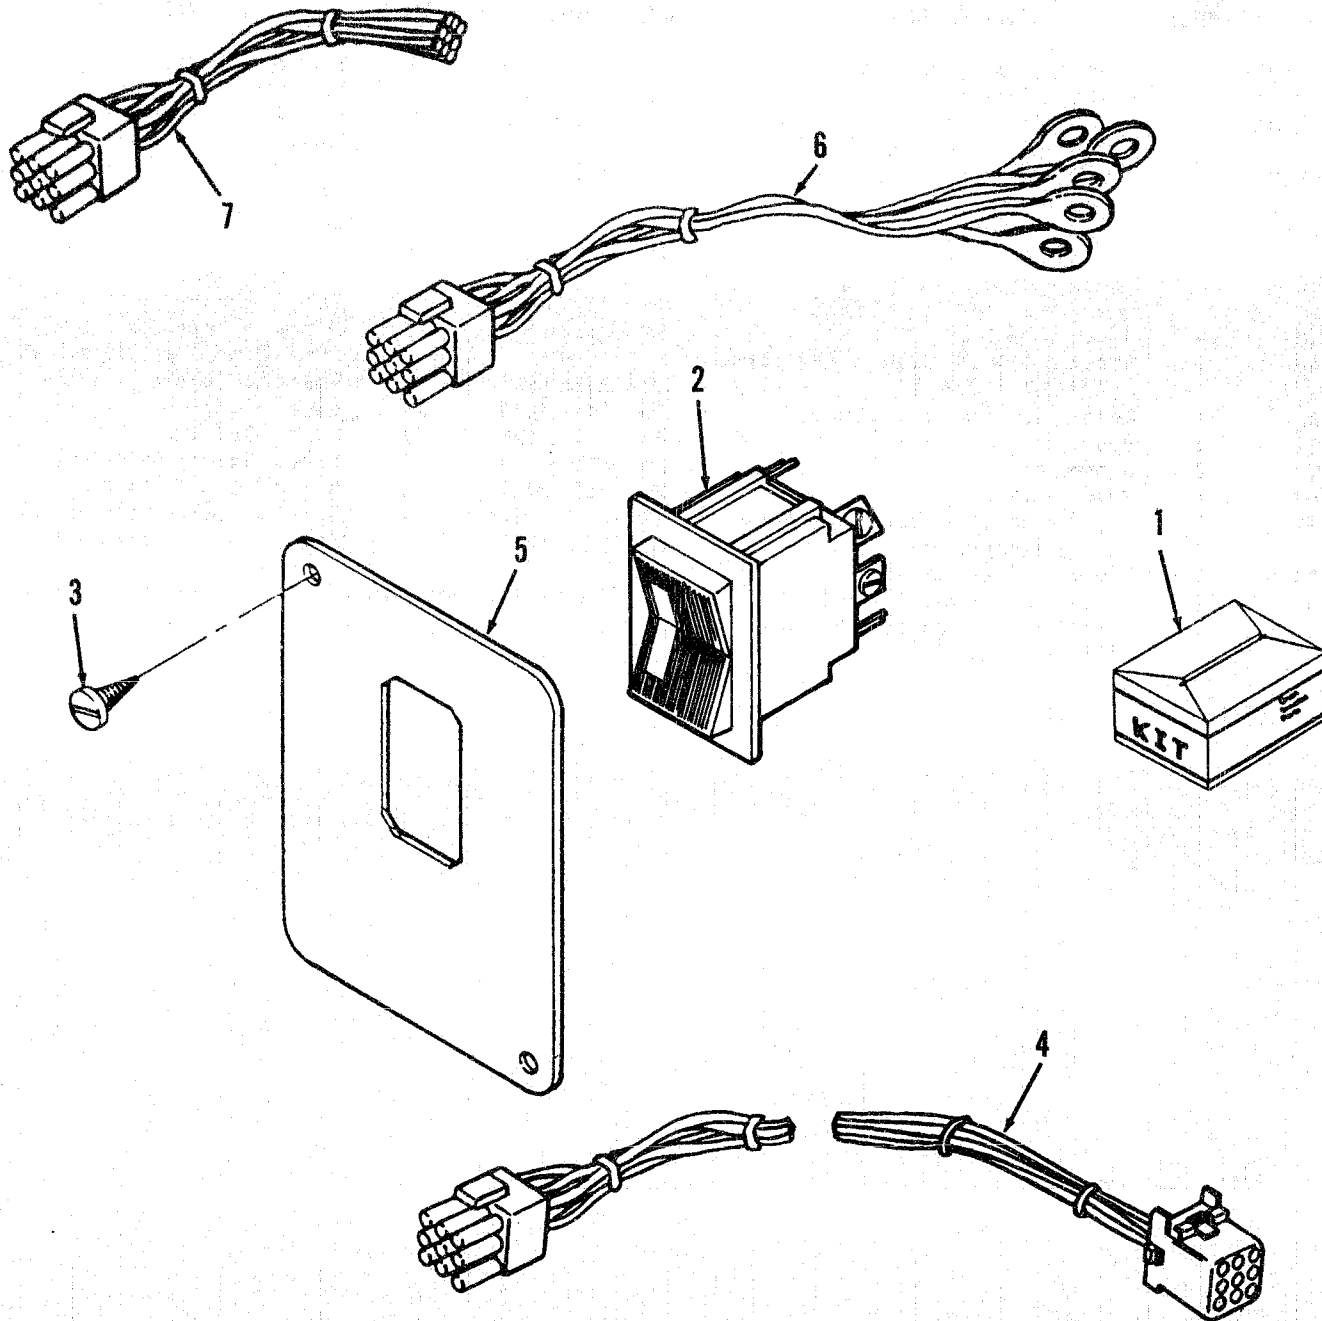


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300-3468	1	Kit, Panel - Control, Remote (Includes Parts Marked *)
2	308-0827	1	*Switch, Rocker
3	815-0380	2	*Screw, Wood - Oval Head Cross Recessed (#5 x 1/2")
4			Harness, Wiring
	338-2237	1	Fifteen Feet
	338-2238	1	Twenty-Five Feet
	338-2354	1	Forty-Five Feet

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	319-0491	1	*Panel, Control (Does Not Include Front & Back Decals)
	98-5946	1	Decal, Panel - Rear
	98-5949	1	Decal, Panel - Front
6	338-2362-01	1	Harness, Wiring - Remote Control Panel - 5 Wire, 9 Pin
7	338-2102	1	Harness, Remote - 9 Pin, 8 Wire

\* - Parts Included in 300-3468 Remote Control Panel Kit.

## Remote Control Panel (Deluxe)

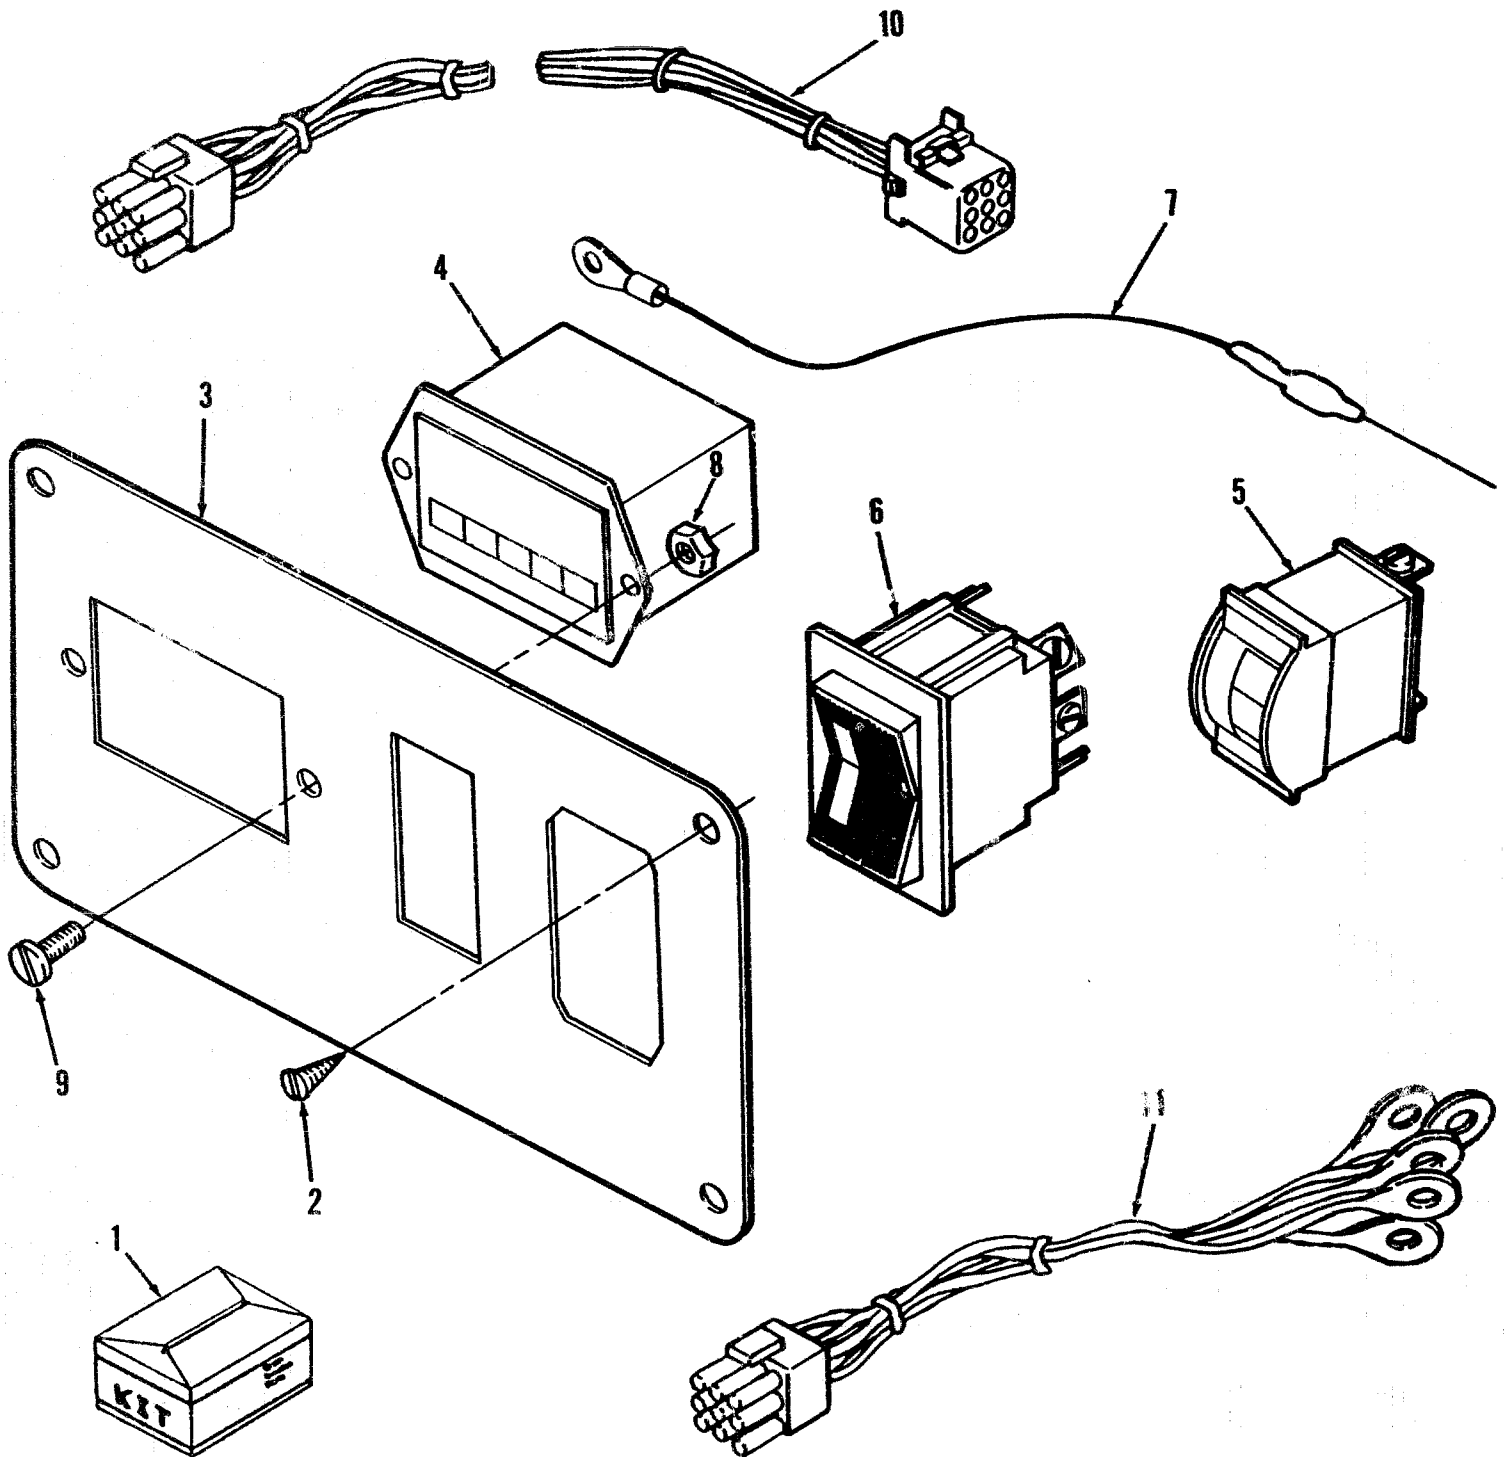 


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300-3467	1	Kit, Panel-Control - Remote (Includes Parts Marked *)
2	815-0380	4	*Screw, Wood - Oval Head, Cross Recessed (#5 x 1/2")
3	319-0492	1	*Panel, Control (Does Not Include Front & Back Decals)
	98-5944	1	Decal, Panel - Rear
	98-5946	1	Decal, Panel - Front
4	302-0885	1	*Meter, Totalizing - Time
5	302-0888	1	*Meter, Condition - Battery

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	308-0827	1	*Switch, Rocker
7	359-0034	1	*Diode and Lead
8	870-0183	2	*Nut, Hex (#6-32)
9	815-0385	2	*Screw, Machine - Round Head (6-32 x 1/2")
10			Harness, Wiring
	338-2237	1	Fifteen Feet
	338-2238	1	Twenty-Five Feet
	338-2354	1	Forty-Five Feet
11	338-2362-01	1	Harness, Wiring - Remote Control Panel

\* - Parts Included in 300-3467 Remote Panel Kit.

# Remote Control Meter Panel Kit

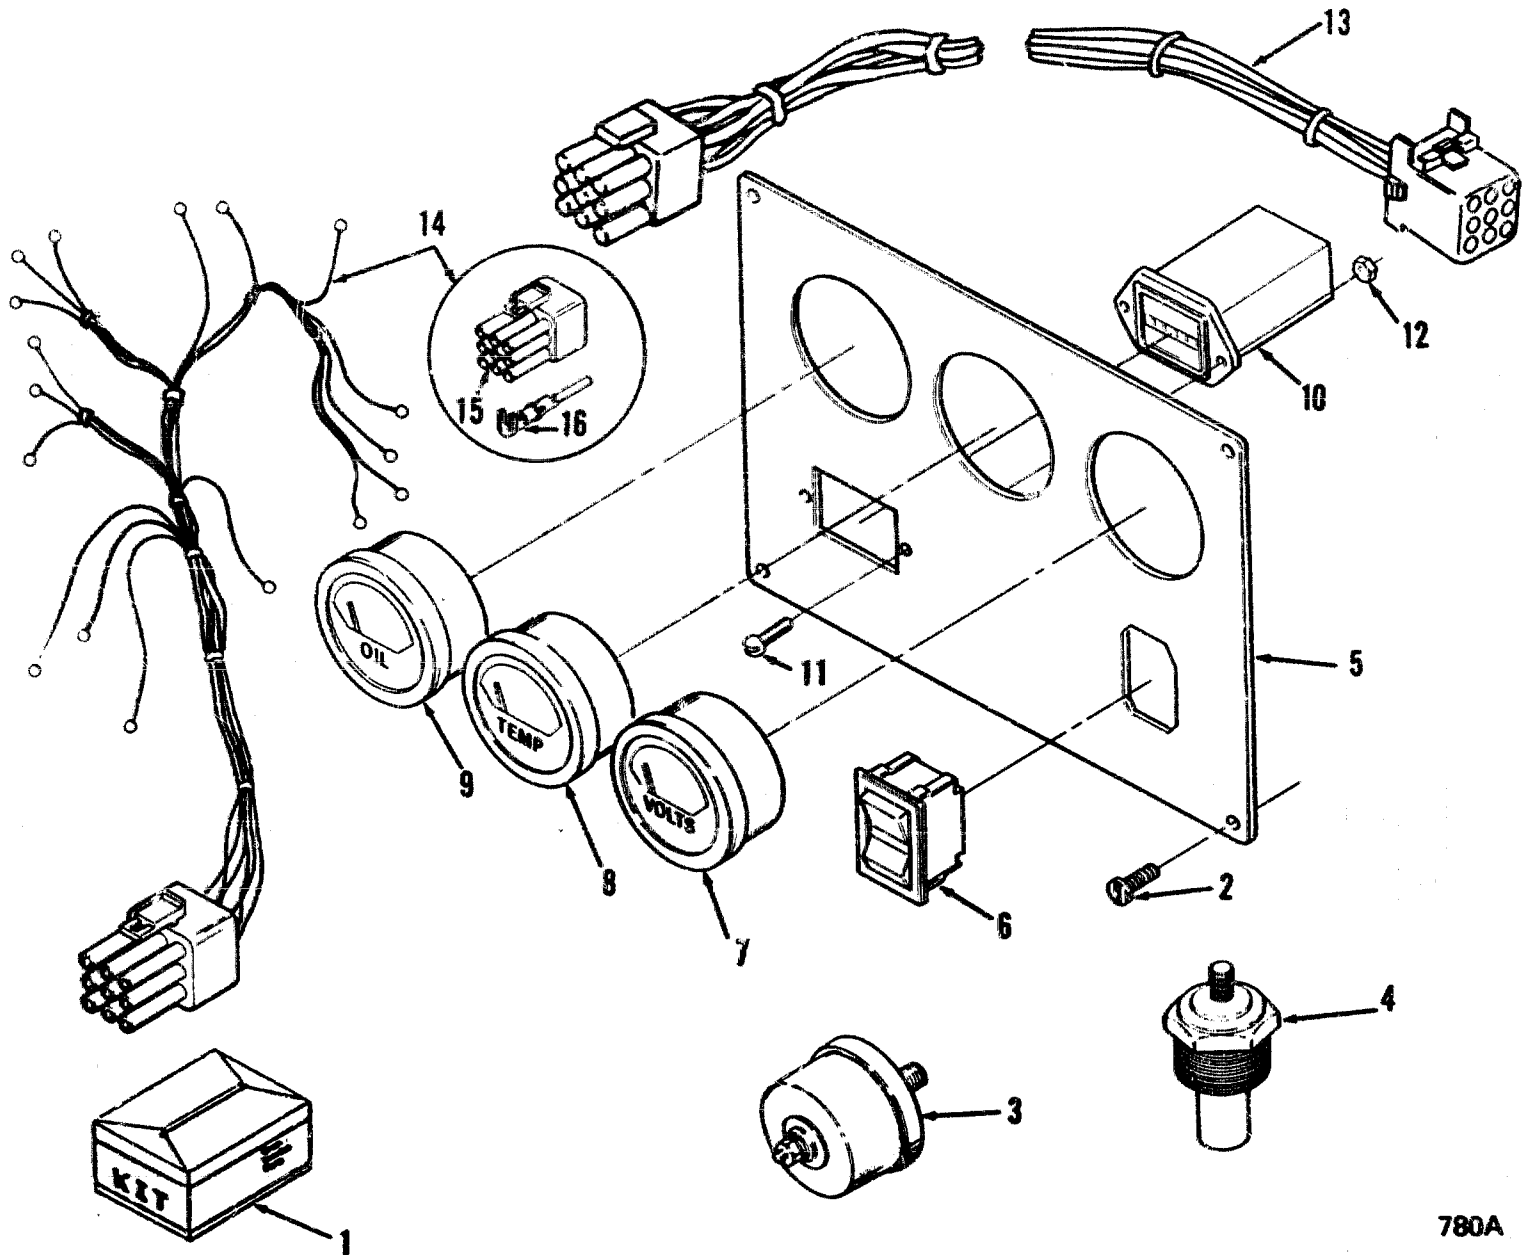 


780A

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300-3268		Kit, Meter Panel - Remote Control (Includes Parts Marked *)	9	193-0352	1	†Gauge, Oil Pressure (Includes Mounting Hardware) (M12)
	300-3248-01	1	* Panel, Remote (Includes Parts Marked †)	10	302-0885	1	†Meter, Time Totalizing (M11)
2	808-0023	4	*Screw, Sheet Metal - Round Head (#8 x 1/2")	11	815-0385	2	†Screw, Machine - Round Head (#6-32 x 1/2")
3	193-0244	1	*Sender, Oil Pressure (E1)	12	870-0183	2	†Nut, Hex - With ET (#6-32)
4	193-0388	1	*Sender, Water Temperature (E2)	13	338-2237	1	Harness, Wiring Fifteen Feet
5	319-0141	1	†Panel (Without Decals)		338-2238	1	Twenty-Five Feet
	98-5802	1	Decal - Front		338-2354	1	Forty-Five Feet
	98-5761	1	Decal - Rear	14	338-2222-01	1	Harness, Wiring - Control Panel (Includes Housing and Pins)
6	308-0827	1	†Switch, Rocker (S11)	15	323-1291	1	Housing, Connector (P4)
7	302-1541	1	†Meter, Voltage	16	323-1109	7	Pin, Contact
8	193-0351	1	†Gauge, Coolant Temperature (Includes Mounting Hardware) (M13)				

\* - Parts Included in 300-3268 Remote Meter Panel Kit.  
† - Parts Included in 300-3248-01 Remote Panel.

# Housing Frame

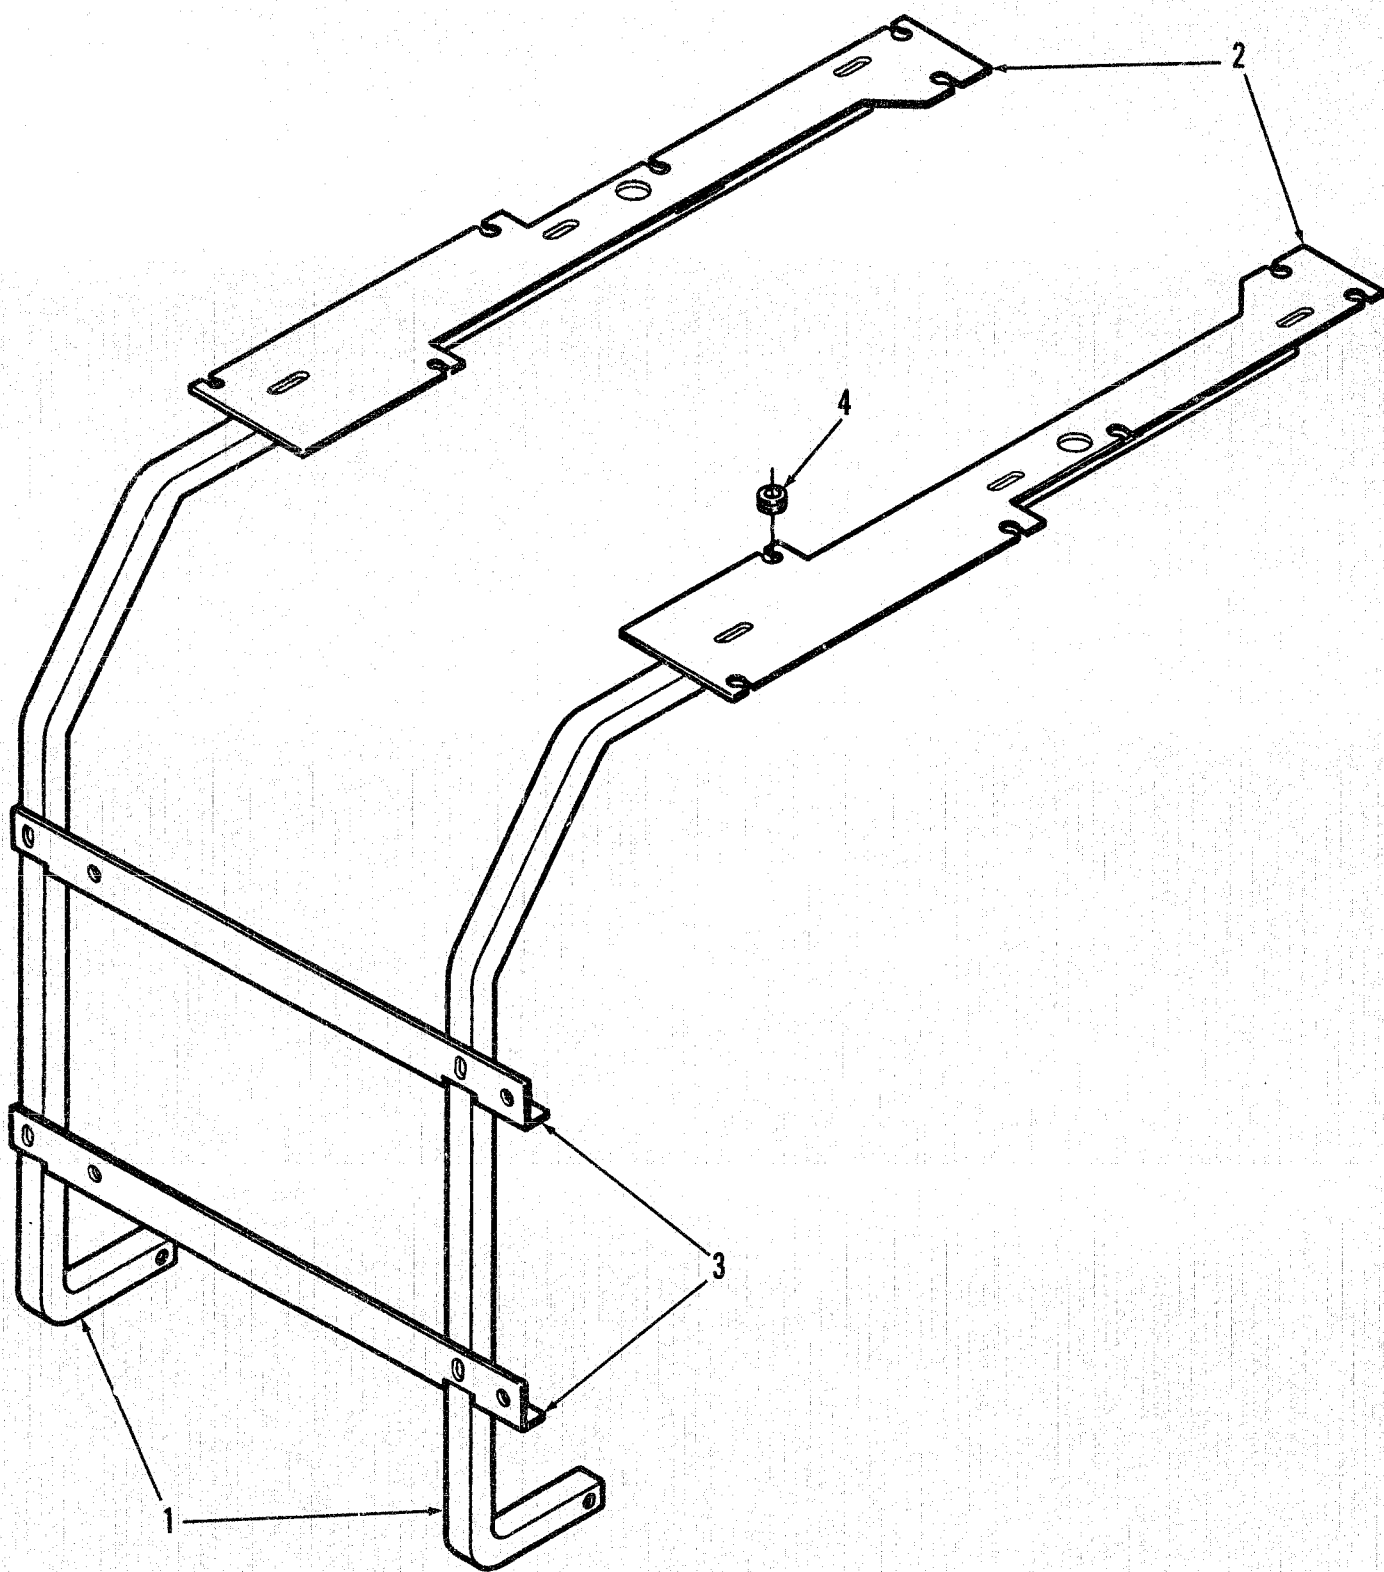 

## Housing Frame

 
REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	405-4317	1	Housing, Frame Assembly (Includes Parts Marked *)
1	405-4228	NFS	*Frame, Support - Housing

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
2	405-4224	NFS	*Bracket, Frame - Housing
3	405-4225	NFS	*Bracket, Front - Housing
4	508-0310	12	*Grommet

\* - Parts Included in 405-4317 Housing Frame Assembly.



# Housing

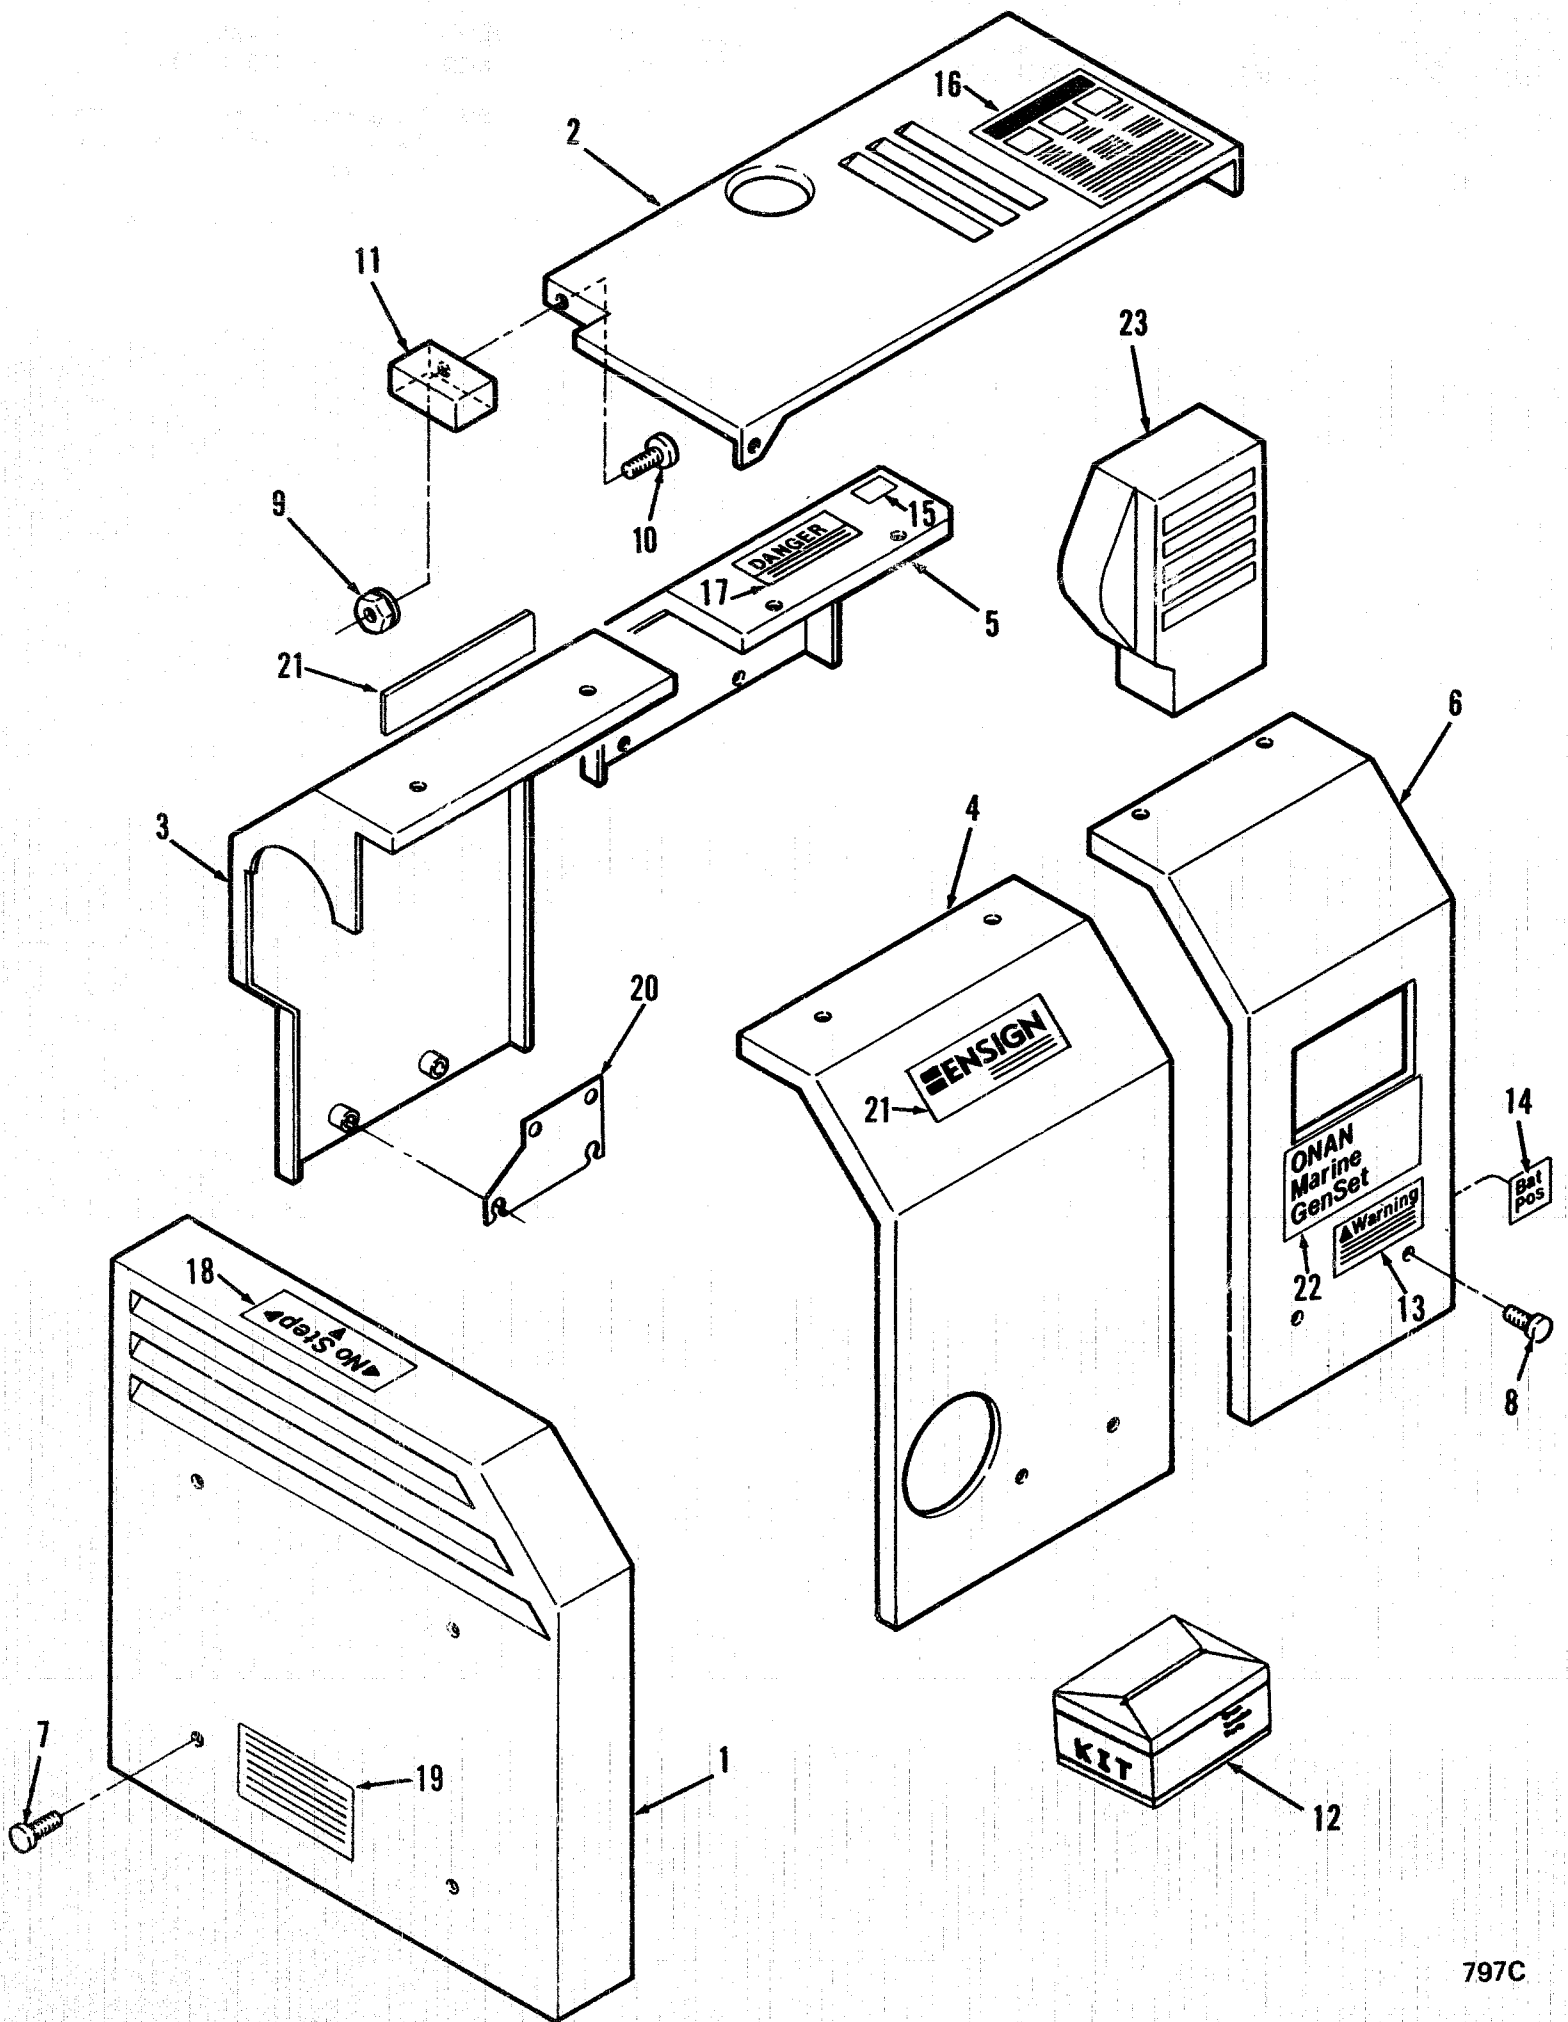

# Housing

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405-4138	1	Housing, Guard - Belt	16	98-6156	1	Label, Warning
2	405-4141	1	Housing, Engine (Top)	17	98-5347	1	Label, Danger
3	405-4140	1	Housing, Engine (Left Hand)	18	98-5338	1	Label, No Step
4	405-4139	1	Housing, Engine (Right Hand)	19	98-4508	1	Label, Certification
5	319-0567	1	Cover, Control - AC	20	405-4226	2	Bracket, Side Panel - Single Phase
6	319-0566	1	Cover, Control - DC				
7	815-0765	4	Screw, HD Truss (1/4-20 x 1/2")	21			Silkscreen, Identification Model
8	815-0767	7	Screw, HD Truss (10-32 x 1/2")		98-6150-01	2	For Model 4.5 MCE - Voltage Code A
9	870-0131	2	Nut, Hex - External Tooth		98-6150-02	2	For Model 6.5 MCE - Voltage Code A
10	813-0098	2	Screw, Machine - Round Head (10-32 x 3/8")		98-6150-02	2	For Model 6.5 MCE - Voltage Code B
11	405-4223	1	Cover, Siphon	22	98-6155	1	Silkscreen
12			Kit, Accessory	23	140-2489	1	Resonator
	542-0550	1	Recovery Tank				
	542-0551	1	Less Recovery Tank				
13	98-2899	1	Label, Warning				
14	98-4827	1	Silkscreen, Positive				
15			Silkscreen, Breaker				
	98-6196-02	1	For Model 4.5 MCE - Voltage Code A				
	98-6196-03	1	For Model 6.5 MCE - Voltage Code A				
	98-6196-01	1	For Model 6.5 MCE - Voltage Code B				

# Labels, Paint, Thread Sealant and Gasket Kits

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
			Silkscreen, Identification - Model	98-6156	1	Label, Warning	
98-6150-01	2		For Model 4.5 MCE - Voltage Code A	98-5347	1	Label, Danger	
98-6150-02	2		For Model 6.5 MCE - Voltage Code A	98-5338	1	Label, No Step	
98-6150-02	2		For Model 6.5 MCE - Voltage Code B	98-4508	1	Label, Certification	
98-6435-01	2		For Model 6.5 MCE - Voltage Code A, B	518-0309	.01 oz	Sealant, Thread	
98-6435-02	2		For Model 4.5 MCE - Voltage Code A, B	518-0347	.01 oz	Sealant, Thread	
98-6435-03	2		For Model 5.0 MCE - Voltage Code A	525-0082	1	Varnish, Insulating, 1 Gallon	
			Silkscreen (Logo)	168-0195	1	Kit, Gasket - Engine (Includes Parts Marked *)	
98-6436-01	1		For Model 6.5 MCE - Voltage Code A, B	101-0040	1	*Gasket - Rear Bearing Plate	
98-6436-02	1		For Model 4.5 MCE - Voltage Code A, B	101-0041	1	*Gasket - Rear Bearing Plate	
98-6436-03	1		For Model 5.0 MCE - Voltage Code A	102-1369	1	*Gasket - Oil Base	
98-6155	1		Silkscreen	103-0810	1	*Gasket - Gearcase	
98-2899	1		Label, Warning	110-3611	2	*Gasket - Cylinder Head	
98-4827	1		Silkscreen, Positive	110-3136	2	*Gasket - Valve Guide	
			Silkscreen, Breaker	110-3604	2	*Seal - Valve Stem 11/32"	
98-6196-06	1		For Model 4.5 MCE - Voltage Code A - 40 Ampere	110-3606	2	*Gasket - Valve Box	
98-6196-07	1		For Model 6.5 MCE - Voltage Code A - 60 Ampere	120-0161	1	*Gasket - Kit - Oil Pump	
98-6196-05	1		For Model 6.5 MCE - Voltage Code B - 30 Ampere	122-0774	1	*Gasket - Oil Filter Adapter	
98-6196-08	1		For Model 4.5 MCE - Voltage Code B - 20 Ampere	123-1470	1	*Gasket - Oil Fill Cap	
98-6196-09	1		For Model 5.0 MCE - Voltage Code A - 25 Ampere	131-0161	1	*Gasket - Water Pump	
98-6197	1		Label, Neutral	140-2485	1	*Gasket - Carburetor Inlet	
98-2575	1		Label, Battery Negative	140-2492	1	*Gasket - Resonator	
98-5397	1		Label, Warning	141-0281	1	*Gasket - Carburetor Flange	
				145-0601	1	*Gasket - Flame Arrestor	
				149-0003	2	*Gasket - Fuel Pump	
				154-2752	2	*Gasket - Intake	
				154-2766	2	*Gasket - Exhaust Manifold	
				155-2413	1	*Gasket - Exhaust	
				309-0186	2	*Gasket - Thermostat Housing	
				509-0008	1	*Seal - Oil (Governor Shaft)	
				509-0040	1	*Seal - Oil (Gearcase)	
				509-0041	1	*Seal - Oil (Bearing Plate)	
				509-0269	1	*Seal - Oil Fill Tube	
				* - Parts Included in 168-0195 Gasket Kit.			

\* - Parts Included in 168-0195 Gasket Kit.

# Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
98-2575	37	101-0450	5	110-3622	5	130-3512	35
98-2575	52	101-0450-02	5	110-3627	5	130-3513	29
98-2899	51	101-0450-10	5	112-0003	8	130-3516	31
98-2899	52	101-0450-20	5	112-0069	8	130-3517	29
98-4508	51	101-0450-30	5	112-0179	8	130-3603	29
98-4508	52	102-0455	13	112-0179-05	8	130-3721	27
98-4827	51	102-1369	13	112-0179-10	8	131-0161	52
98-4827	52	102-1369	52	112-0179-20	8	132-0284	31
98-5338	51	102-1374	13	112-0179-30	8	132-0284	32
98-5338	52	103-0772	11	112-0179-40	8	132-0295	32
98-5347	51	103-0810	11	113-0238	8	132-0296	32
98-5347	52	103-0810	52	113-0238-05	8	132-0297	32
98-5397	23	104-0032	7	113-0238-10	8	132-0298	32
98-5397	52	104-0043	7	113-0238-20	8	132-0299	32
98-5761	46	104-0170	7	113-0238-30	8	132-0300	32
98-5802	46	104-0575	5	113-0238-40	8	132-0301	32
98-5944	45	104-0776	5	114-0022	11	132-0302	32
98-5946	44	104-1728	7	114-0059	8	132-0303	32
98-5946	45	104-1729	7	114-0188	8	132-0304	32
98-5949	44	105-0140	6	114-0188-02	8	132-0305	32
98-6109	41	105-0332	6	114-0188-10	8	132-0306	32
98-6150-01	51	105-0541	6	114-0188-20	8	132-0307	32
98-6150-01	52	110-0539	5	114-0188-30	8	132-0308	32
98-6150-02	51	110-0639	5	114-0203	8	132-0309	32
98-6150-02	52	110-0666	5	115-0006	5	132-0310	32
98-6155	51	110-0872	5	115-0006-02	5	132-0311	32
98-6155	52	110-0872-02	5	115-0006-05	5	132-0312	32
98-6156	51	110-0872-05	5	120-0140	13	132-0326	13
98-6156	52	110-0872-10	5	120-0161	13	140-2308	24
98-6196-01	51	110-0872-25	5	120-0161	52	140-2424	23
98-6196-02	51	110-0880	5	120-0386	5	140-2485	23
98-6196-03	51	110-0893	5	120-0398	13	140-2485	52
98-6196-05	52	110-0902	5	120-0413	13	140-2489	51
98-6196-06	52	110-0904	5	120-0491	13	140-2490	23
98-6196-07	52	110-1000	5	122-0320	14	140-2491	23
98-6196-08	52	110-1000-02	5	122-0323	14	140-2492	23
98-6196-09	52	110-1000-05	5	122-0360-53	14	140-2492	52
98-6197	39	110-1000-10	5	122-0774	14	141-0281	23
98-6197	52	110-1000-25	5	122-0774	52	141-0281	24
98-6435-01	52	110-1037	5	123-1470	52	141-0281	52
98-6435-02	52	110-1827	5	123-1647	13	141-0710	11
98-6435-03	52	110-3136	5	123-1784	5	145-0601	23
98-6436-01	52	110-3136	52	123-1856	13	145-0601	52
98-6436-02	52	110-3604	5	123-1857	13	145-0602	23
98-6436-03	52	110-3604	52	123-1858	13	145-0605	23
101-0040	52	110-3606	5	123-1868	23	146-0449	24
101-0041	52	110-3606	52	130-1341	29	146-0450	24
101-0115	5	110-3611	5	130-2333	27	146-0451	24
101-0367	5	110-3611	52	130-3506	29	146-0452	24
101-0390	5	110-3621	5	130-3507	29	146-0453	24

# Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
146-0455	23	155-2556	17	300-3468	44	321-0305	41
146-0455	24	166-0761	17	302-0885	41	323-1199	46
146-0456	23	166-0767-01	17	302-0885	45	323-1291	46
146-0456	24	166-0770	17	302-0885	46	332-1445	41
146-0457	24	166-0771	17	302-0888	45	332-1815	43
149-0003	20	166-0785-01	11	302-1641	46	332-2370	39
149-0003	52	166-0786	11	305-0696	39	332-2982	37
149-0136	20	166-0801	17	305-0703	39	337-2435	37
149-2159	20	166-0822	37	305-0784	19	338-2102	44
149-2159	43	167-0188	11	305-0832	19	338-2222-01	46
149-2256	23	167-0263-01	17	305-0832	43	338-2237	44
149-2257	43	167-1602	17	307-2344	18	338-2237	45
149-2268	23	167-1615-01	17	307-2344	43	338-2237	46
149-2270	43	168-0195	5	308-0827	44	338-2238	44
149-2279	23	168-0195	52	308-0827	45	338-2238	45
150-0075	6	191-1630	15	308-0827	46	338-2238	46
150-0078	6	191-1630	37	308-0852	41	338-2354	44
150-0939	11	191-1776	15	309-0104	41	338-2354	45
150-1187	11	191-1781	15	309-0113	13	338-2354	46
150-1358	11	191-1784	15	309-0130	5	338-2362-01	44
150-1519	6	191-1785	15	309-0185	5	338-2362-01	45
150-1520	6	191-1786	15	309-0186	5	338-2464	41
150-1695	6	191-1817	15	309-0186	52	338-2507	43
150-1998	11	191-1818	15	309-0289	5	357-0067	43
150-2321	27	191-1819	15	309-0594	41	359-0034	45
150-2324	11	191-1820	15	309-0597	27	402-0549	9
150-2325	11	191-1821	15	309-0601	5	402-0550	9
150-2475	11	191-1822	15	312-0051	17	403-2890	9
150-2500	11	193-0244	46	315-0718-01	39	403-2918	5
153-0554	23	193-0351	46	319-0141	46	405-4138	51
153-0556	23	193-0352	46	319-0491	44	405-4139	51
153-0563	23	193-0388	46	319-0492	45	405-4140	51
153-0567	23	201-3249	37	319-0566	51	405-4141	51
153-0571	23	212-1274	43	319-0567	51	405-4223	51
153-0577	23	212-1276-03	43	319-0666	43	405-4224	49
153-0578	23	212-1285	43	319-0673	39	405-4225	49
153-0579	23	212-1286	43	319-0705	19	405-4226	51
153-0613	23	214-0103	43	319-0725	41	405-4228	49
153-0614	23	220-3977-01	43	319-0727	41	405-4317	49
153-0627	23	220-4257-01	43	319-0834	39	501-0005	14
153-0629	23	220-4257-02	43	319-0850	39	502-0002	41
154-2752	23	226-2426	43	320-1141	41	502-0019	23
154-2752	52	226-4013	43	320-1666-01	39	502-0028	5
154-2766	27	226-4014-02	19	320-1666-02	39	502-0028	41
154-2766	52	231-0320	37	320-1666-03	39	502-0054	20
154-2767	27	232-3156	43	320-1667	37	502-0058	41
154-2768	27	300-2604	41	320-1672-01	39	502-0075	35
154-2777	23	300-3248-01	46	320-1672-02	39	502-0079	41
155-2413	27	300-3268	46	320-1672-03	39	502-0153	5
155-2413	52	300-3467	45	321-0146	41	502-0175	41

# Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
502-0425	29	509-0040	52	542-0551	51	815-0549	39
502-0871	23	509-0041	5	800-0004	20	815-0592	23
502-0942	5	509-0041	52	800-0004	31	815-0598	9
502-0942	27	509-0142	13	800-0007	5	815-0610	37
502-0942	31	509-0196	37	800-0007	13	815-0636	31
502-0942	35	509-0269	13	800-0012	5	815-0646	43
502-0943	27	509-0269	52	800-0028	5	815-0765	51
502-1108	23	510-0013	11	800-0028	14	815-0767	51
502-1118	20	510-0014	11	800-0034	11	820-1077	11
502-1134	35	510-0015	6	800-0051	37	821-0004	41
503-0131	23	511-0154-03	31	800-0052	37	821-0005	17
503-0170	5	512-0176	31	800-0052	41	821-0005	27
503-0761	5	515-0001	6	800-0509	5	821-0005	37
503-0976	29	515-0001	7	800-0512	5	821-0008	39
503-0976	35	515-0284	7	801-0048	13	821-0010	39
503-0977	5	516-0072	5	802-0032	13	821-0012	19
503-0977	13	516-0130	11	802-0034	27	821-0015	17
503-0977	27	516-0141	5	802-0059	23	821-0018	9
503-0977	29	517-0011	5	802-0061	27	821-0018	23
503-0977	31	517-0048	5	802-0063	27	821-0031	9
503-0977	35	517-0276	27	802-1039	37	850-0025	27
503-1137	23	518-0006	11	804-0018	23	850-0040	5
503-1537-04	23	518-0014	7	805-0010	8	850-0040	13
503-1686	13	518-0309	52	808-0023	46	850-0040	27
503-1687-02	13	518-0347	52	810-0155	39	850-0040	31
503-1687-02	29	518-0387	23	810-0155	41	850-0040	37
503-1687-03	27	518-0450	23	813-0098	51	850-0045	5
503-1687-03	29	518-0466	23	813-0103	39	850-0045	11
503-1688	29	520-0654	23	815-0021	23	850-0045	18
503-1690-01	29	520-0992	23	815-0046	11	850-0045	37
503-1690-02	5	525-0082	52	815-0181	43	850-0050	13
503-1690-02	29	526-0008	37	815-0194	14	850-0050	37
503-1690-02	35	526-0016	39	815-0261	17	850-0050	41
503-1690-03	35	526-0017	7	815-0290	18	850-0055	7
503-1690-04	31	526-0018	13	815-0290	37	854-0010	11
503-1690-06	31	526-0018	31	815-0290	43	854-0014	39
503-1697	35	526-0026	41	815-0333	13	854-0014	41
503-1778	29	526-0052	39	815-0340	11	854-0023	41
503-1778	35	526-0052	41	815-0340	37	856-0003	23
504-0005	35	526-0063	5	815-0340	43	856-0003	39
504-0092	13	526-0063	20	815-0359	43	856-0006	9
504-0170	29	526-0065	14	815-0380	44	856-0006	19
508-0251	41	526-0066	13	815-0380	45	856-0006	37
508-0251	43	526-0071	23	815-0385	41	856-0006	39
508-0309	43	526-0115	23	815-0385	45	856-0006	41
508-0310	49	526-0122	23	815-0385	46	856-0010	37
508-1052	41	526-0122	27	815-0387	43	860-0008	27
509-0008	11	526-0240	9	815-0508	9	862-0001	37
509-0008	52	526-0324	9	815-0508	29	862-0003	37
509-0040	11	542-0550	51	815-0544	41	862-0003	41

## Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
868-0002	18						
868-0002	23						
868-0002	37						
870-0131	11						
870-0131	37						
870-0131	51						
870-0183	45						
870-0183	46						
870-0212	9						
870-0212	43						
870-0328	11						
870-0421	23						
870-1183	41						
871-0015	39						
871-0016	41						